

Controllers/Drivers

JXC□/LEC□ Series

<Single Axis Controllers>

Step Data Input Type p. 707

New

Step Motor
(Servo/24 VDC)
JXC51/61 Series



Servo Motor
(24 VDC)
LECA6 Series



Gateway Unit p. 715

LEC-G Series



Programless Type p. 719

Step Motor
(Servo/24 VDC)
LECP1 Series



Programless Type
(With Stroke Study) p. 725

Step Motor
(Servo/24 VDC)
LECP2 Series
Specialized for LEM series



Pulse Input Type p. 731

Step Motor
(Servo/24 VDC)
LECPA Series



EtherCAT®/EtherNet/IP™/PROFINET/DeviceNet™/IO-Link/CC-Link Direct Input Type p. 741

JXC□ Series

EtherCAT®

EtherNet/IP™

PROFINET®

DeviceNet™

IO-Link

CC-Link



<Multi-Axis Controllers>

EtherNet/IP™ Direct Input Type p. 747

For 3 axes JXC92 Series



Parallel I/O/EtherNet/IP™ Direct Input Type p. 749

For 4 axes JXC73 Series
JXC83 Series



JXC93 Series
EtherNet/IP™



- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- JXC□
- LEC□
- LECS□
- LECS□-T
- LECY□
- Motorless
- LAT3

Step Data Input Type JXC51/61/LECA6 Series p. 707

Simple setting allows for immediate use!

◎ **“Easy Mode” for simple setting**

For immediate use, select “Easy Mode.”

New

Step Motor
(Servo/24 VDC)
JXC51/61



Servo motor
(24 VDC)
LECA6



**<When a PC is used>
Controller setting software**

- Step data setting, test drive, jogging, and move for the constant rate can be set and operated on one screen.

| No. | Move M | Speed | Position | PushInF | PushInSp | In Pos |
|-----|----------|-------|----------|---------|----------|--------|
| 0 | Absolute | 100 | 5.00 | 0 | 0 | 1.00 |
| 1 | Absolute | 100 | 10.00 | 0 | 0 | 1.00 |
| 2 | Absolute | 100 | 20.00 | 0 | 0 | 1.00 |
| 3 | Absolute | 200 | 30.00 | 0 | 0 | 1.00 |
| 4 | Absolute | 200 | 40.00 | 0 | 0 | 1.00 |
| 5 | Absolute | 300 | 50.00 | 0 | 0 | 1.00 |
| 6 | Absolute | 300 | 60.00 | 0 | 0 | 1.00 |
| 7 | Absolute | 400 | 70.00 | 0 | 0 | 1.00 |
| 8 | Absolute | 400 | 80.00 | 0 | 0 | 1.00 |
| 9 | Absolute | 500 | 90.00 | 0 | 0 | 1.00 |

Move Speed: 20 (mm/sec) Move distance: 0.50

<When a TB (teaching box) is used>

- The simple screen without scrolling promotes ease of setting and operation.
- Choose an icon from the first screen to select a function.
- Set the step data and check the monitor on the second screen.



Example of setting the step data

1st screen: DATA, MONITOR, TEST, ALARM, JOG, SETTING

2nd screen: Step Axis 1
Step No. 0
Posn 123.45 mm
Speed 100 mm/s

After entering the values, they can be registered by pressing “SET.”

Example of checking the operation status

1st screen: DATA, MONITOR, TEST, ALARM, JOG, SETTING

2nd screen: Monitor Axis 1
Step No. 1
Posn 12.34 mm
Speed 10 mm/s

The operation status can be checked.

Teaching box screen

- Data can be set by inputting only the position and speed. (Other conditions are preset.)

| Step | Axis 1 |
|----------|----------|
| Step No. | 0 |
| Posn | 50.00 mm |
| Speed | 200 mm/s |



| Step | Axis 1 |
|----------|----------|
| Step No. | 1 |
| Posn | 80.00 mm |
| Speed | 100 mm/s |


⊙ “Normal Mode” for detailed setting

Select “Normal Mode” when detailed setting is required.

- Step data can be set in detail.
- Parameters can be set.
- Signals and terminal status can be monitored.
- JOG and constant rate movement, return to origin, test drive, and testing of forced output can be performed.

<When a PC is used> Controller setting software

- Step data setting, parameter setting, monitoring, teaching, etc., are displayed in different windows.

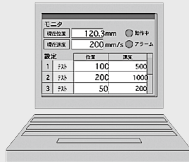

Step data setting window

| No. | Move M | Speed | Position | Accel | Decel | Pushing |
|-----|----------|-------|----------|-------------------|-------------------|---------|
| | | mm/s | mm | mm/s ² | mm/s ² | Z |
| 0 | Absolute | 100 | 5.00 | 2000 | 2000 | |
| 1 | Absolute | 100 | 10.00 | 2000 | 2000 | |
| 2 | Absolute | 100 | 20.00 | 2000 | 2000 | |
| 3 | Absolute | 200 | 20.00 | 2000 | 2000 | |
| 4 | Absolute | 200 | 40.00 | 2000 | 2000 | |
| 5 | Absolute | 300 | 50.00 | 2000 | 2000 | |
| 6 | Absolute | 300 | 60.00 | 2000 | 2000 | |
| 7 | Absolute | 400 | 70.00 | 2000 | 2000 | |
| 8 | Absolute | 400 | 80.00 | 2000 | 2000 | |
| 9 | Absolute | 500 | 90.00 | 2000 | 2000 | |
| 10 | Absolute | 500 | 100.00 | 2000 | 2000 | |

Parameter setting window

| Item | Value |
|------------------|--------------------|
| Controller ID | |
| IO pattern | |
| AC/DEC pattern | Trapezoid-motion |
| Smoothing rate | |
| Stroke(+) | 200 |
| Stroke(-) | -200 |
| Max speed | |
| Max AC/DEC | |
| Def. In position | |
| ORIG offset | |
| Max. force | |
| Para. protect | 1: Common/Step/Bit |
| Enable SW | |
| Unit name | |

Monitoring window

| Item | Monitor |
|-------------|---------|
| Type No. | LCP |
| Unit name | |
| Step No. | 2 |
| Position | 3.39 |
| Speed | 0 |
| Force | 30 |
| Target Posn | 4.00 |

Teaching window

Position: 0.00 mm


Speed: 5 [mm/sec]

<When a TB (teaching box) is used>

- Multiple step data can be stored in the teaching box and transferred to the controller.
- Continuous test drive by up to 5 step data

Teaching box screen

- Each function (step data setting, test drive, monitoring, etc.) can be selected from the main menu.

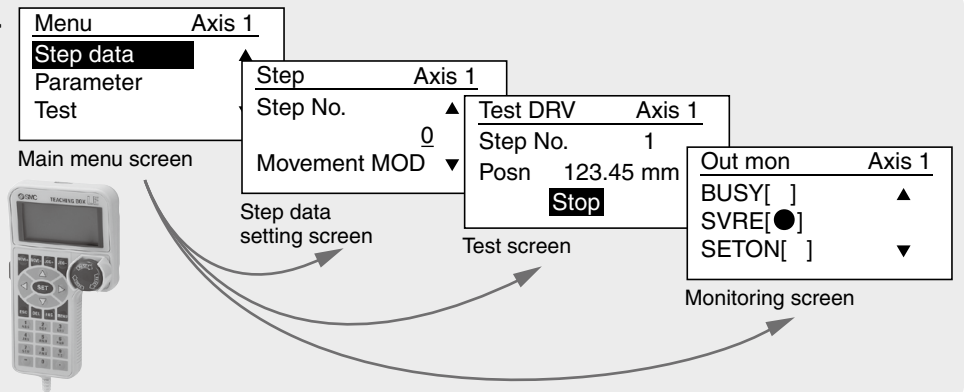


The actuator and controller are provided as a set. (They can be ordered separately as well.)

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

- ① Check the actuator label for the model number. This number should match that of the controller.
- ② Check that the Parallel I/O configuration matches (NPN or PNP).

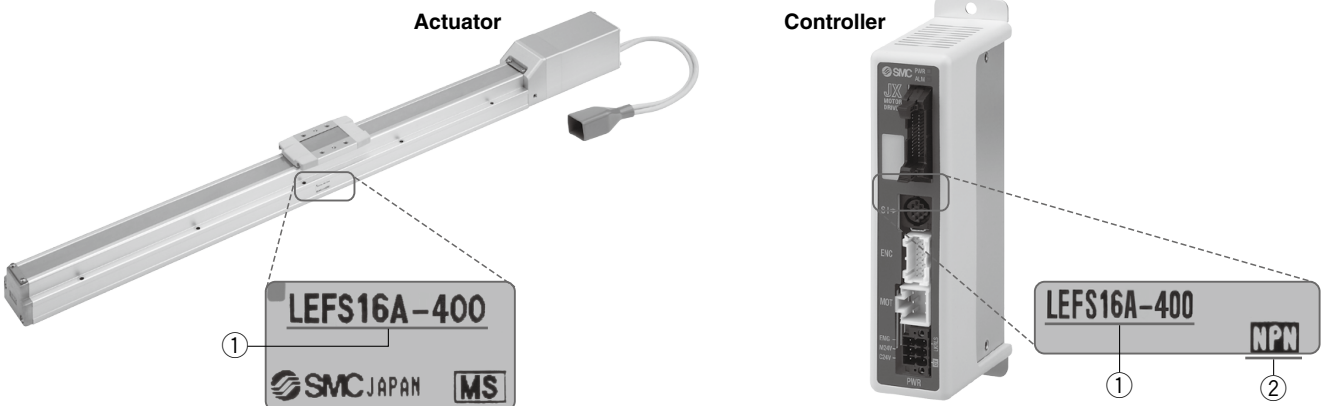

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3

Fieldbus Network

Fieldbus-compatible Gateway (GW) Unit

LEC-G Series p. 715



- Conversion unit for Fieldbus network and LEC serial communication


Applicable Fieldbus protocols: **CC-Link V2** **DeviceNet** **PROFIBUS** **EtherNet/IP**

- Two methods of operation

Step data input: Operate using preset step data in the controller.

Numerical data input: The actuator operates using values such as position and speed from the PLC.

- Values such as position and speed can be checked on the PLC.

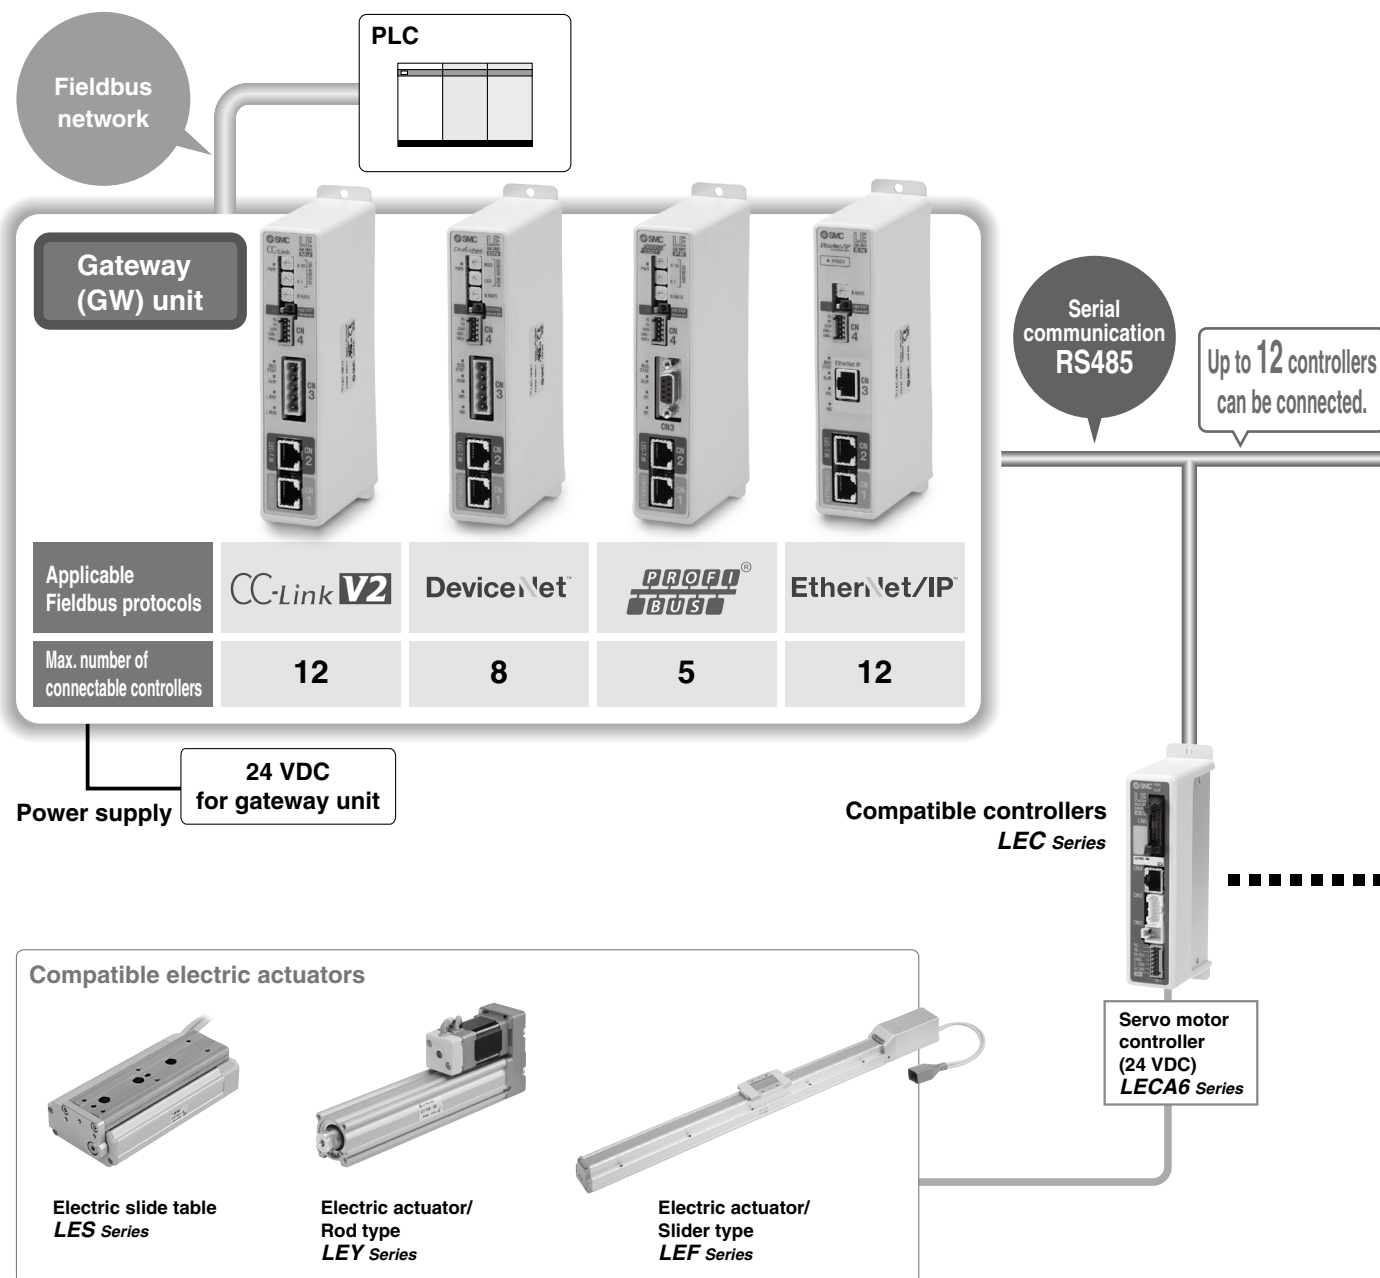



Step motor (Servo/24 VDC)
LECP1

Programless Type **LECP1** Series p. 719

No programming required!




Allows for the setting up of electric actuator operation without using a PC or teaching box

- 1** Setting the position number
- 2** Setting the stop position
- 3** Registration


Set a registered number for the stop position.
Max. 14 points

Move the actuator to the desired stop position using the FORWARD and REVERSE buttons.

Register the stop position using the SET button.

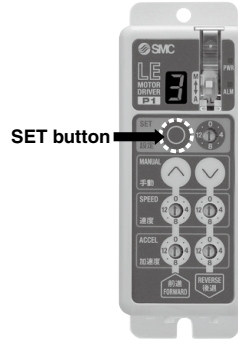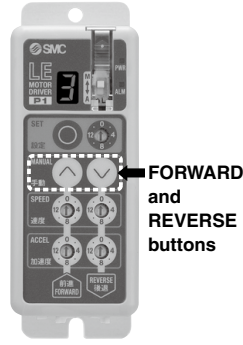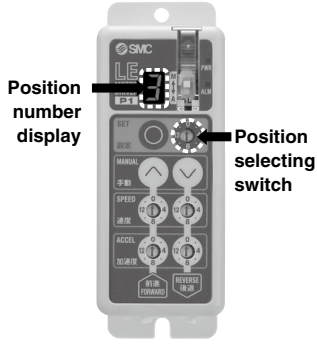

Speed/Acceleration 16-level adjustment

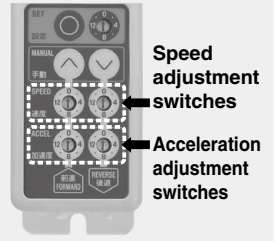

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC□
- JXC□
- LECS□
- LECS□-T
- LECY□
- Motorless
- LAT3



Step motor
(Servo/24 VDC)
LECP2

Programless Type (With Stroke Study) LECP2 Series p. 725

Stroke end operation similar to an air cylinder is possible.


(using the 1 stroke study and 2 reduced wiring below)

1 Stroke study (Simple registration of both stroke end positions)

After the stroke adjustment unit has travelled, both stroke ends are automatically registered by the stroke study function!


1 Setting position number

Set the position selecting switch to 15(F).

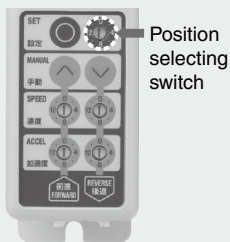


2 The stroke study begins

Press the SET button for 3 seconds or longer.

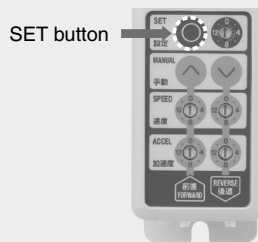


Automatic registration of both end positions

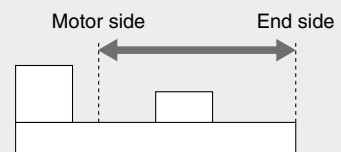


2 Wiring (Reduced wiring)

2-wire input signals*1

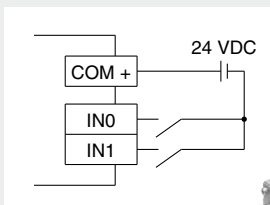


*1 Both stroke end positions and an intermediate position can be set using this wiring.

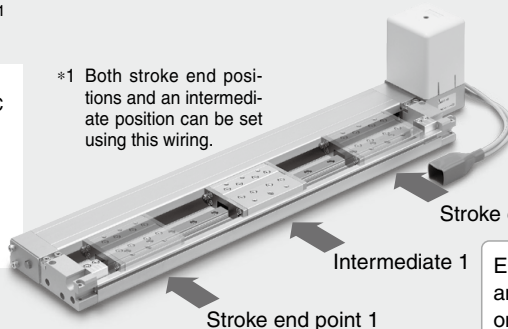





End point operation like an air cylinder by turning on input IN0 or IN1

Speed/Acceleration 16-level adjustment

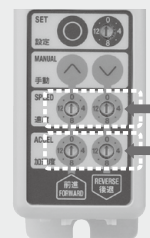


Speed adjustment switches
Acceleration adjustment switches

Compatible Actuators

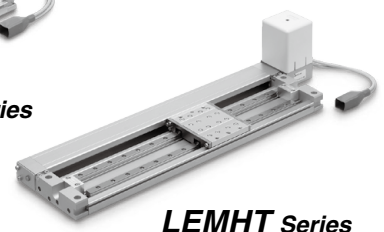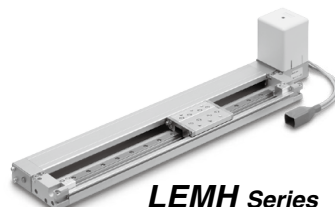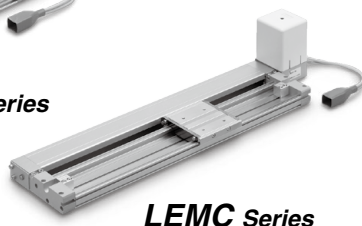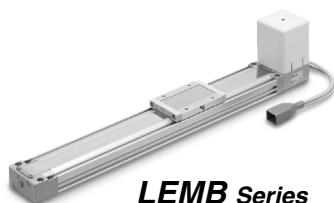

Pulse Input Type *LECPA Series* p. 731

- This driver uses pulse signals to allow positioning at any position. The actuator can be controlled from the customers' positioning unit.

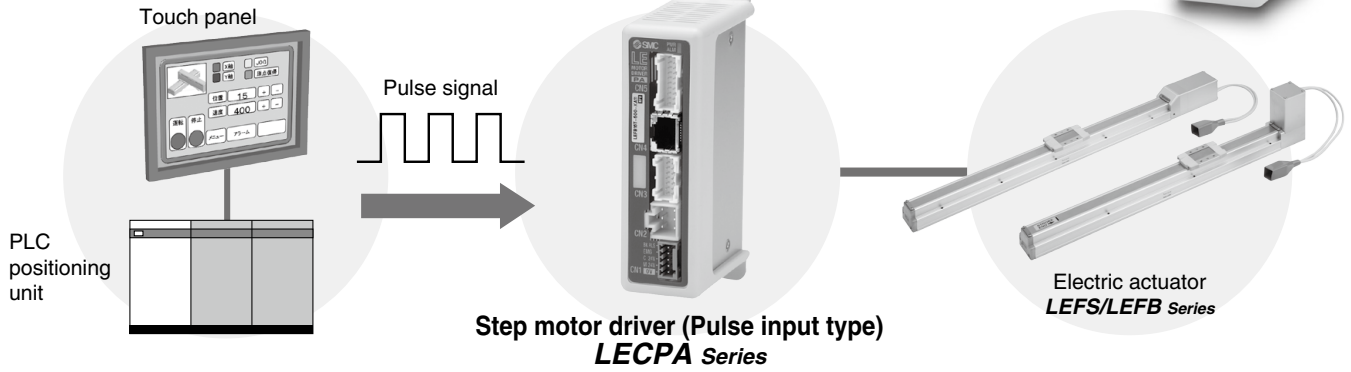

- **Return-to-origin command signal**
Enables automatic return-to-origin action
- **With force limit function (Pushing force/Gripping force operation available)**
Pushing force/Positioning operation is possible by switching signals.

| |
|-----------|
| LEFS |
| LEFB |
| LEJS |
| LEJB |
| LEL |
| LEM |
| LEY |
| LEYG |
| LES |
| LESH |
| LEPY |
| LEPS |
| LER |
| LEH |
| LEY-X5 |
| 11-LEFS |
| 11-LEJS |
| 25A- |
| LEC□ |
| JXC□ |
| LECS□ |
| LECS□-T |
| LECY□ |
| Motorless |
| LAT3 |

Function

| Item | Step data input type JXC51/61/LECA6 | Programless type LECP1 | Programless type (With stroke study) LECP2 | Pulse input type LECPA |
|---------------------------------|---|---|--|--|
| Step data and parameter setting | <ul style="list-style-type: none"> Input from controller setting software (PC) Input from teaching box | <ul style="list-style-type: none"> Selected using controller operation buttons | <ul style="list-style-type: none"> Selected using controller operation buttons | <ul style="list-style-type: none"> Input from controller setting software (PC) Input from teaching box |
| Step data "position" setting | <ul style="list-style-type: none"> Numerical value input from controller setting software (PC) or teaching box Input numerical value Direct teaching JOG teaching | <ul style="list-style-type: none"> Direct teaching JOG teaching | <ul style="list-style-type: none"> Stroke end: Automatic measurement Intermediate position: Direct teaching JOG teaching | <ul style="list-style-type: none"> No "Position" setting required Position and speed set by pulse signal |
| Number of step data | 64 points | 14 points | 2 stroke end points + 12 intermediate points (14 points in total) | — |
| Operation command (I/O signal) | Step No. [IN*] input ⇒ [DRIVE] input | Step No. [IN*] input only | Step No. [IN*] input only | Pulse signal |
| Completion signal | [INP] output | [OUT*] output | [OUT*] output | [INP] output |

Setting Items

TB: Teaching box PC: Controller setting software

| Item | Contents | Easy Mode | | Normal Mode | Step data input type JXC51/61/LECA6 | Pulse input type LECPA | Programless type LECP1*1 | Programless type (With stroke study) LECP2 | |
|-----------------------------|---------------------------|-----------|----|--|--|--|---|---|---------------------|
| | | TB | PC | TB/PC | | | | | |
| Step data setting (Excerpt) | Movement MOD | △ | ● | ● | Set at ABS/INC | No setting required | Fixed value (ABS) | Fixed value (ABS) | |
| | Speed | ● | ● | ● | Set in units of 1 mm/s | | Select from 16 levels | Select from 16 levels | |
| | Position | ● | ● | ● | Set in units of 0.01 mm | | Direct teaching JOG teaching | Stroke end: Automatic measurement Intermediate position: Direct teaching JOG teaching | |
| | Acceleration/Deceleration | ● | ● | ● | Set in units of 1 mm/s ² | | Select from 16 levels | Select from 16 levels | |
| | Pushing force | ● | ● | ● | Set in units of 1% | | Set in units of 1% | Select from 3 levels (weak, medium, and strong) | No setting required |
| | Trigger LV | △ | ● | ● | Set in units of 1% | | Set in units of 1% | No setting required (same value as pushing force) | |
| | Pushing speed | △ | ● | ● | Set in units of 1 mm/s | | Set in units of 1 mm/s | No setting required | |
| | Moving force | △ | ● | ● | Set to 100% | | Set to (Different values for each actuator) % | | |
| Area output | △ | ● | ● | Set in units of 0.01 mm | Set in units of 0.01 mm | | | | |
| In position | △ | ● | ● | Set to 0.5 mm or more (Units: 0.01 mm) | Set to (Different values for each actuator) or more (Units: 0.01 mm) | No setting required | No setting required | | |
| Parameter setting (Excerpt) | Stroke (+) | × | × | ● | Set in units of 0.01 mm | Set in units of 0.01 mm | No setting required | No setting required | |
| | Stroke (-) | × | × | ● | Set in units of 0.01 mm | Set in units of 0.01 mm | | | |
| | ORIG direction | × | × | ● | Compatible | Compatible | | | Compatible |
| | ORIG speed | × | × | ● | Set in units of 1 mm/s | Set in units of 1 mm/s | | | No setting required |
| | ORIG ACC | × | × | ● | Set in units of 1 mm/s ² | Set in units of 1 mm/s ² | | | |
| Test | JOG | ● | ● | ● | Continuous operation at the set speed can be tested while the switch is being pressed. | Continuous operation at the set speed can be tested while the switch is being pressed. | Hold down the MANUAL button (⊙) for uniform sending (speed is a specified value). | Hold down the MANUAL button (⊙) for uniform sending (speed is a specified value). | |
| | MOVE | × | ● | ● | Operation at the set distance and speed from the current position can be tested. | Operation at the set distance and speed from the current position can be tested. | Press the MANUAL button (⊙) once for sizing operation (speed and sizing amount are specified values). | Press the MANUAL button (⊙) once for sizing operation (speed and sizing amount are specified values). | |
| | Return to ORIG | ● | ● | ● | Compatible | Compatible | Compatible | Performed by the stroke endpoint operation when power is turned ON | |
| | Test drive | ● | ● | ● (Continuous operation) | Compatible | Not compatible | Compatible | Compatible | |
| | Forced output | × | × | ● | Compatible | Compatible | | | |
| Monitor | DRV mon | ● | ● | ● | Compatible | Compatible | Not compatible | Not compatible | |
| | In/Out mon | × | × | ● | Compatible | Compatible | | | |
| ALM | Status | ● | ● | ● | Compatible | Compatible | Compatible (display alarm group) | Compatible (display alarm group) | |
| | ALM Log record | × | × | ● | Compatible | Compatible | | | |
| File | Save/Load | × | × | ● | Compatible | Compatible | Not compatible | Not compatible | |
| Other | Language | ● | ● | ● | Compatible | Compatible | | | |

△: Can be set from TB Ver. 2.** (The version information is displayed on the initial screen.)

*1 The LECP1 programless type cannot be used with the teaching box and controller setting kit.

Fieldbus Network

EtherCAT®/EtherNet/IP™/PROFINET®/DeviceNet™/IO-Link/CC-Link Direct Input Type Step Motor Controller/JXC □ Series p. 741



◎ **Two types of operation command**


Step no. defined operation: Operate using the preset step data in the controller.
Numerical data defined operation: The actuator operates using values such as position and speed from the PLC.

◎ **Numerical monitoring available**

Numerical information, such as the current speed, current position, and alarm codes, can be monitored on the PLC.

◎ **Transition wiring of communication cables**

Two communication ports are provided.
 * For the DeviceNet™ type, transition wiring is possible using a branch connector.
 * 1 to 1 in the case of IO-Link

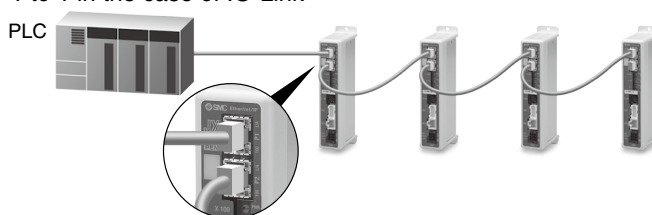

Application


Communication protocols

EtherCAT® EtherNet/IP™ PROFINET® DeviceNet™ IO-Link CC-Link




Both air and electric systems can be established under the same protocol.

Can be additionally installed in an existing network

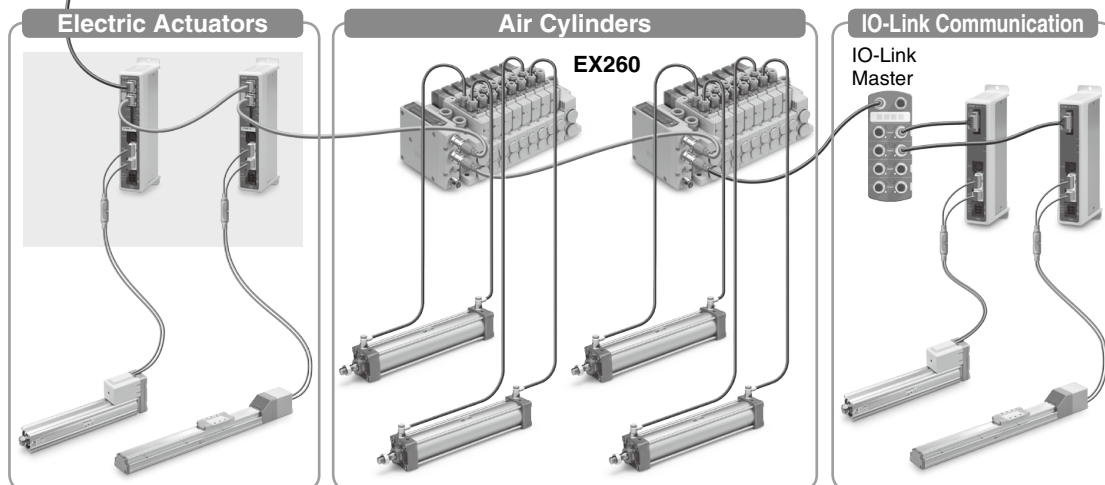


<Applicable Electric Actuators>

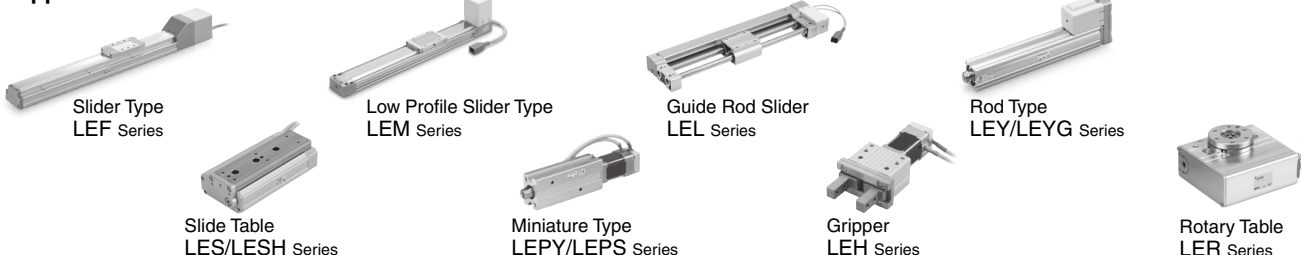

Multi-Axis Step Motor Controller

- Speed tuning control*¹
(3 Axes: JXC92 4 Axes: JXC73/83/93)
- Linear/circular interpolation

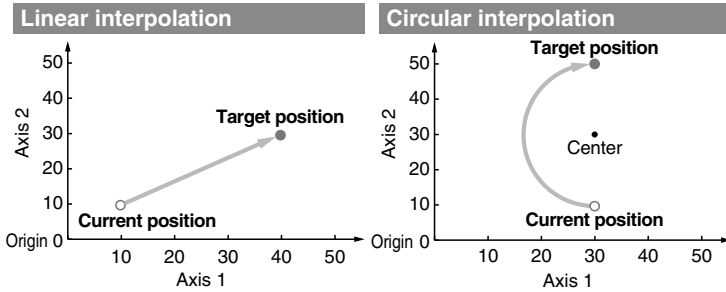


- Positioning/pushing operation
- Step data input
(Max. 2048 points)
- Space saving, reduced wiring
- Absolute/relative position coordinate instructions

*1 This controls the speed of the following axis when the speed of the primary axis drops due to the effects of an external force and when a speed difference with the following axis occurs. This control is not for synchronizing the position of the primary axis and following axis.


For 3 Axes **JXC92 Series** p. 747

- EtherNet/IP™ Type
- Width: Approx. 38% reduction

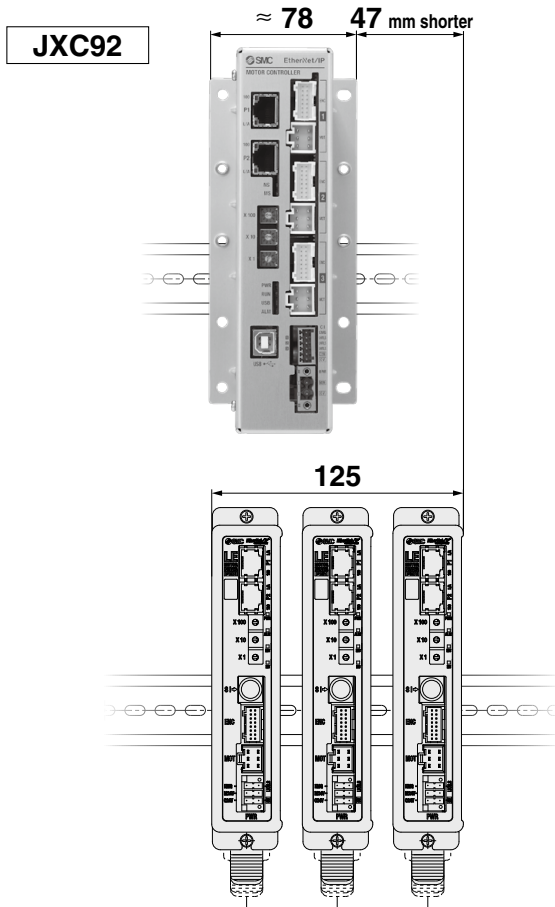

For 4 Axes **JXC73/83/93 Series** p. 749

- Parallel I/O/
EtherNet/IP™ Type
- Width: Approx. 18% reduction

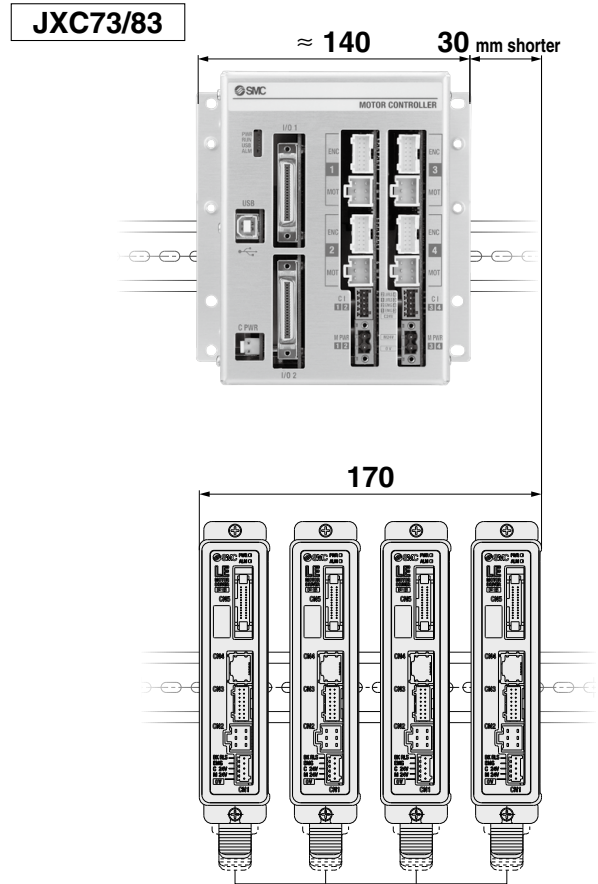

* For LE□, size 25 or larger



Step Data Input: Max. 2048 points

For 3 Axes 3-axis operation can be set collectively in one step.

| Step | Axis | Movement mode | Speed | Position | Acceleration | Deceleration | Pushing force | Trigger LV | Pushing speed | Moving force | Area 1 | Area 2 | In position | Comments |
|------|----------|---------------|-------|----------|-------------------|-------------------|---------------|------------|---------------|--------------|--------|--------|-------------|----------|
| | | | mm/s | mm | mm/s ² | mm/s ² | | | | | mm | mm | mm | |
| 0 | Axis 1 | ABS | 500 | 100.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 10.0 | 30.0 | 0.5 | |
| | Axis 2 | ABS | 500 | 100.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 10.0 | 30.0 | 0.5 | |
| | Axis 3 | ABS | 500 | 100.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 10.0 | 30.0 | 0.5 | |
| 1 | Axis 1 | INC | 500 | 200.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 2 | INC | 500 | 200.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 3 | INC | 500 | 200.00 | 3000 | 3000 | 0 | 85.0 | 50 | 100.0 | 0 | 0 | 0.5 | |
| 2046 | Axis 1 | SYN-I | 500 | 100.00 | 3000 | 3000 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 2 | SYN-I | 0 | 0.00 | 0 | 0 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 3 | SYN-I | 0 | 0.00 | 0 | 0 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| 2047 | Axis 1 | CIR-R | 500 | 0.00 | 3000 | 3000 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 2 | CIR-R | 0 | 50.00 | 0 | 0 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 3*1 | | 0 | 0.00 | 0 | 0 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |
| | Axis 4*1 | | 0 | 25.00 | 0 | 0 | 0 | 0 | 0 | 100.0 | 0 | 0 | 0.5 | |

*1 When circular interpolation (CIR-R, CIR-L, CIR-3) is selected in the movement mode, input the X and Y coordinates in the rotation center position or input the X and Y coordinates in the passing position.

| Movement mode | Pushing operation | Details |
|---------------|-------------------|---|
| Blank | × | Invalid data (Invalid process) |
| ABS | ○ | Moves to the absolute coordinate position based on the origin of the actuator |
| INC | ○ | Moves to the relative coordinate position based on the current position |
| LIN-A | × | Moves to the absolute coordinate position based on the origin of the actuator by linear interpolation |
| LIN-I | × | Moves to the relative coordinate position based on the current position by linear interpolation |
| CIR-R*2 | × | With Axis 1 assigned to the X-axis and Axis 2 to the Y-axis, it moves in the clockwise direction by circular interpolation. The target position and rotation center position are specified according to the relative coordinates from the current position. The position data is assigned as follows. Axis 1: Target position X Axis 2: Target position Y Axis 3*1: Rotation center position X Axis 4*1: Rotation center position Y |
| CIR-L*2 | × | With Axis 1 assigned to the X-axis and Axis 2 to the Y-axis, it moves in the counter-clockwise direction by circular interpolation. The target position and rotation center position are specified according to the relative coordinates from the current position. The position data is assigned as follows. Axis 1: Target position X Axis 2: Target position Y Axis 3*1: Rotation center position X Axis 4*1: Rotation center position Y |
| SYN-I | × | Moves to the relative coordinate position based on the current position by speed tuning control*3 |
| CIR-3*2 | × | With Axis 1 assigned to the X-axis and Axis 2 to the Y-axis, it moves based on the three specified points by circular interpolation. The target position and passing position are specified according to the relative coordinates from the current position. The position data is assigned as follows. Axis 1: Target position X Axis 2: Target position Y Axis 3*1: Passing position X Axis 4*1: Passing position Y |

*2 Performs a circular operation on a plane using Axis 1 and Axis 2

*3 This controls the speed of the following axis when the speed of the primary axis drops due to the effects of an external force and when a speed difference with the following axis occurs. This control is not for synchronizing the position of the primary axis and following axis.



For 4 Axes 4-axis operation can be set collectively in one step.

| Step | Axis | Movement mode | Speed | Position | Acceleration | Deceleration | Positioning/ Pushing | Area 1 | Area 2 | In position | Comments |
|------|--------|---------------|-------|----------|-------------------|-------------------|----------------------|--------|--------|-------------|----------|
| | | | mm/s | mm | mm/s ² | mm/s ² | | mm | mm | mm | |
| 0 | Axis 1 | ABS | 100 | 200.00 | 1000 | 1000 | 0 | 6.0 | 12.0 | 0.5 | |
| | Axis 2 | ABS | 50 | 100.00 | 1000 | 1000 | 0 | 6.0 | 12.0 | 0.5 | |
| | Axis 3 | ABS | 50 | 100.00 | 1000 | 1000 | 0 | 6.0 | 12.0 | 0.5 | |
| | Axis 4 | ABS | 50 | 100.00 | 1000 | 1000 | 0 | 6.0 | 12.0 | 0.5 | |
| 1 | Axis 1 | INC | 500 | 250.00 | 1000 | 1000 | 1 | 0 | 0 | 20.0 | |
| | Axis 2 | INC | 500 | 250.00 | 1000 | 1000 | 1 | 0 | 0 | 20.0 | |
| | Axis 3 | INC | 500 | 250.00 | 1000 | 1000 | 1 | 0 | 0 | 20.0 | |
| | Axis 4 | INC | 500 | 250.00 | 1000 | 1000 | 1 | 0 | 0 | 20.0 | |
| ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | |
| 2046 | Axis 4 | ABS | 200 | 700 | 500 | 500 | 0 | 0 | 0 | 0.5 | |
| 2047 | Axis 1 | ABS | 500 | 0.00 | 3000 | 3000 | 0 | 0 | 0 | 0.5 | |
| | Axis 2 | ABS | 500 | 0.00 | 3000 | 3000 | 0 | 0 | 0 | 0.5 | |
| | Axis 3 | ABS | 500 | 0.00 | 3000 | 3000 | 0 | 0 | 0 | 0.5 | |
| | Axis 4 | ABS | 500 | 0.00 | 3000 | 3000 | 0 | 0 | 0 | 0.5 | |

| Movement mode | Pushing operation | Details |
|---------------|-------------------|---|
| Blank | × | Invalid data (Invalid process) |
| ABS | ○ | Moves to the absolute coordinate position based on the origin of the actuator |
| INC | ○ | Moves to the relative coordinate position based on the current position |
| LIN-A | × | Moves to the absolute coordinate position based on the origin of the actuator by linear interpolation |
| LIN-I | × | Moves to the relative coordinate position based on the current position by linear interpolation |
| CIR-R*1 | × | With Axis 1 assigned to the X-axis and Axis 2 to the Y-axis, it moves in the clockwise direction by circular interpolation. The target position and rotation center position are specified according to the relative coordinates from the current position. The position data is assigned as follows. Axis 1: Target position X Axis 2: Target position Y Axis 3: Rotation center position X Axis 4: Rotation center position Y |
| CIR-L*1 | × | With Axis 1 assigned to the X-axis and Axis 2 to the Y-axis, it moves in the counter-clockwise direction by circular interpolation. The target position and rotation center position are specified according to the relative coordinates from the current position. The position data is assigned as follows. Axis 1: Target position X Axis 2: Target position Y Axis 3: Rotation center position X Axis 4: Rotation center position Y |
| SYN-I | × | Moves to the relative coordinate position based on the current position by speed tuning control*2 |

*1 Performs a circular operation on a plane using Axis 1 and Axis 2

*2 This controls the speed of the following axis when the speed of the primary axis drops due to the effects of an external force and when a speed difference with the following axis occurs. This control is not for synchronizing the position of the primary axis and following axis.

Controller Setting Software (Connection with a PC)

For 3 Axes **JXC92** For 4 Axes **JXC73/83/93**


Easy file management

| | |
|----------|--|
| Load | The step data is loaded from the file. |
| Save | The step data is saved in a file. |
| Upload | The step data is loaded from the controller. |
| Download | The step data is written in the controller. |

Abundant edit functions

| | |
|-------------------|---|
| Copy | The selected step data is copied to the clipboard. |
| Delete | The selected step data is deleted. |
| Cut | The selected step data is cut. |
| Paste (Insert) | The step data copied to the clipboard is inserted into the cursor's position. |
| Paste (Overwrite) | The step data copied to the clipboard overwrites the data at the cursor position. |
| Insert | A blank line is inserted in the selected step data line. |

Step data window

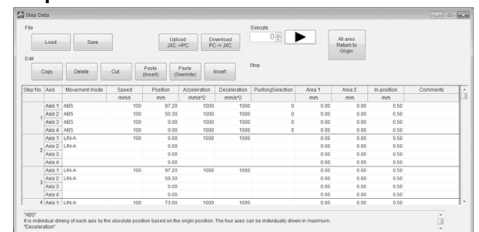


Operation confirmation of entered step data


| | |
|--|--|
| <input type="text"/> | Enter the step number to be executed. |
| <input type="button" value="▶"/> | Executes the specified step number. |
| <input type="button" value="Stop"/> | Displays whether the step number is being executed or stopped. |
| <input type="button" value="All axes return to origin"/> | Performs a return to origin of all the valid axes. |

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3


System Construction/General Purpose I/O

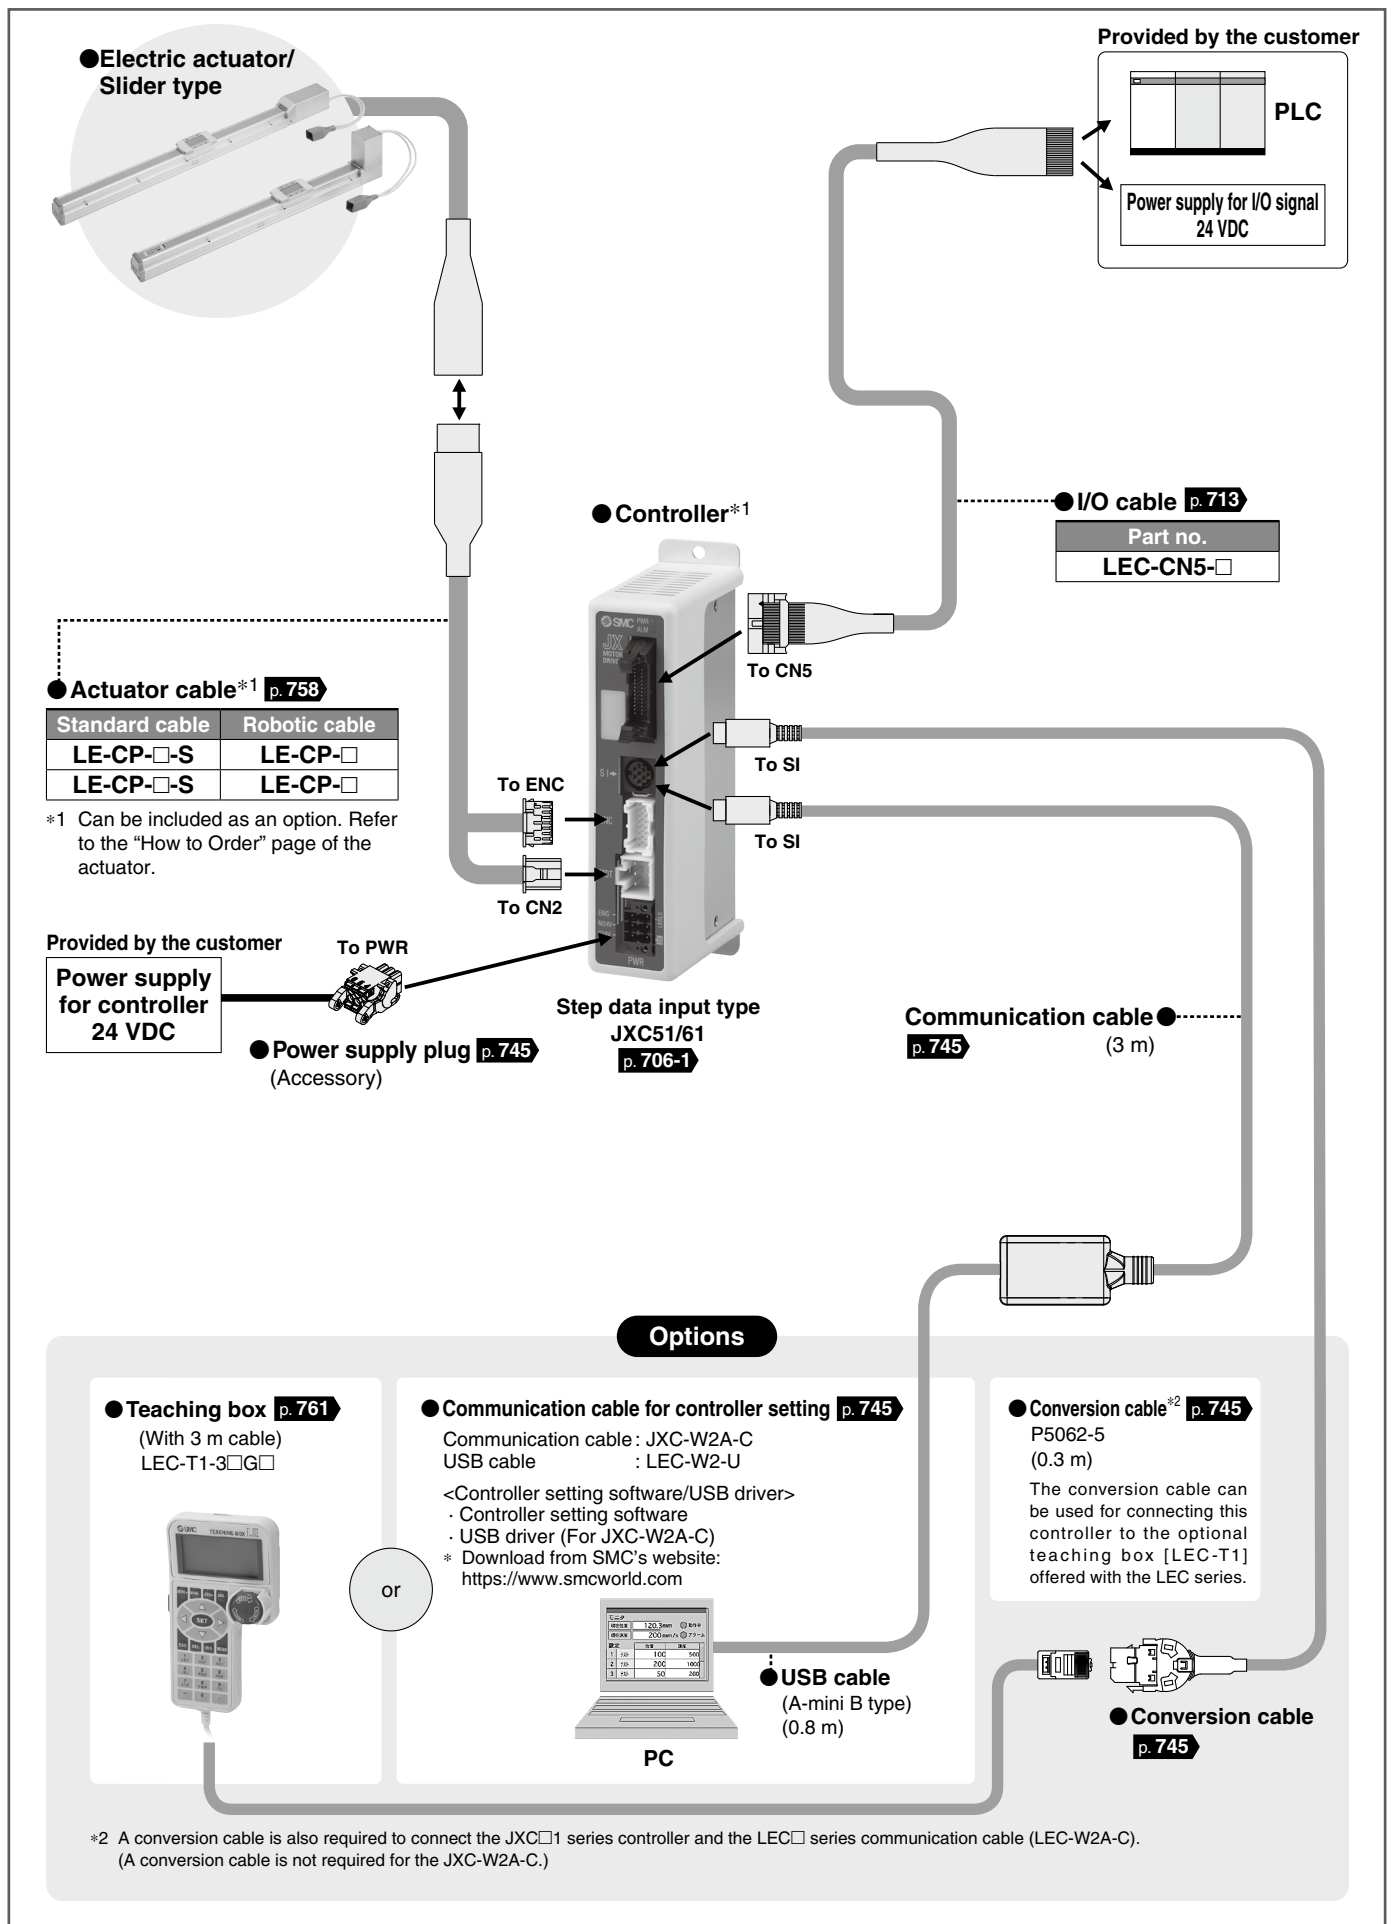

System Construction/General Purpose I/O


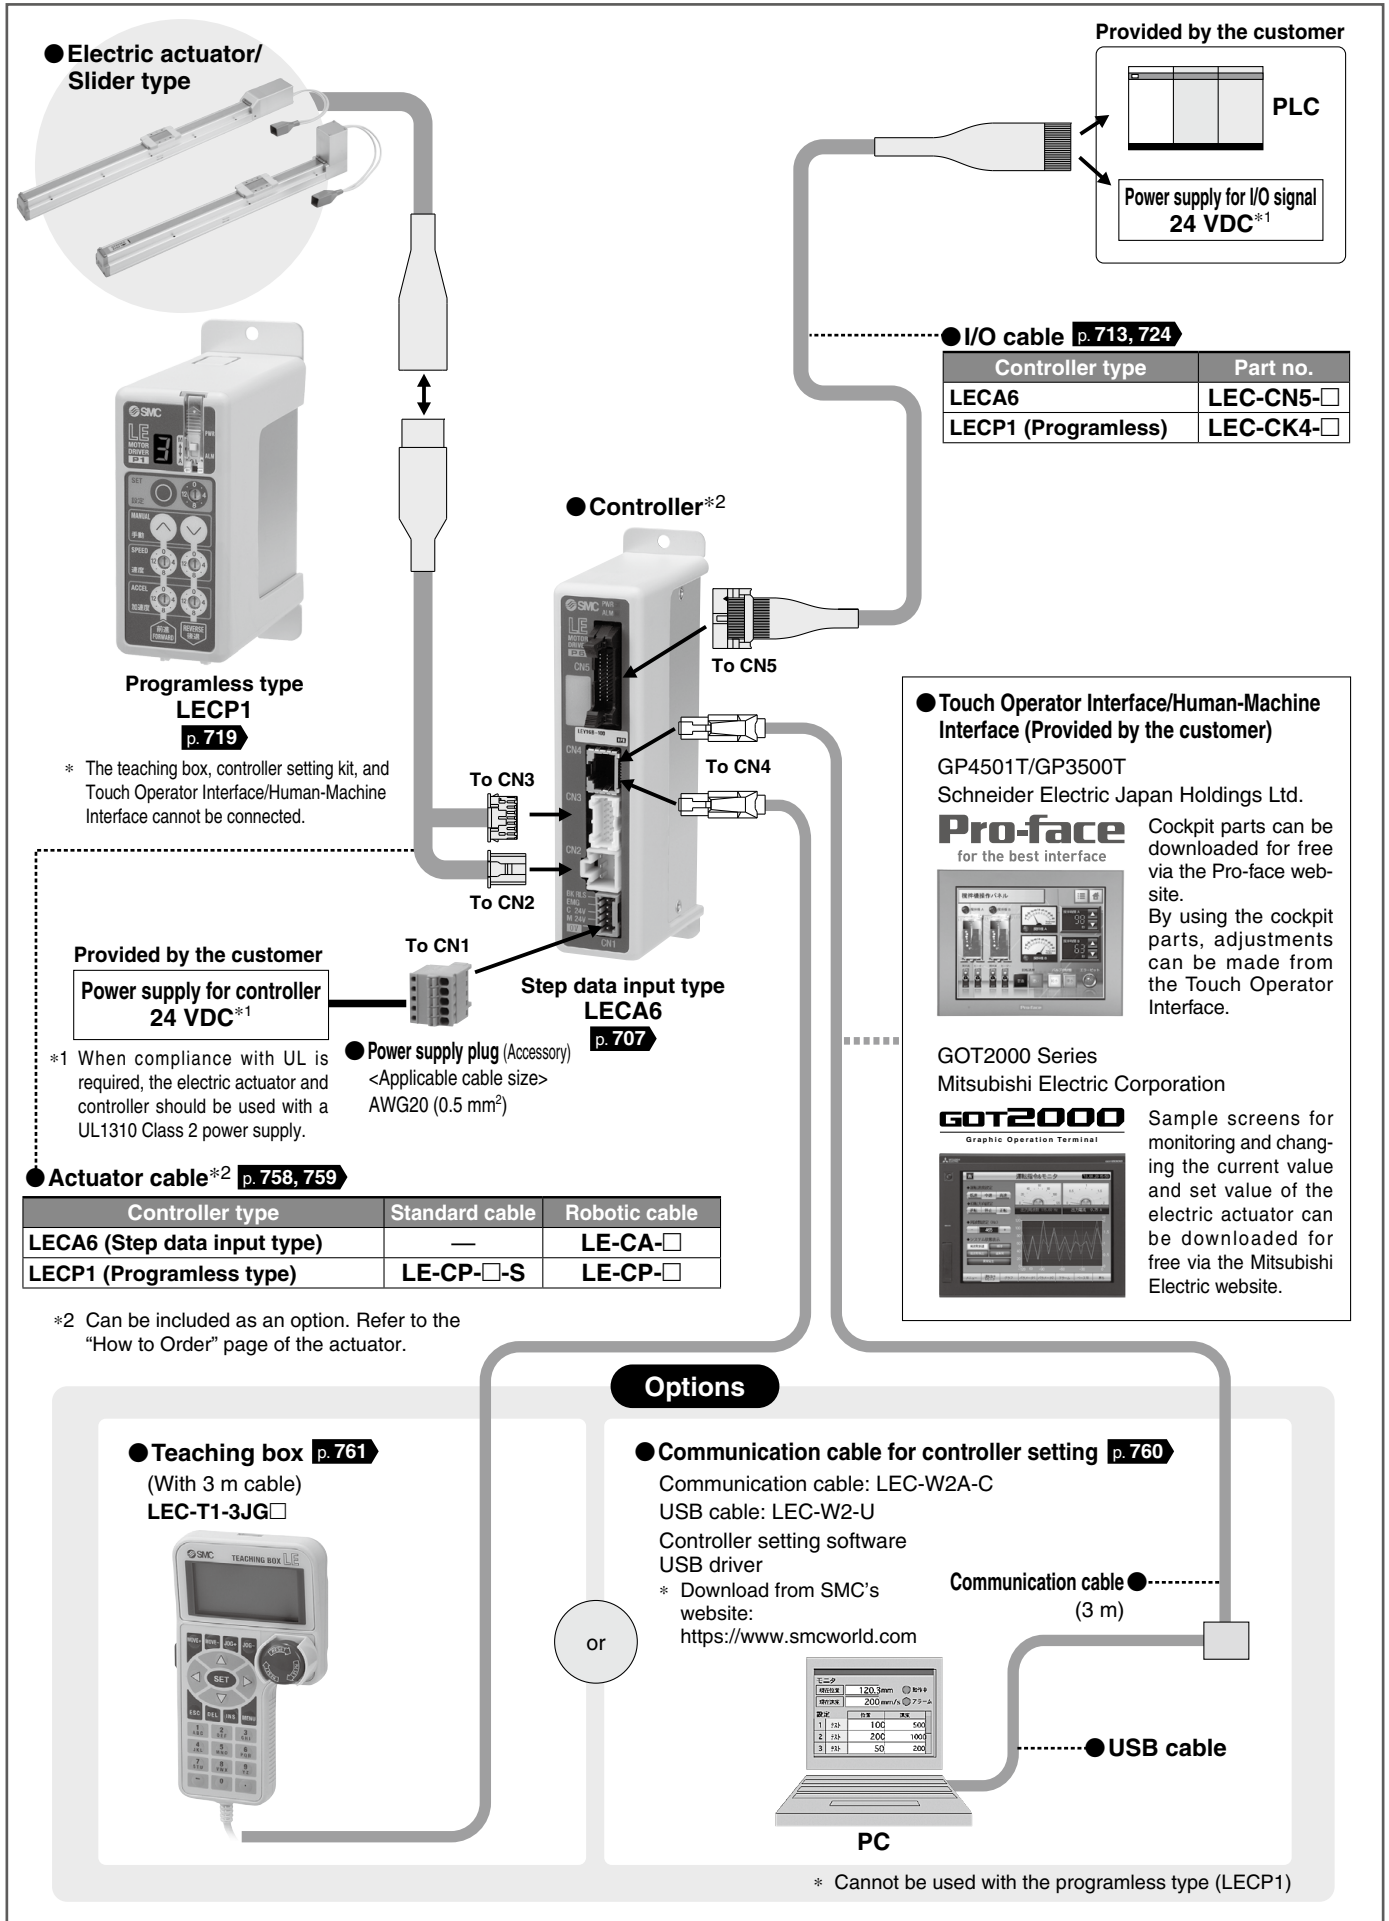


System Construction/Fieldbus Network

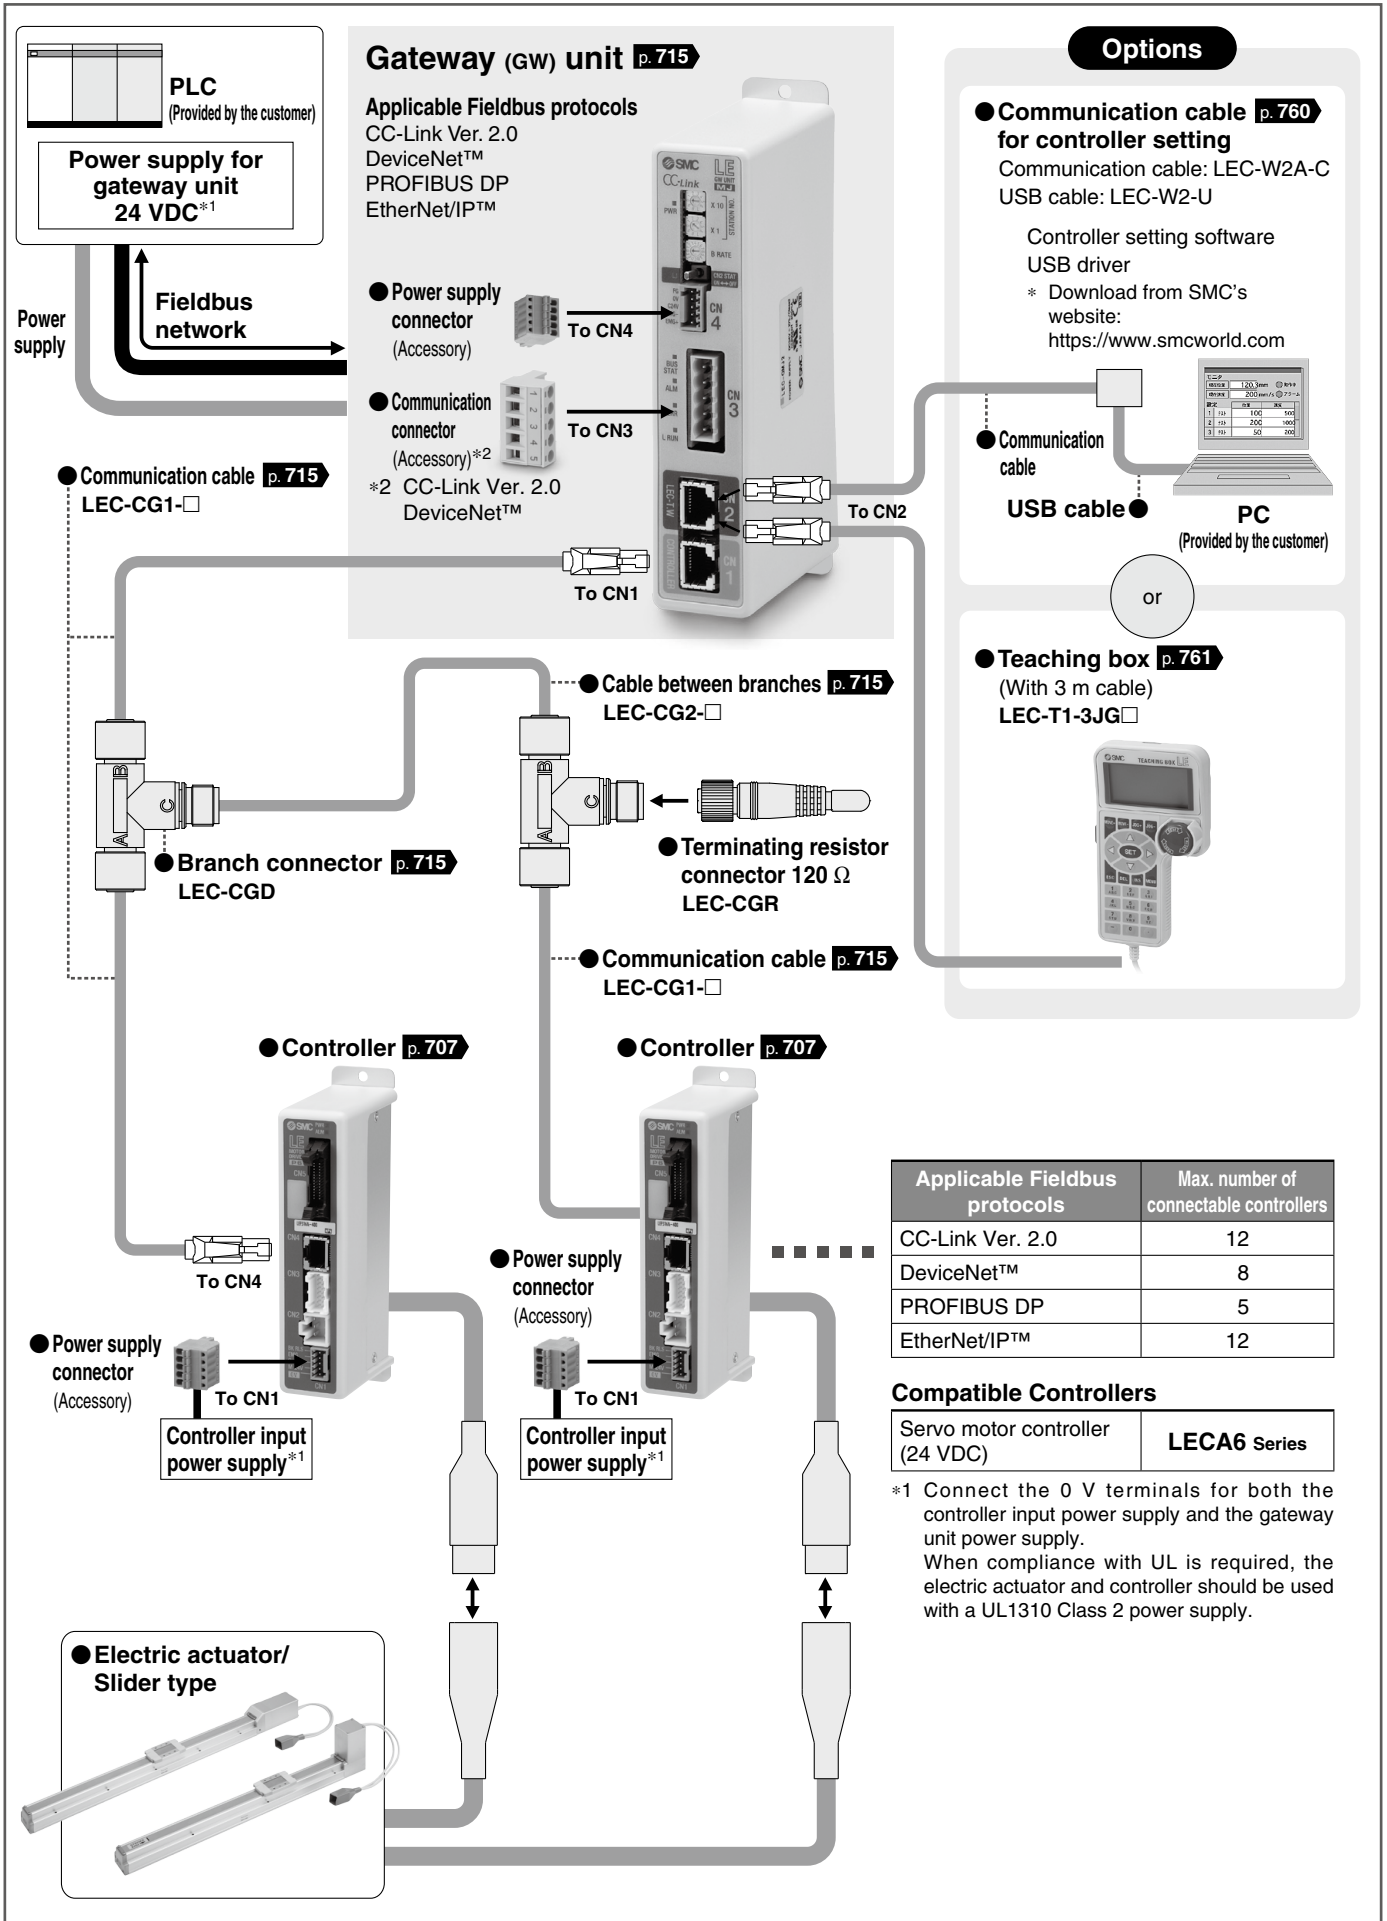


- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEYG
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

System Construction/Programless Type

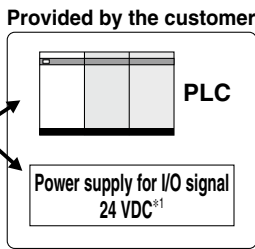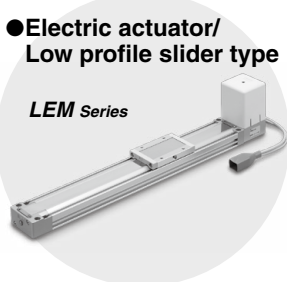


● I/O cable*2 p. 724, 730

| Controller type | Part no. |
|-----------------|-----------|
| LECP1/LECP2 | LEC-CK4-□ |

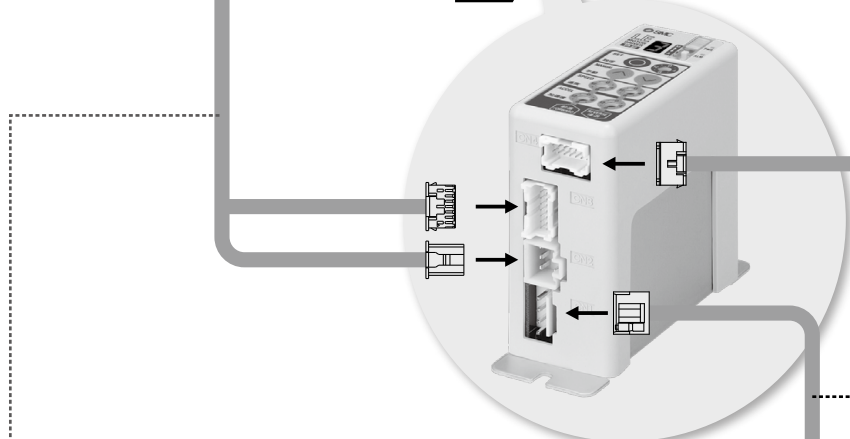

● Actuator cable*2 p. 758


| Controller type | Standard cable | Robotic cable |
|-----------------|----------------|---------------|
| LECP1/LECP2 | LE-CP-□-S | LE-CP-□ |

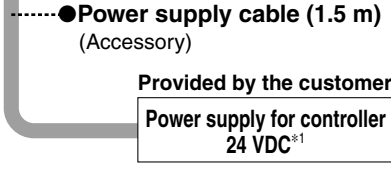

*2 Can be included as an option. Refer to the "How to Order" page of the actuator.

*1 When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

System Construction/Pulse Signal

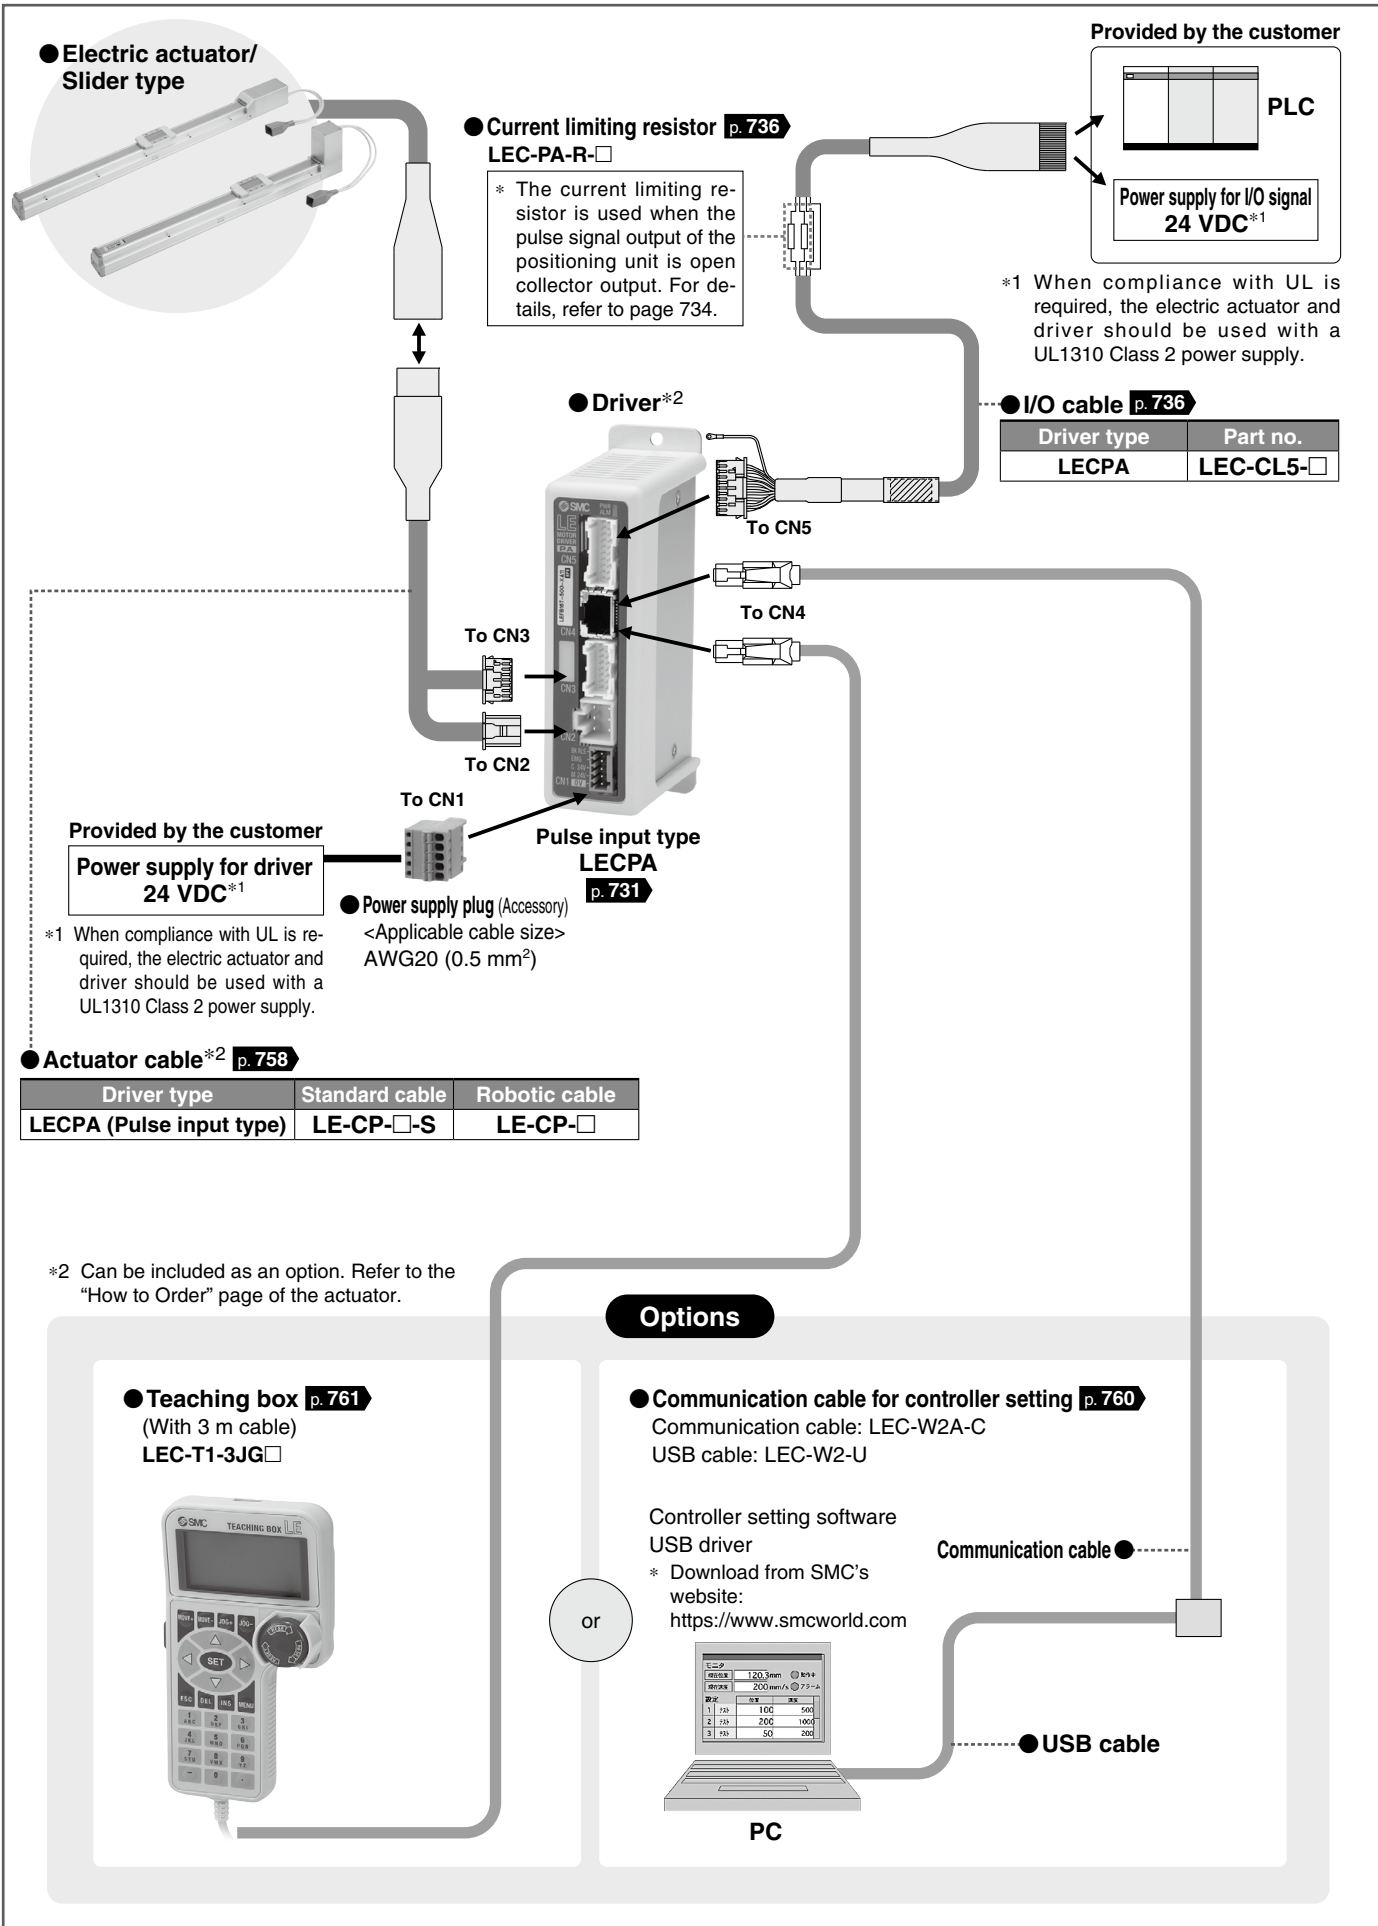

LEFS
LEFB

LEJS
LEJB

LEL

LEM

LEY
LEYG

LES
LESH

LEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC □

JXC □

LECS □
LECS-T


LECY □

Motorless


LAT3

System Construction/Fieldbus Network


(EtherCAT®/EtherNet/IP™/PROFINET/DeviceNet™/IO-Link/CC-Link Direct Input Type)

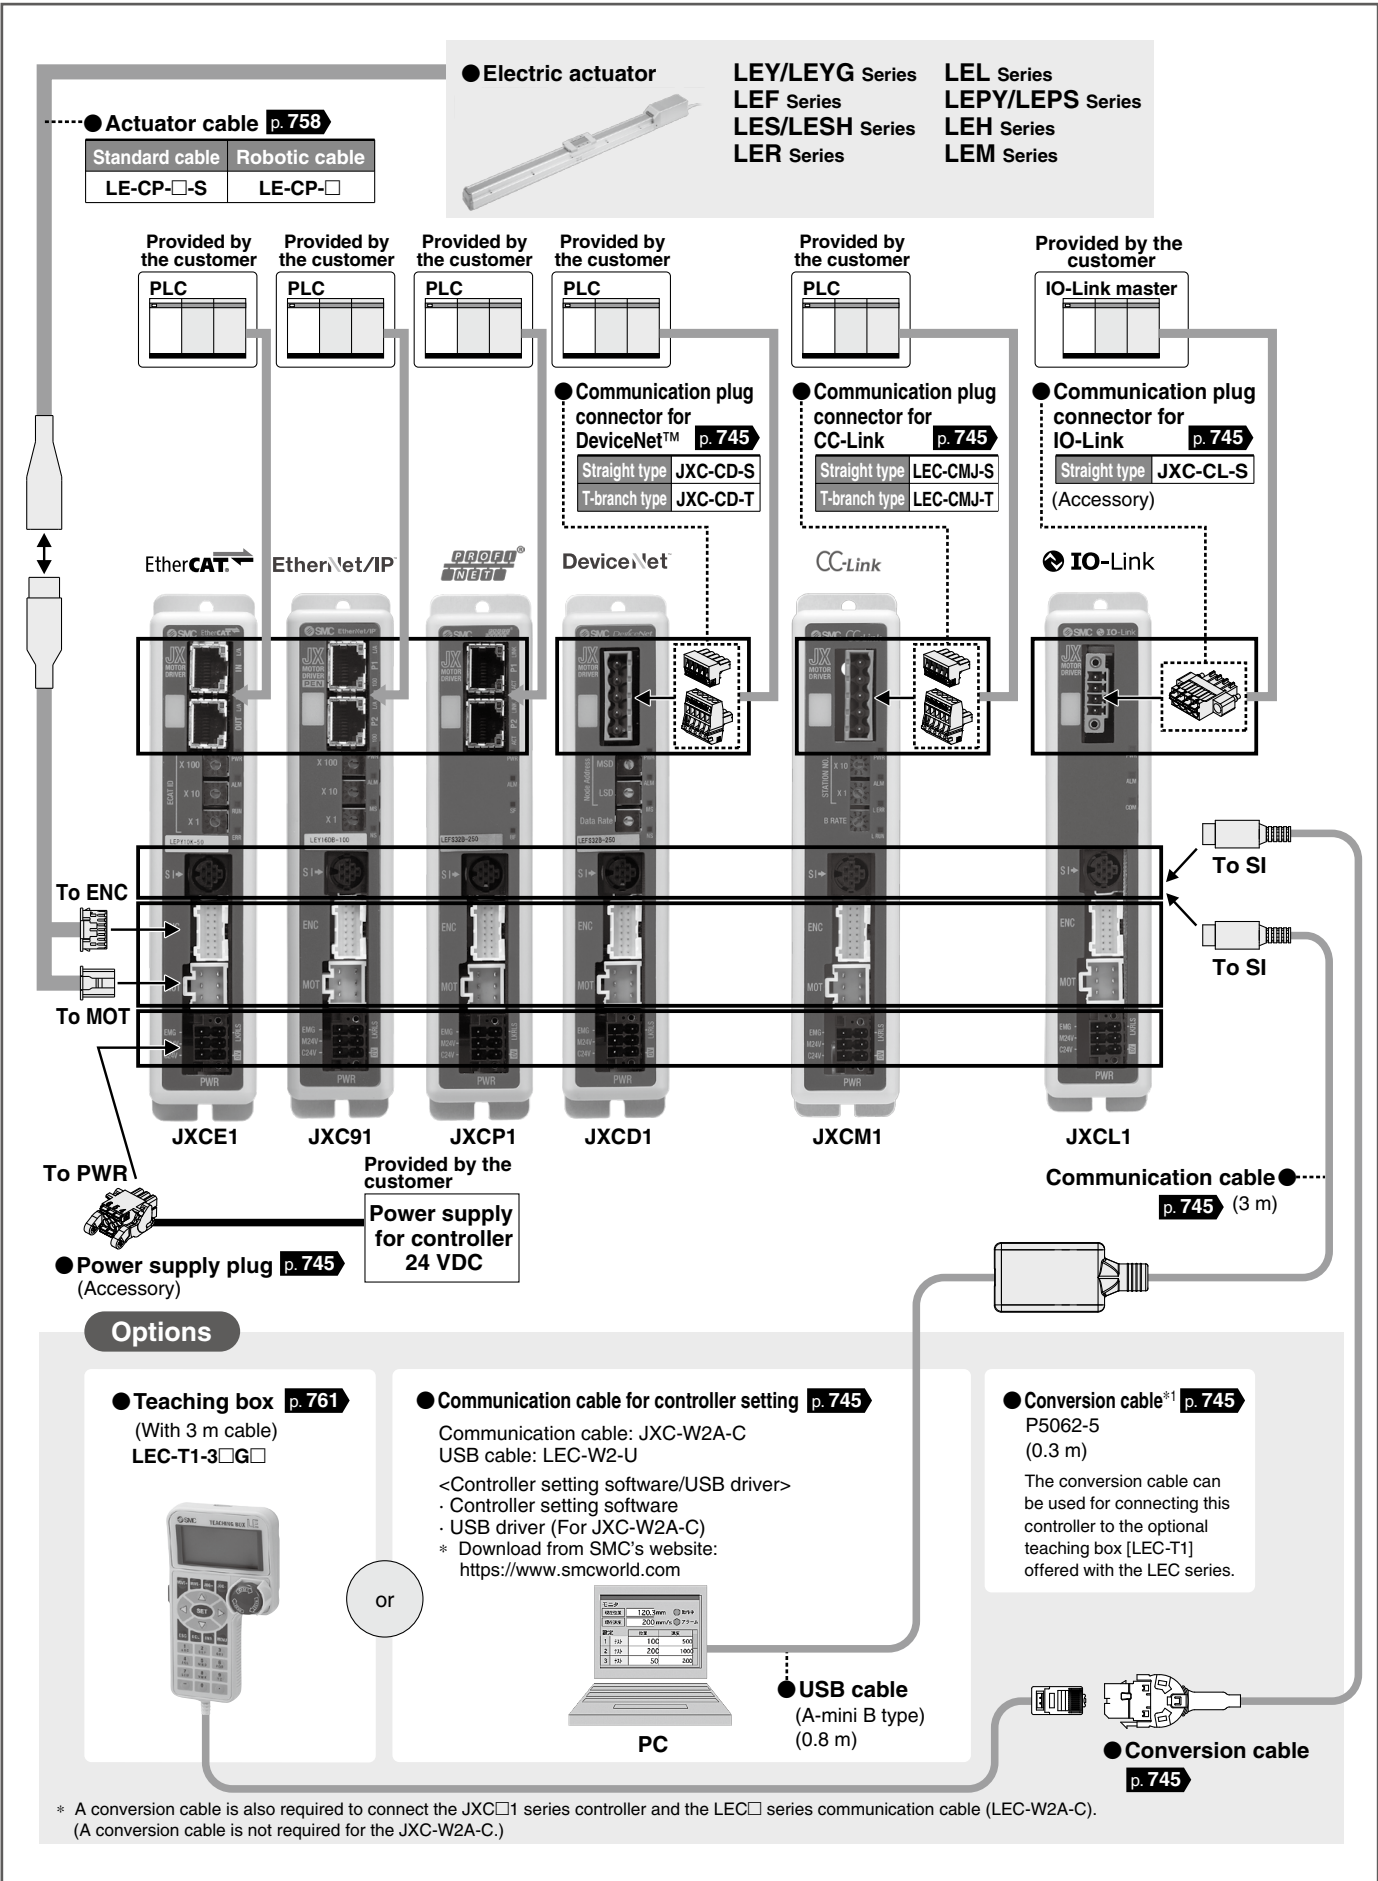

System Construction/EtherNet/IP™ Type (JXC92)

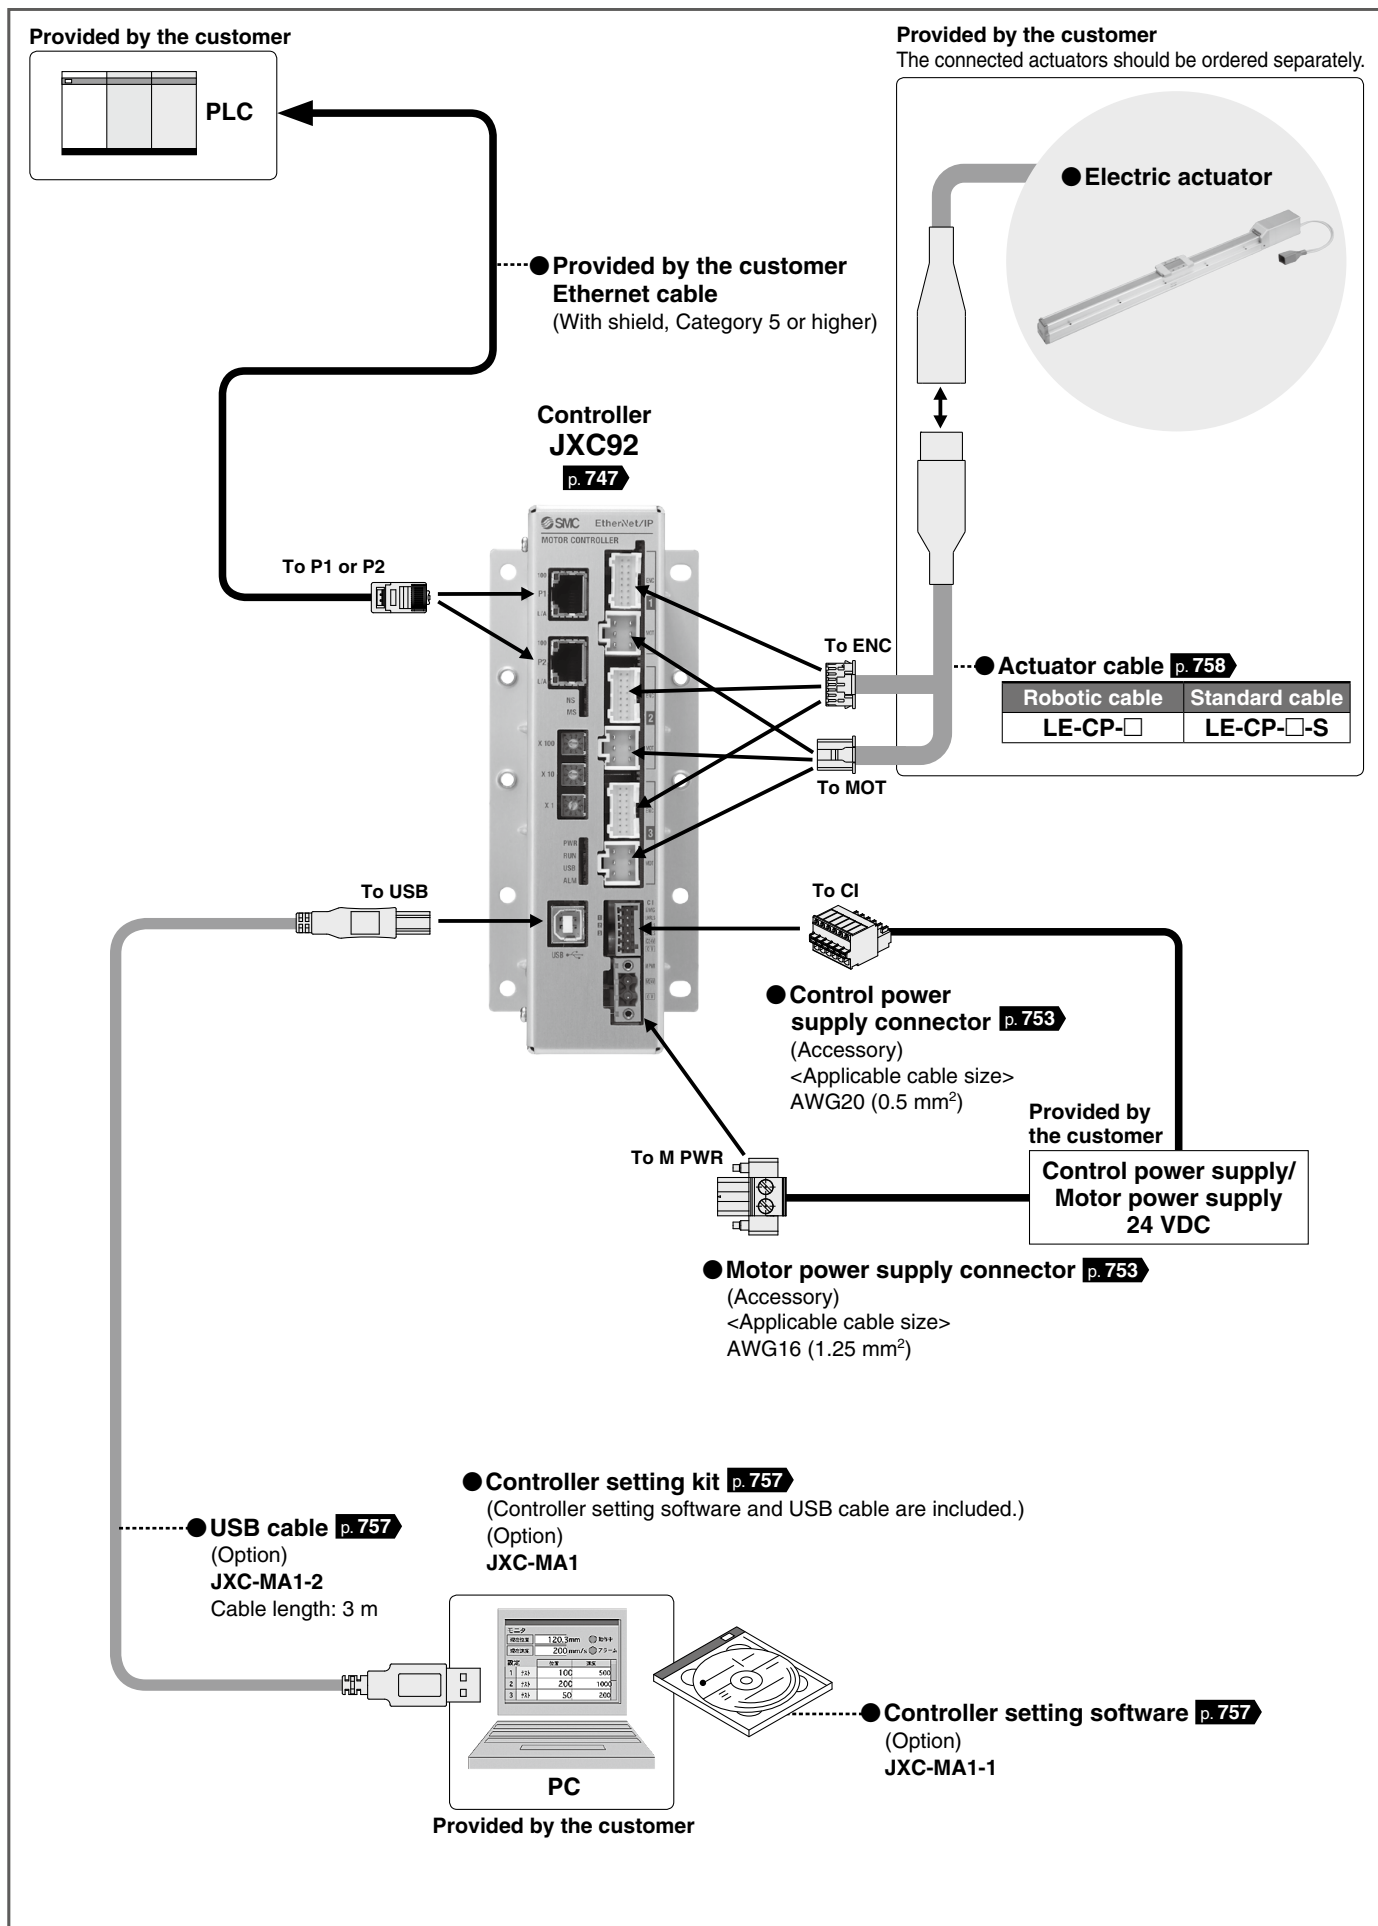


System Construction/Parallel I/O (JXC73/83)

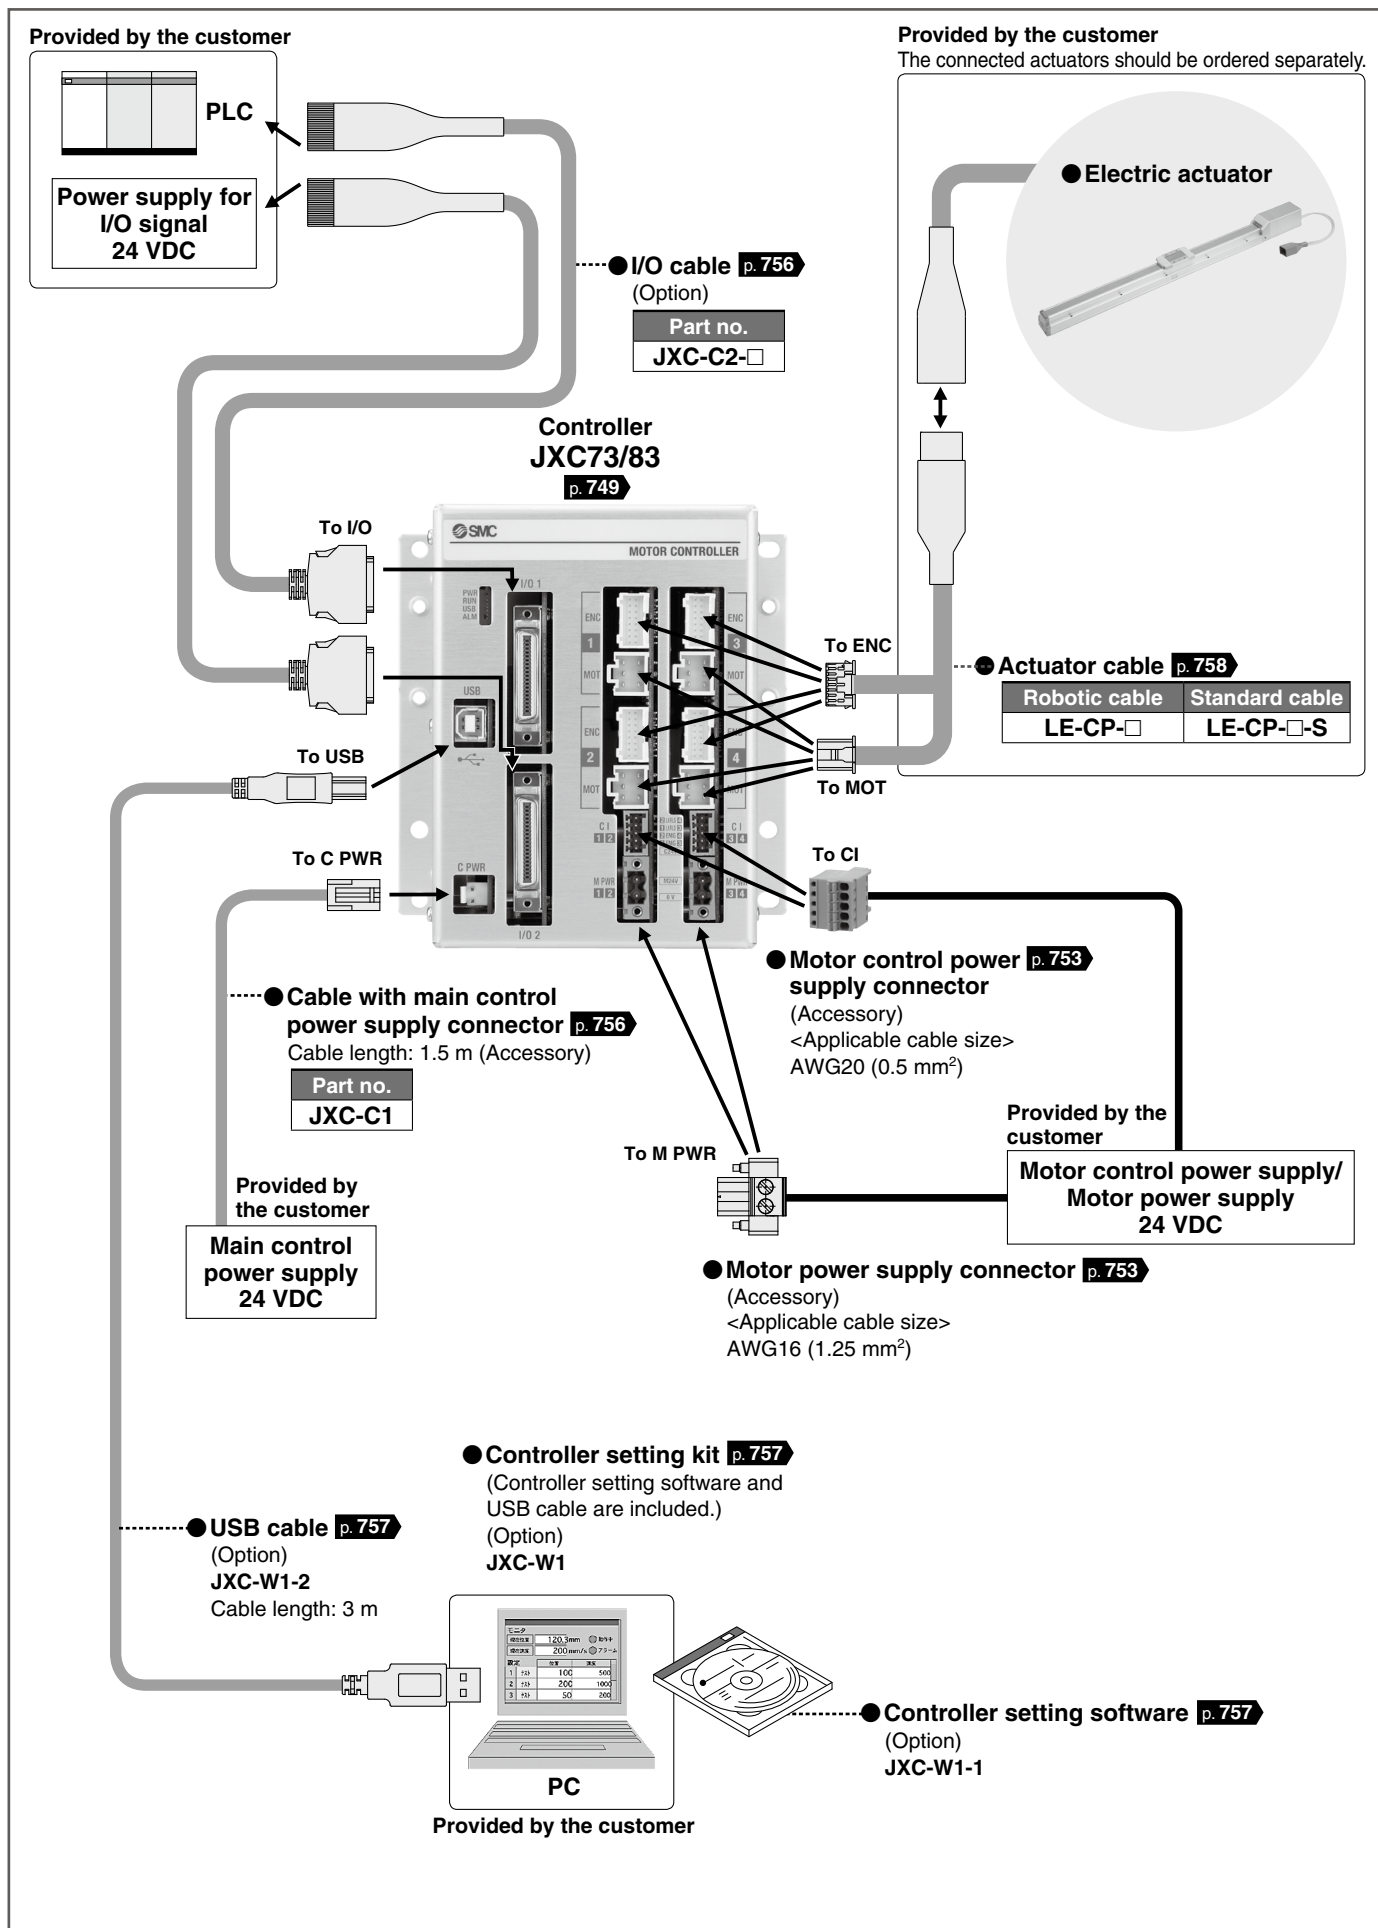

- LEFS LEFB
- LEJS LEJB
- LEL
- LEM
- LEY LEYG
- LES LESH
- LEPY LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- JXC□ LEC□
- LECS□ LECS□-T
- LECY□
- Motorless
- LAT3

System Construction/EtherNet/IP™ Type (JXC93)

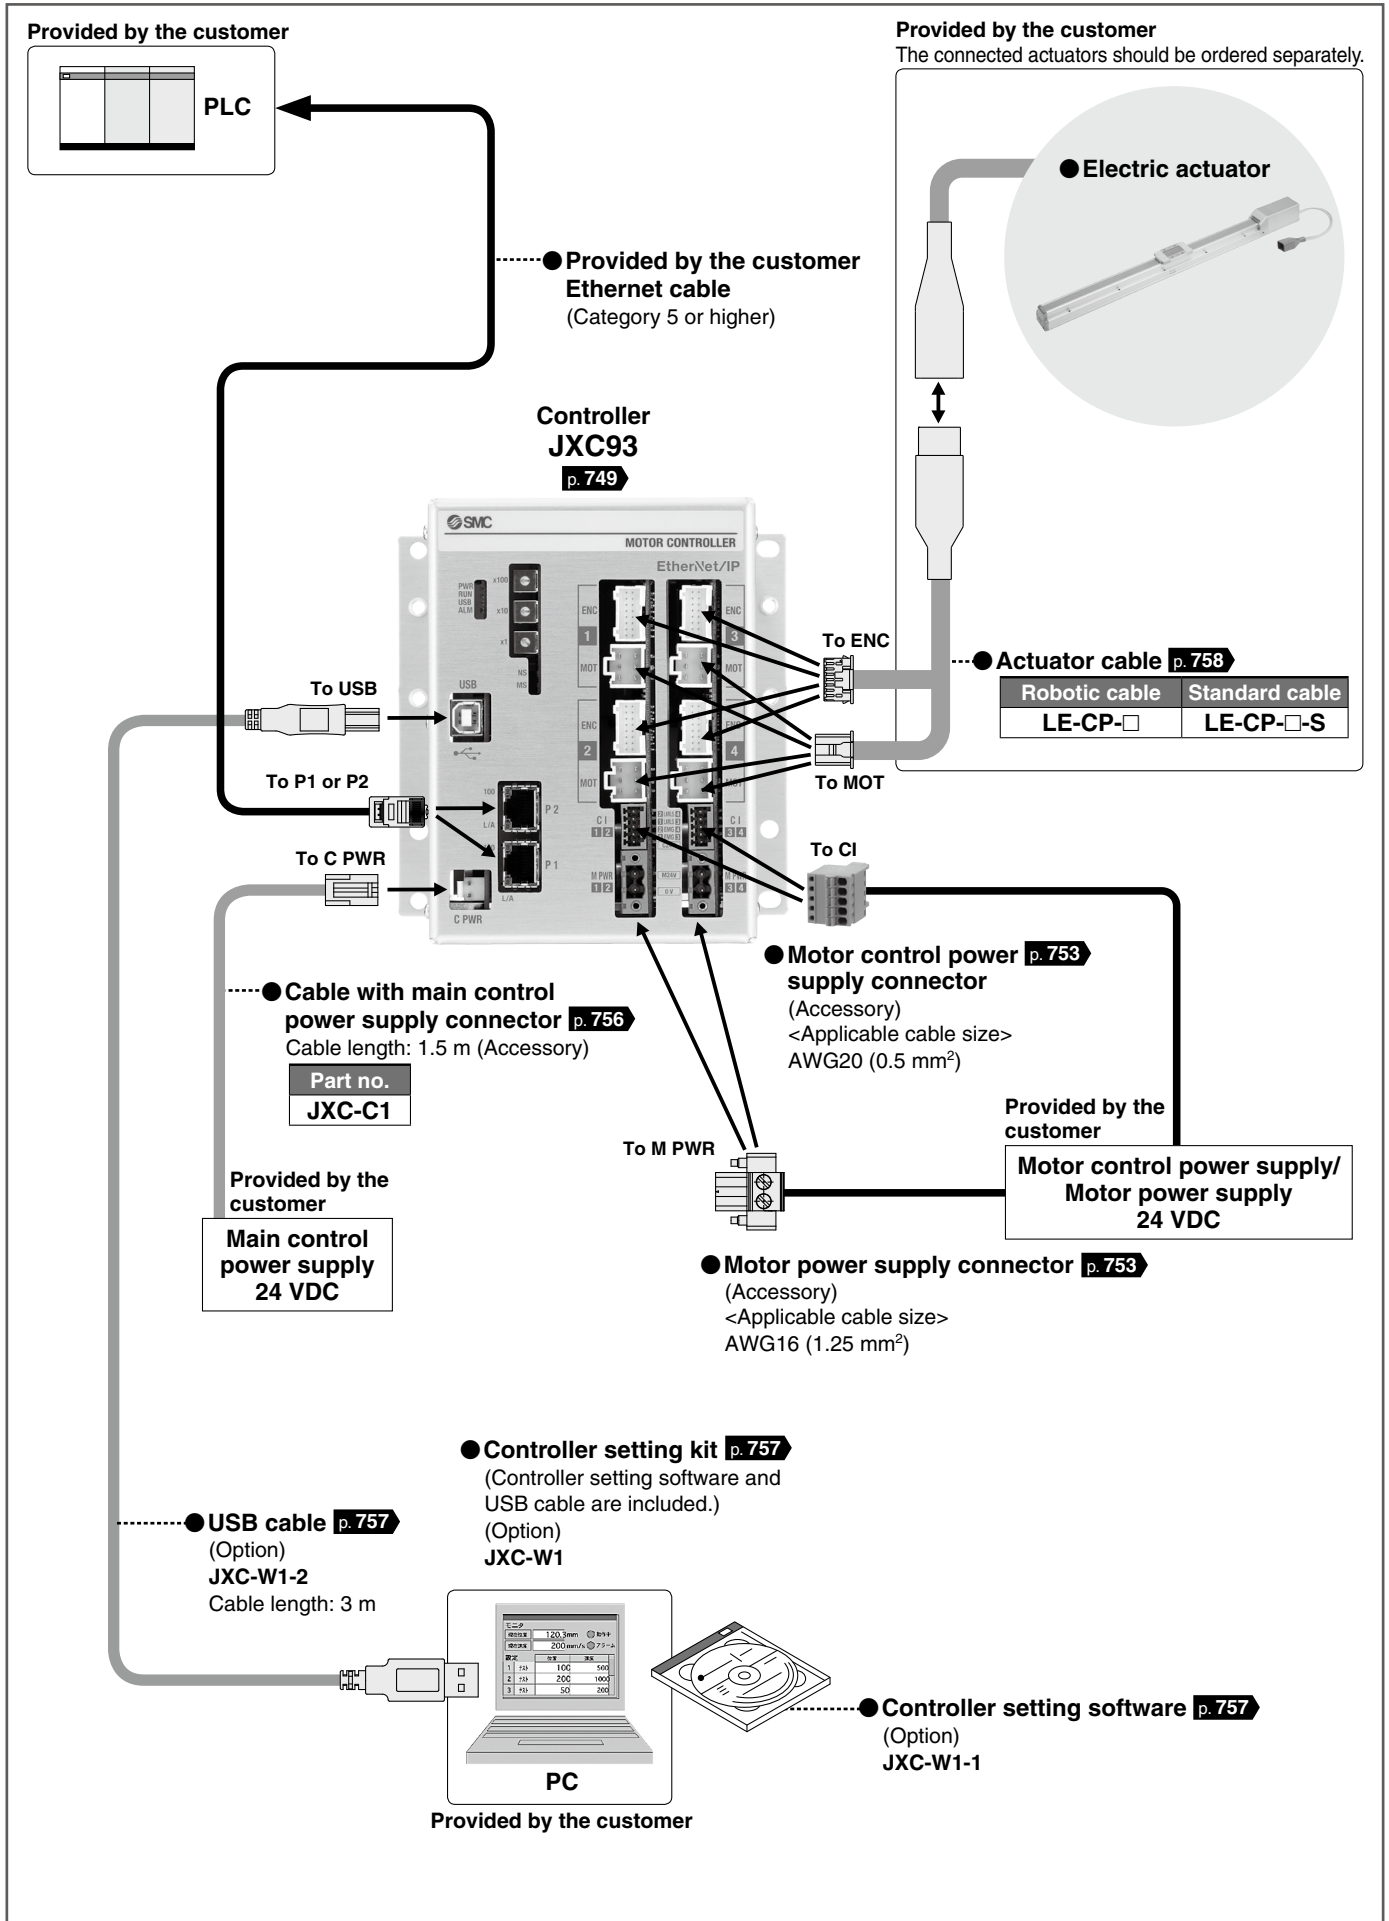

Step Motor (Servo/24 VDC)/Servo Motor (24 VDC) Controllers/Drivers



| | |
|--|----------|
| Step Data Input Type/ JXC51/61 Series | p. 706-1 |
| Step Data Input Type/ LECA6 Series | p. 707 |
| Gateway Unit/ LEC-G Series | p. 715 |
| Programless Controller/ LECP1 Series | p. 719 |
| Programless Controller (With Stroke Study)/ LECP2 Series | p. 725 |
| Step Motor Driver/ LECPA Series | p. 731 |
| EtherCAT®/EtherNet/IP™/PROFINET/DeviceNet™/IO-Link/CC-Link Direct Input Type/ JXC-E1/91/P1/D1/L1/M1 Series | p. 741 |
| Precautions Related to Differences in Controller Versions | p. 746 |
| 3-Axis Step Motor Controller/ JXC92 Series | p. 747 |
| 4-Axis Step Motor (Servo/24 VDC) Controller/ JXC73/83/93 Series | p. 749 |
| Actuator Cable | p. 758 |
| Communication Cable for Controller Setting/ LEC-W2A-□ | p. 760 |
| Teaching Box/ LEC-T1 | p. 761 |

| |
|-----------|
| LEFS |
| LEFB |
| LEJS |
| LEJB |
| LEL |
| LEM |
| LEY |
| LEYG |
| LES |
| LESH |
| LEPY |
| LEPS |
| LER |
| LEH |
| LEY-X5 |
| 11-LEFS |
| 11-LEJS |
| 25A- |
| LEC□ |
| JXC□ |
| LECS□ |
| LECS□-T |
| LECY□ |
| Motorless |
| LAT3 |

LEF LEL LEM

LEY LES LEP

LER LEH

Controller (Step Data Input Type)

JXC51/61 Series



How to Order

JXC 5 1 7 1 -

1
 2
 3
 4

1 Parallel I/O type

| | |
|---|-----|
| 5 | NPN |
| 6 | PNP |

2 Mounting

| | |
|-----|----------------|
| 7 | Screw mounting |
| 8*1 | DIN rail |

*1 The DIN rail is not included.
Order it separately.

3 I/O cable length [m]

| | |
|-----|------|
| Nil | None |
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

4 Actuator part number

Without cable specifications and actuator options
Example: Enter "LEFS25B-100" for the
LEFS25B-100B-R1□□.

BC Blank controller*1


*1 Requires dedicated software (JXC-BCW)

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

- ① Check the actuator label for the model number. This number should match that of the controller.
- ② Check that the Parallel I/O configuration matches (NPN or PNP).

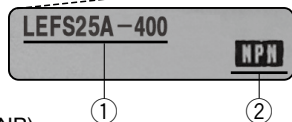

Precautions for blank controllers (JXC□1□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (JXC-BCW) for data writing.

- Please download the dedicated software (JXC-BCW) via our website.
- Order the communication cable for controller setting (JXC-W2A-C) separately to use this software.

SMC website

<https://www.smcworld.com>


* Refer to the operation manual for using the products. Please download it via our website, <https://www.smcworld.com>

Specifications


| Model | JXC51 JXC61 |
|----------------------------------|--|
| Compatible motor | Step motor (Servo/24 VDC) |
| Power supply | Power voltage: 24 VDC ±10% |
| Current consumption (Controller) | 100 mA or less |
| Compatible encoder | Incremental A/B phase (800 pulse/rotation), Battery-less absolute (4096 pulse/rotation) |
| Parallel input | 11 inputs (Photo-coupler isolation) |
| Parallel output | 13 outputs (Photo-coupler isolation) |
| Serial communication | RS485 (Only for the LEC-T1 and JXC-W2) |
| Memory | EEPROM |
| LED indicator | PWR, ALM |
| Cable length [m] | Actuator cable: 20 or less |
| Cooling system | Natural air cooling |
| Operating temperature range [°C] | 0 to 55°C (No freezing) |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Insulation resistance [MΩ] | Between all external terminals and the case: 50 (50 VDC) |
| Weight [g] | 150 (Screw mounting), 170 (DIN rail mounting) |

How to Mount

a) Screw mounting (JXC□17□-□) (Installation with two M4 screws)

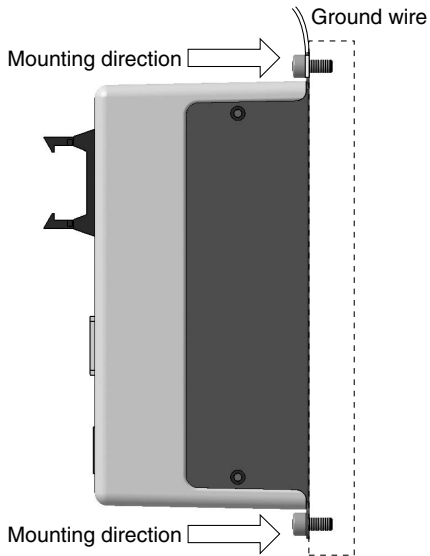

b) DIN rail mounting (JXC□18□-□) (Installation with the DIN rail)

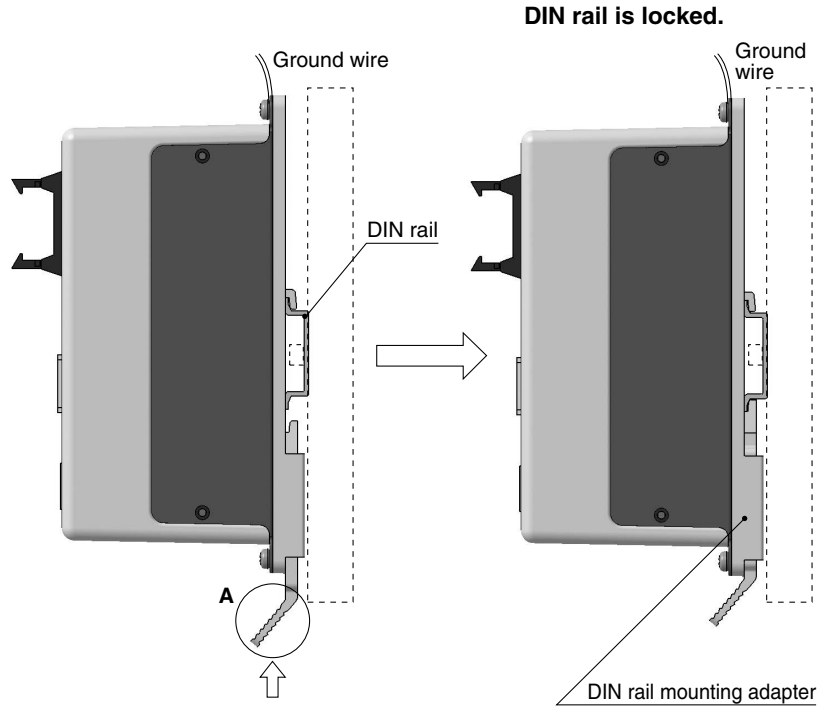


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

* When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings on page 706-3 for the mounting dimensions.

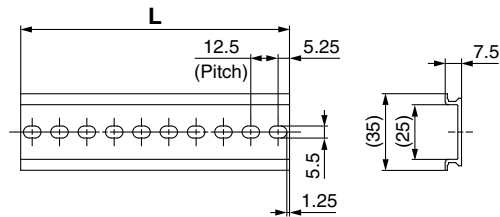

L Dimensions [mm]

| | | | | | | | | | | | | | | | | | | | | |
|----------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |

DIN rail mounting adapter LEC-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

LEFS
LEFBLEJS
LEJB

LEL

LEM

LEY
LEYGLES
LESHLEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC□

JXC□

LECS□
LECS□-T


LECY□

Motorless

LAT3

JXC51/61 Series

Dimensions

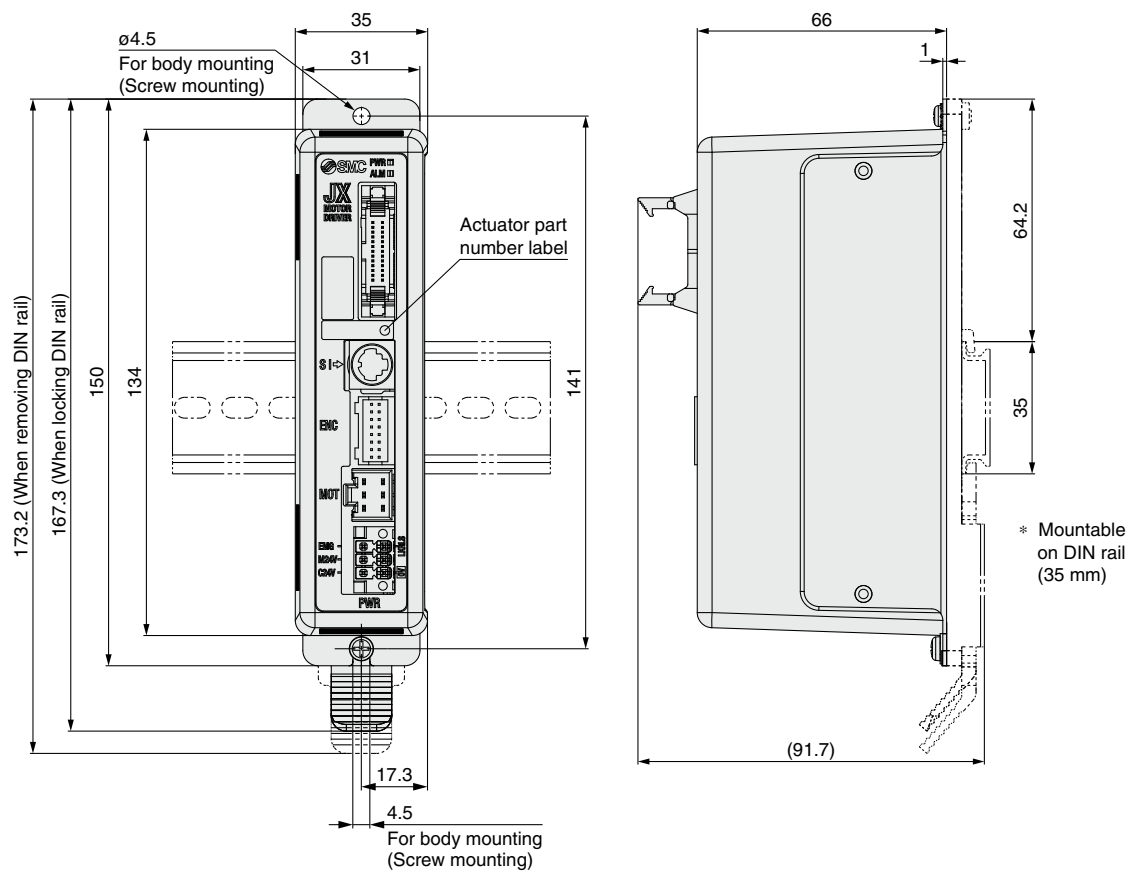


Wiring Example 1

Parallel I/O Connector


- * When you connect a PLC to the parallel I/O connector, use the I/O cable (LEC-CN5-□).
- * The wiring changes depending on the type of parallel I/O (NPN or PNP).

Wiring diagram

JXC51□□-□ (NPN)

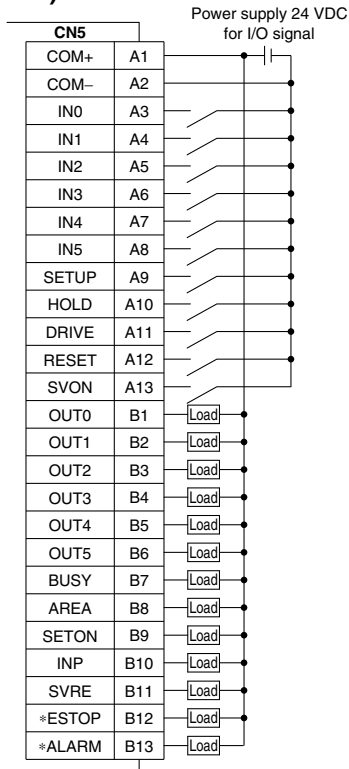

JXC61□□-□ (PNP)

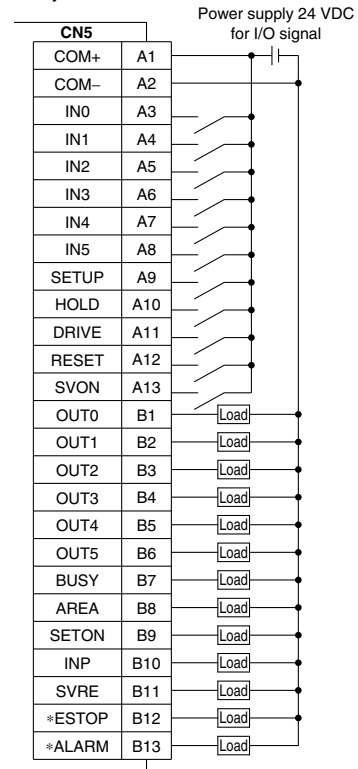

Input Signal

| Name | Details |
|------------|---|
| COM+ | Connects the power supply 24 V for input/output signal |
| COM- | Connects the power supply 0 V for input/output signal |
| IN0 to IN5 | Step data specified bit no. (Input is instructed by combining IN0 to 5.) |
| SETUP | Instruction to return to origin |
| HOLD | Temporarily stops operation |
| DRIVE | Instruction to drive |
| RESET | Resets alarm and interrupts operation |
| SVON | Servo ON instruction |

Output Signal

| Name | Details |
|----------------------|---|
| OUT0 to OUT5 | Outputs the step data no. during operation |
| BUSY | Outputs when the actuator is moving |
| AREA | Outputs within the step data area output setting range |
| SETON | Outputs when returning to origin |
| INP | Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.) |
| SVRE | Outputs when servo is on |
| *ESTOP* ¹ | OFF when EMG stop is instructed |
| *ALARM* ¹ | OFF when alarm is generated |

*¹ Signal of negative-logic circuit (N.C.)

LEFS
LEFBLEJS
LEJB

LEL

LEM

LEY
LEYGLES
LESHLEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC□

JXC□

LECS□
LECS□-T

LECY□

Motorless

LAT3

JXC51/61 Series


Step Data Setting

1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation.

The setting items and set values for this operation are stated below.

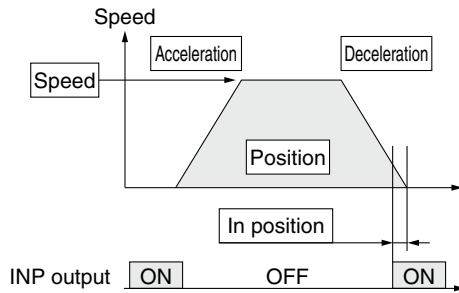

- ◎ : Need to be set.
- : Need to be adjusted as required.
- : Setting is not required.


Step Data (Positioning)

| Necessity | Item | Details |
|-----------|----------------|--|
| ◎ | Movement MOD | When the absolute position is required, set Absolute. When the relative position is required, set Relative. |
| ◎ | Speed | Transfer speed to the target position |
| ◎ | Position | Target position |
| ○ | Acceleration | Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set. |
| ○ | Deceleration | Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops. |
| ◎ | Pushing force | Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.) |
| — | Trigger LV | Setting is not required. |
| — | Pushing speed | Setting is not required. |
| ○ | Moving force | Max. torque during the positioning operation (No specific change is required.) |
| ○ | Area 1, Area 2 | Condition that turns on the AREA output signal. |
| ○ | In position | Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger. |

2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

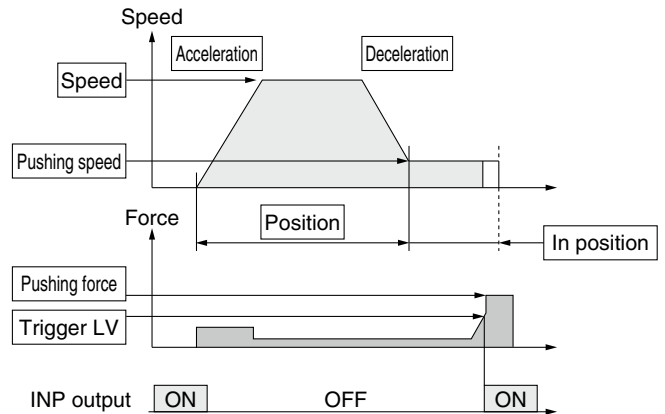


- ◎ : Need to be set.
- : Need to be adjusted as required.

Step Data (Pushing)

| Necessity | Item | Details |
|-----------|----------------|--|
| ◎ | Movement MOD | When the absolute position is required, set Absolute. When the relative position is required, set Relative. |
| ◎ | Speed | Transfer speed to the pushing start position |
| ◎ | Position | Pushing start position |
| ○ | Acceleration | Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set. |
| ○ | Deceleration | Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops. |
| ◎ | Pushing force | Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator. |
| ◎ | Trigger LV | Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less. |
| ○ | Pushing speed | Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator. |
| ○ | Moving force | Max. torque during the positioning operation (No specific change is required.) |
| ○ | Area 1, Area 2 | Condition that turns on the AREA output signal. |
| ◎ | In position | Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on. |


Signal Timing

Return to Origin

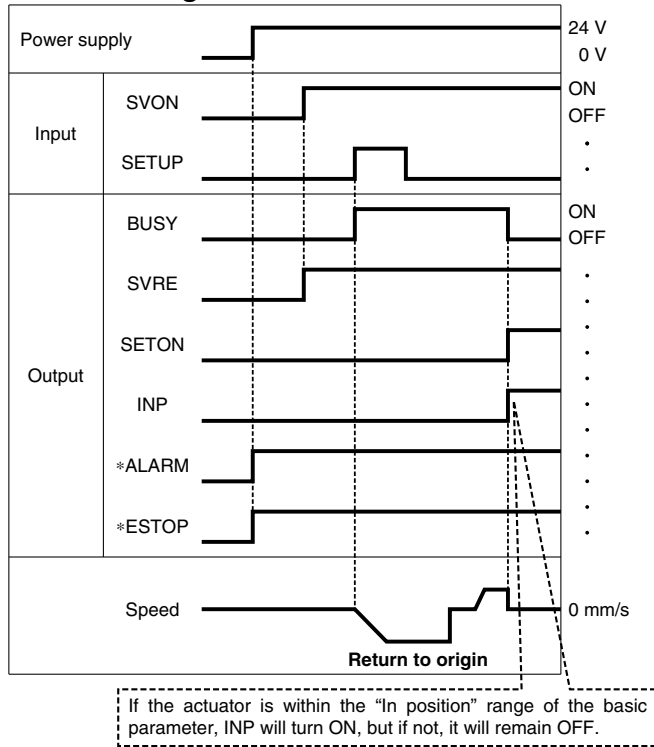


* *ALARM and *ESTOP are expressed as negative-logic circuits.

Positioning Operation

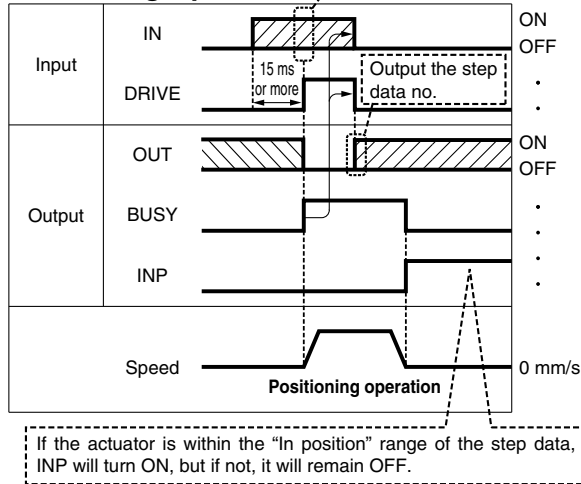


* "OUT" is output when "DRIVE" is changed from ON to OFF.
Refer to the operation manual for details on the controller for the LEM series.
(When power supply is applied, "DRIVE" or "RESET" is turned ON or *ESTOP is turned OFF, all of the "OUT" outputs are OFF.)

HOLD

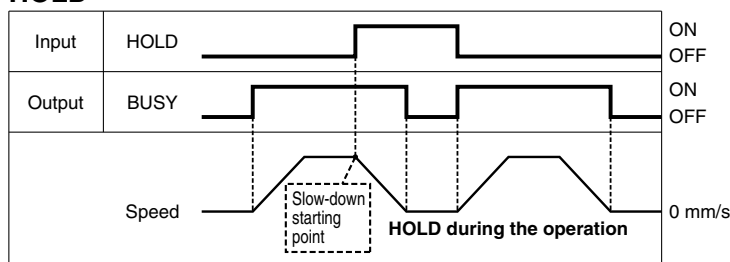


* When the actuator is within the "In position" range in the pushing operation, it does not stop even if HOLD signal is input.

Pushing Operation

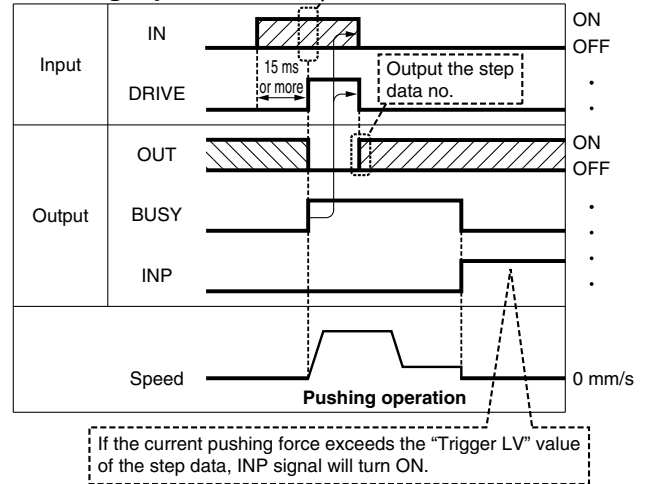

Reset

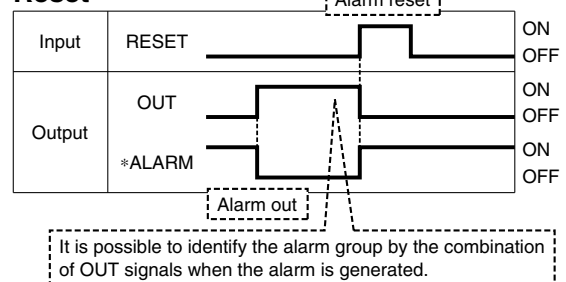



* *ALARM is expressed as a negative-logic circuit.

JXC51/61 Series

Options

Power supply plug JXC-CPW

- * The power supply plug is an accessory.
- <Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

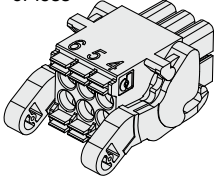

- ① C 24V
- ② M 24V
- ③ EMG
- ④ 0V
- ⑤ N.C.
- ⑥ LK RLS

Power supply plug terminal

| Terminal name | Function | Details |
|---------------|--------------------------|---|
| 0V | Common supply (-) | The M 24V terminal, C 24V terminal, EMG terminal, and LK RLS terminal are common (-). |
| M 24V | Motor power supply (+) | Motor power supply (+) of the controller |
| C 24V | Control power supply (+) | Control power supply (+) of the controller |
| EMG | Stop (+) | Connection terminal of the external stop circuit |
| LK RLS | Lock release (+) | Connection terminal of the lock release switch |

Communication cable for controller setting


- Controller setting software
 - USB driver
- Download from SMC's website:
<https://www.smcworld.com>

Hardware Requirements

| | |
|-------------------------|------------------------------------|
| OS | Windows®7, Windows®8.1, Windows®10 |
| Communication interface | USB 1.1 or USB 2.0 ports |
| Display | 1024 x 768 or more |


- * Windows®7, Windows®8.1, and Windows®10 are registered trademarks of Microsoft Corporation in the United States.

① Communication cable JXC-W2A-C

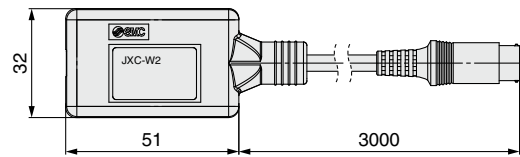

- * It can be connected to the controller directly.

② USB cable LEC-W2-U



Teaching box

LEC-T1-3 J G □

Teaching box

Cable length [m]
 3 3

Initial language

| | |
|---|----------|
| J | Japanese |
| E | English |

Enable switch

| | |
|-----|-----------------------------|
| Nil | None |
| S | Equipped with enable switch |

- * Interlock switch for jog and test function

Stop switch

| | |
|---|---------------------------|
| G | Equipped with stop switch |
|---|---------------------------|


- * The displayed language can be changed to English or Japanese.



Specifications

| Item | Description |
|----------------------------------|-------------------------------------|
| Switch | Stop switch, Enable switch (Option) |
| Cable length [m] | 3 |
| Enclosure | IP64 (Except connector) |
| Operating temperature range [°C] | 5 to 50 |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Weight [g] | 350 (Except cable) |

Conversion cable P5062-5 (Cable length: 300 mm)



- * To connect the teaching box (LEC-T1-3□□□) to the controller, a conversion cable is required.

Option: I/O Cable

LEC-CN5-1


Cable length (L) [m]

| | |
|---|-----|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

* Conductor size: AWG28

Weight

| Product no. | Weight [g] |
|-------------|------------|
| LEC-CN5-1 | 170 |
| LEC-CN5-3 | 320 |
| LEC-CN5-5 | 520 |

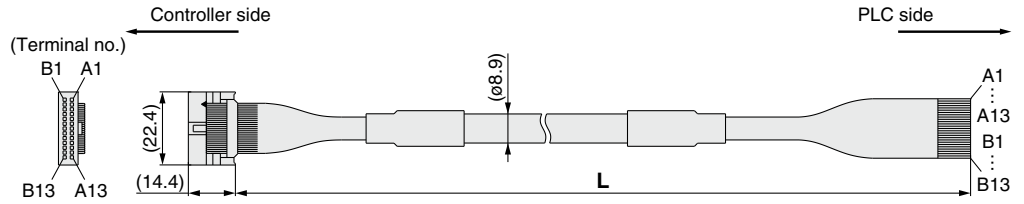

| Connector pin no. | Insulation color | Dot mark | Dot color |
|-------------------|------------------|----------|-----------|
| A1 | Light brown | ■ | Black |
| A2 | Light brown | ■ | Red |
| A3 | Yellow | ■ | Black |
| A4 | Yellow | ■ | Red |
| A5 | Light green | ■ | Black |
| A6 | Light green | ■ | Red |
| A7 | Gray | ■ | Black |
| A8 | Gray | ■ | Red |
| A9 | White | ■ | Black |
| A10 | White | ■ | Red |
| A11 | Light brown | ■ ■ | Black |
| A12 | Light brown | ■ ■ | Red |
| A13 | Yellow | ■ ■ | Black |

| Connector pin no. | Insulation color | Dot mark | Dot color |
|-------------------|------------------|----------|-----------|
| B1 | Yellow | ■ ■ | Red |
| B2 | Light green | ■ ■ | Black |
| B3 | Light green | ■ ■ | Red |
| B4 | Gray | ■ ■ | Black |
| B5 | Gray | ■ ■ | Red |
| B6 | White | ■ ■ | Black |
| B7 | White | ■ ■ | Red |
| B8 | Light brown | ■ ■ ■ | Black |
| B9 | Light brown | ■ ■ ■ | Red |
| B10 | Yellow | ■ ■ ■ | Black |
| B11 | Yellow | ■ ■ ■ | Red |
| B12 | Light green | ■ ■ ■ | Black |
| B13 | Light green | ■ ■ ■ | Red |
| — | | | Shield |

- LEFS
- LEJB
- LEJ
- LEL
- LEM
- LEY
- LESH
- LEPY
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

Compatible actuators

LEF LEY LES

Controller (Step Data Input Type) Servo Motor (24 VDC)

LECA6 Series



LECA6 Series



How to Order


⚠ Caution

[CE-compliant products]

- EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.
- For the LECA6 series (servo motor controller), EMC compliance was tested by installing a noise filter set (LEC-NFA). Refer to page 713 for the noise filter set. Refer to the LECA Operation Manual for installation.

[UL-compliant products]

When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

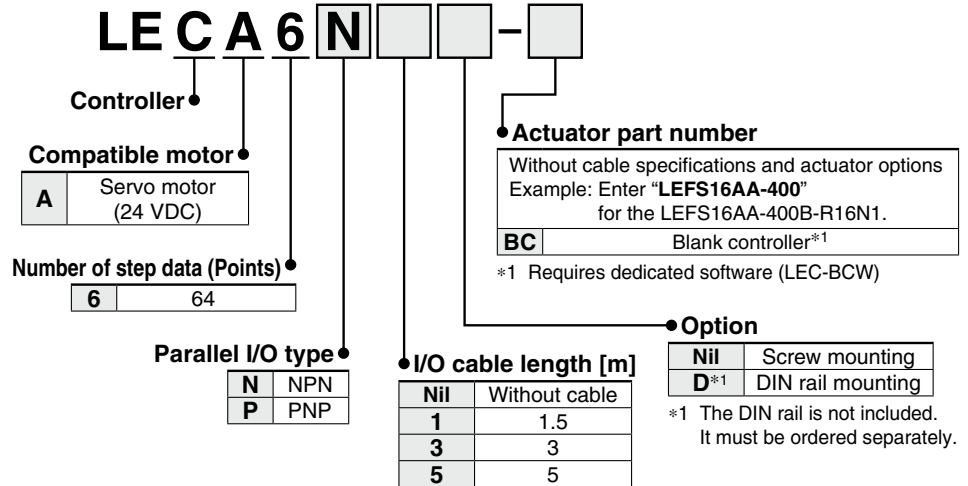


* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

- Check the actuator label for the model number. This number should match that of the controller.
- Check that the Parallel I/O configuration matches (NPN or PNP).

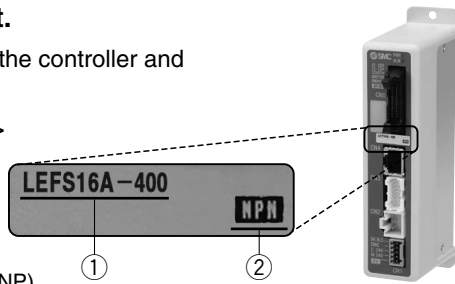

Precautions for blank controllers (LEC□6□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the communication cable for controller setting (LEC-W2A-C) separately to use this software.

SMC website:

<https://www.smcworld.com>

* Refer to the operation manual for using the products. Please download it via our website: <https://www.smcworld.com>

Specifications

Basic Specifications

| Item | LECA6 |
|----------------------------------|--|
| Compatible motor | Servo motor (24 VDC) |
| Power supply*1 | Power voltage: 24 VDC ±10%*2 [Including motor drive power, control power, stop, lock release] |
| Parallel input | 11 inputs (Photo-coupler isolation) |
| Parallel output | 13 outputs (Photo-coupler isolation) |
| Compatible encoder | Incremental A/B (800 pulse/rotation)/Z phase |
| Serial communication | RS485 (Modbus protocol compliant) |
| Memory | EEPROM |
| LED indicator | LED (Green/Red) one of each |
| Lock control | Forced-lock release terminal*3 |
| Cable length [m] | I/O cable: 5 or less, Actuator cable: 20 or less |
| Cooling system | Natural air cooling |
| Operating temperature range [°C] | 0 to 40 (No freezing) |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Storage temperature range [°C] | -10 to 60 (No freezing) |
| Storage humidity range [%RH] | 90 or less (No condensation) |
| Insulation resistance [MΩ] | Between the housing and SG terminal: 50 (500 VDC) |
| Weight [g] | 150 (Screw mounting), 170 (DIN rail mounting) |


*1 Do not use the power supply of "inrush current prevention type" for the controller power supply. When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

*2 The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


*3 Applicable to non-magnetizing locks

How to Mount

a) Screw mounting (LECA6□□-□) (Installation with two M4 screws)

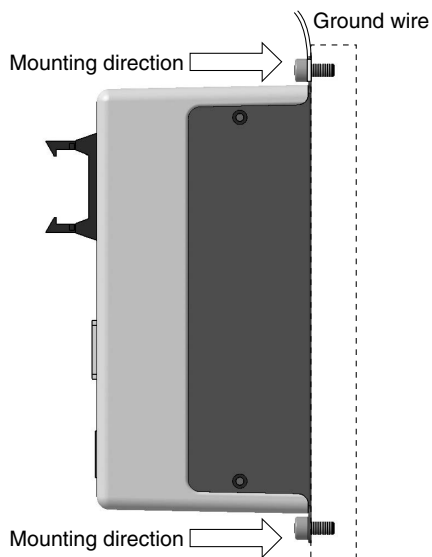

b) DIN rail mounting (LECA6□□D-□) (Installation with the DIN rail)

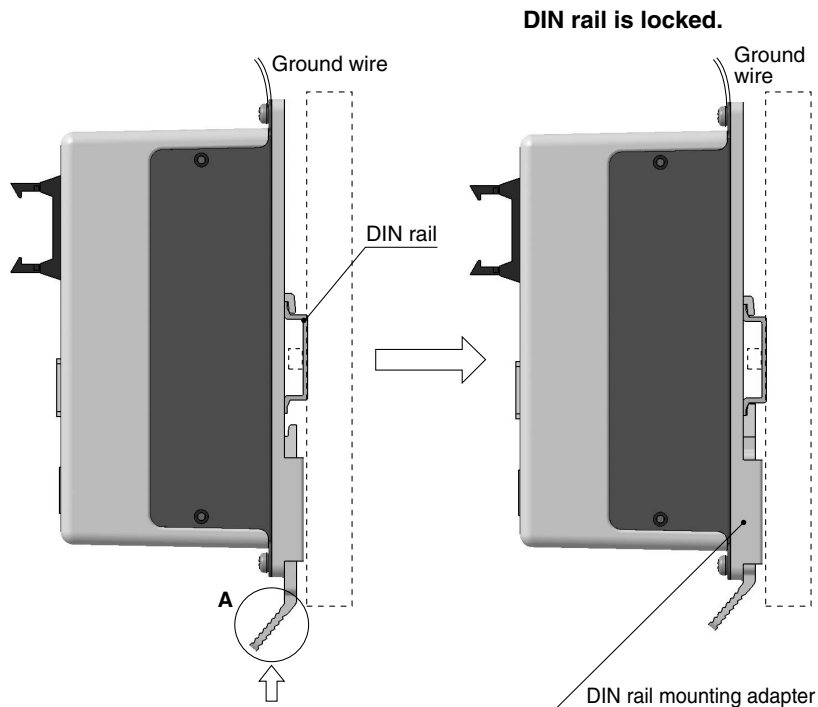


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

* When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings on page 709 for the mounting dimensions.

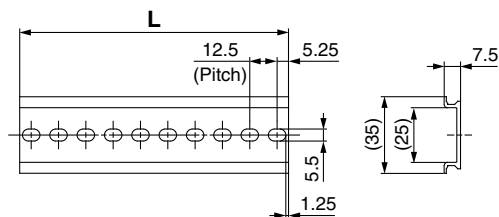

L Dimensions [mm]

| | | | | | | | | | | | | | | | | | | | | |
|----------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |

DIN rail mounting adapter LEC-D0 (with 2 mounting screws)


This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC□
- JXC□
- LECS□
- LECS□-T
- LECY□
- Motorless
- LAT3


LECA6 Series

Dimensions

a) Screw mounting (LECA6□□-□)

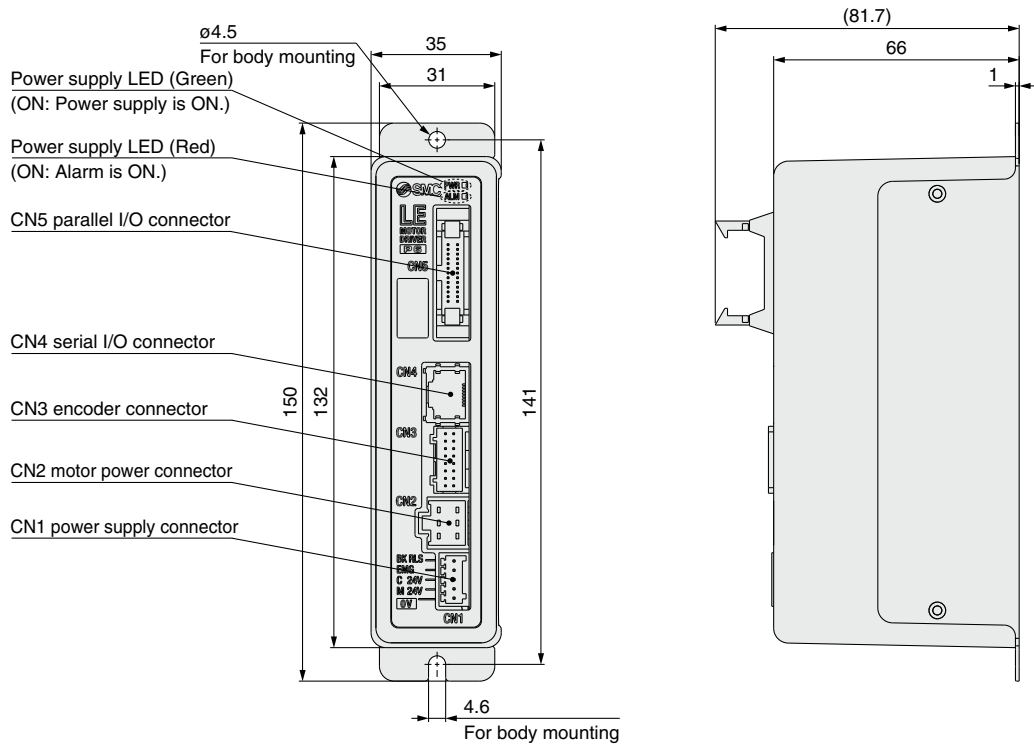

b) DIN rail mounting (LECA6□□D-□)

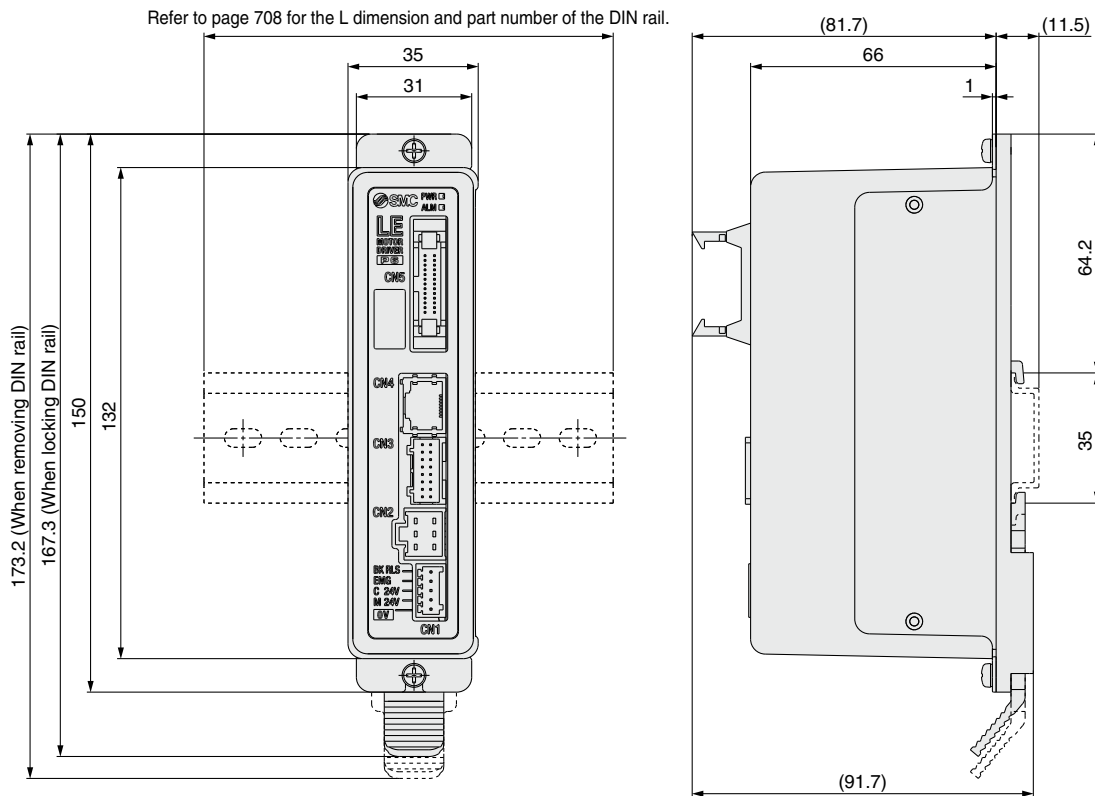


Wiring Example 1

Power Supply Connector: CN1 * The power supply plug is an accessory.
 <Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

CN1 Power Supply Connector Terminal for LECA6 (PHOENIX CONTACT FK-MC0.5/7-ST-2.5)

| Terminal name | Function | Details |
|---------------|--------------------------|--|
| 0V | Common supply (-) | The M 24V terminal, C 24V terminal, EMG terminal, and BK RLS terminal are common (-). |
| M 24V | Motor power supply (+) | Motor power supply (+) supplied to the controller |
| C 24V | Control power supply (+) | Control power supply (+) supplied to the controller |
| EMG | Stop (+) | Input (+) for releasing the stop |
| BK RLS | Lock release (+) | Input (+) for releasing the lock |
| RG+ | Regenerative output 1 | Regenerative output terminals for external connection |
| RG- | Regenerative output 2 | (Not necessary to connect them in the combination with the LE series standard specifications.) |

Power supply plug for LECA6: LEC-D-1-2

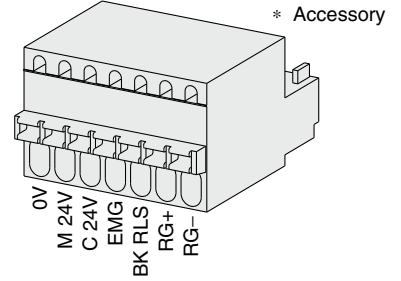


Wiring Example 2


Parallel I/O Connector: CN5 * When you connect a PLC to the CN5 parallel I/O connector, use the I/O cable (LEC-CN5-□).
 * The wiring changes depending on the type of parallel I/O (NPN or PNP).

Wiring diagram

LECA6N□□□□ (NPN)

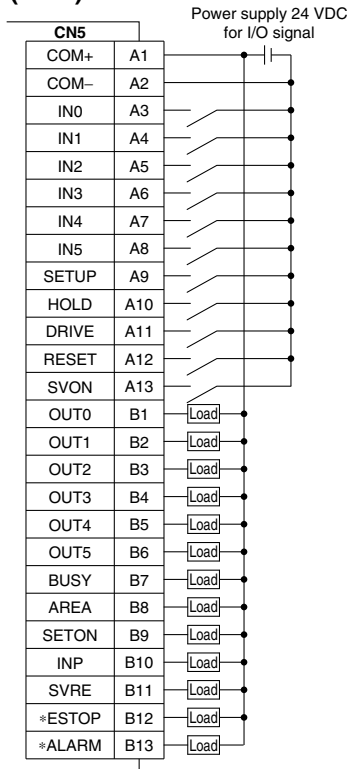

LECA6P□□□□ (PNP)

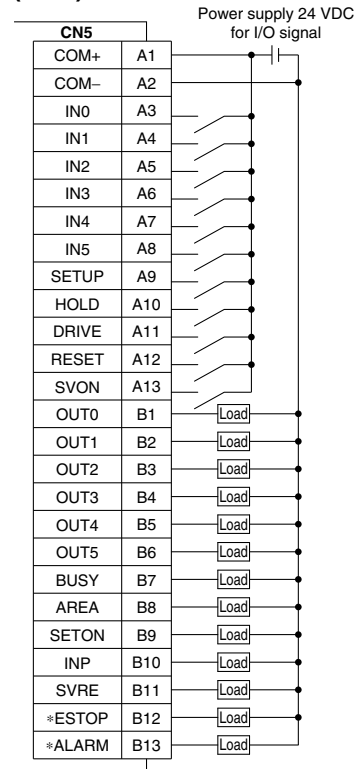

Input Signal

| Name | Details |
|------------|--|
| COM+ | Connects the power supply 24 V for input/output signal |
| COM- | Connects the power supply 0 V for input/output signal |
| IN0 to IN5 | Step data specified bit no. (Input is instructed by combining IN0 to 5.) |
| SETUP | Instruction to return to origin |
| HOLD | Temporarily stops operation |
| DRIVE | Instruction to drive |
| RESET | Resets alarm and interrupts operation |
| SVON | Servo ON instruction |

Output Signal

| Name | Details |
|----------------------|--|
| OUT0 to OUT5 | Outputs the step data no. during operation |
| BUSY | Outputs when the actuator is moving |
| AREA | Outputs within the step data area output setting range |
| SETON | Outputs when returning to origin |
| INP | Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.) |
| SVRE | Outputs when servo is ON |
| *ESTOP* ¹ | OFF when EMG stop is instructed |
| *ALARM* ¹ | OFF when alarm is generated |

*¹ Negative-logic (N.C.) circuit signal

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3


LECA6 Series

Step Data Setting

1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

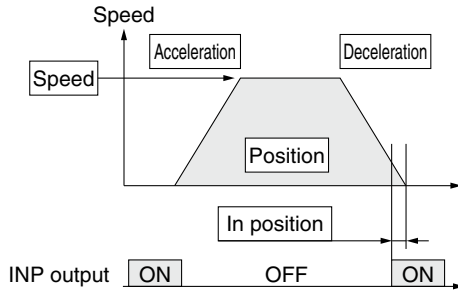

- ◎ : Need to be set.
- : Need to be adjusted as required.
- : Setting is not required.


Step Data (Positioning)

| Necessity | Item | Details |
|-----------|----------------|--|
| ◎ | Movement MOD | When the absolute position is required, set Absolute. When the relative position is required, set Relative. |
| ◎ | Speed | Transfer speed to the target position |
| ◎ | Position | Target position |
| ○ | Acceleration | Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set. |
| ○ | Deceleration | Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops. |
| ◎ | Pushing force | Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.) |
| — | Trigger LV | Setting is not required. |
| — | Pushing speed | Setting is not required. |
| ○ | Moving force | Max. torque during the positioning operation (No specific change is required.) |
| ○ | Area 1, Area 2 | Condition that turns on the AREA output signal. |
| ○ | In position | Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger. |

2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

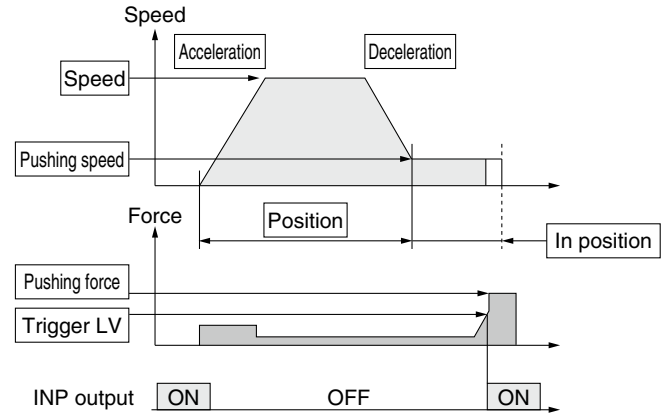


- ◎ : Need to be set.
- : Need to be adjusted as required.

Step Data (Pushing)

| Necessity | Item | Details |
|-----------|----------------|---|
| ◎ | Movement MOD | When the absolute position is required, set Absolute. When the relative position is required, set Relative. |
| ◎ | Speed | Transfer speed to the pushing start position |
| ◎ | Position | Pushing start position |
| ○ | Acceleration | Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set. |
| ○ | Deceleration | Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops. |
| ◎ | Pushing force | Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator. |
| ◎ | Trigger LV | Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less. |
| ○ | Pushing speed | Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator. |
| ○ | Moving force | Max. torque during the positioning operation (No specific change is required.) |
| ○ | Area 1, Area 2 | Condition that turns on the AREA output signal. |
| ◎ | In position | Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on. |


Signal Timing

Return to Origin

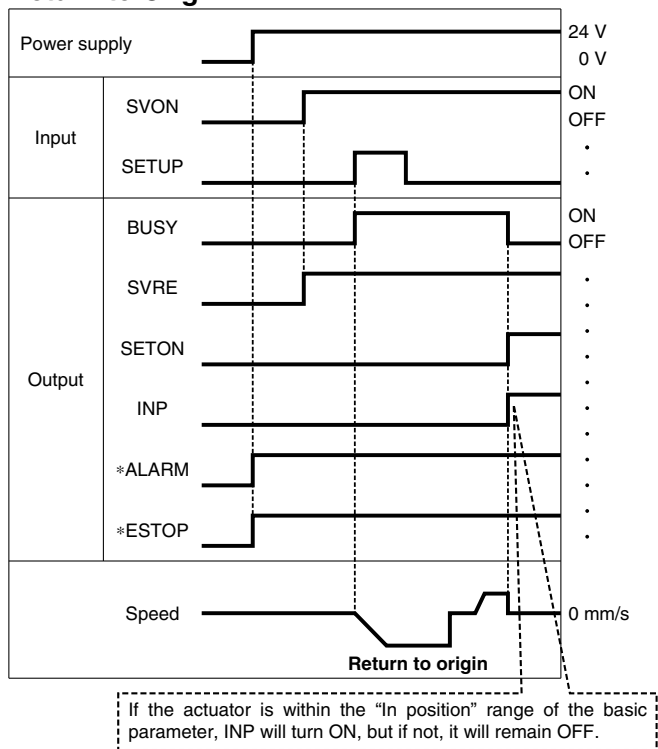


* *ALARM and *ESTOP are expressed as negative-logic circuits.

Positioning Operation

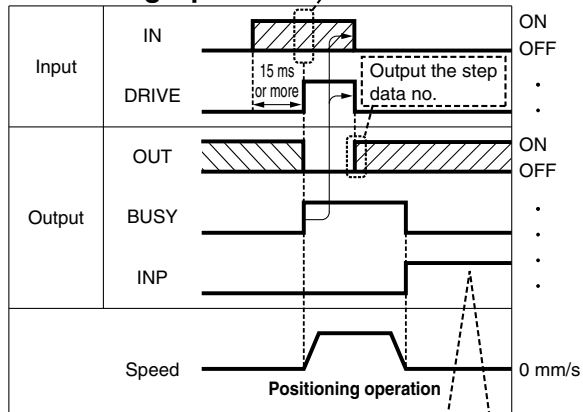


* "OUT" is output when "DRIVE" is changed from ON to OFF. Refer to the operation manual for details on the controller for the LEM series. (When power supply is applied, "DRIVE" or "RESET" is turned ON or *ESTOP is turned OFF, all of the "OUT" outputs are OFF.)

HOLD

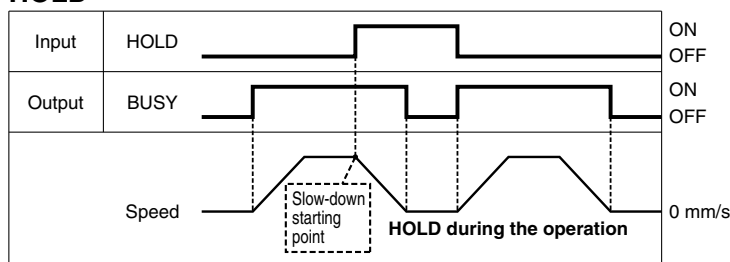


* When the actuator is within the "In position" range in the pushing operation, it does not stop even if HOLD signal is input.

Pushing Operation

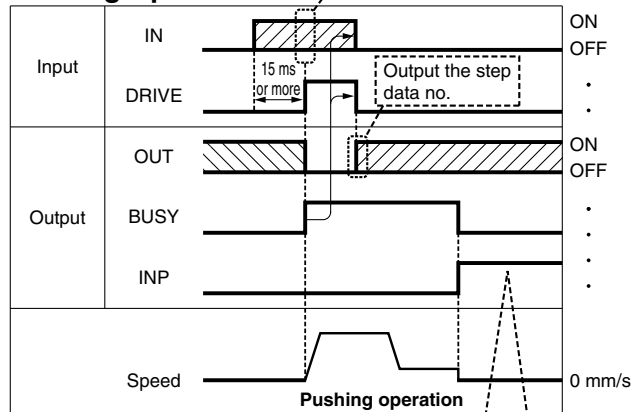

Reset

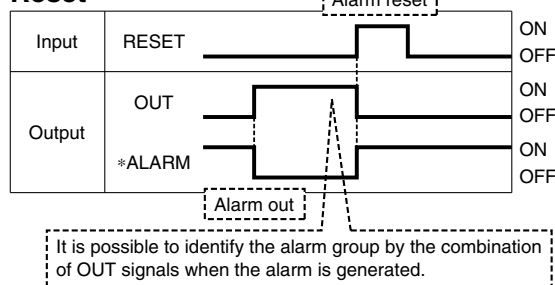

* *ALARM is expressed as a negative-logic circuit.

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

LECA6 Series

Option: I/O Cable

LEC-CN5-1


Cable length (L) [m]

| | |
|---|-----|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

* Conductor size: AWG28

Weight

| Product no. | Weight [g] |
|-------------|------------|
| LEC-CN5-1 | 170 |
| LEC-CN5-3 | 320 |
| LEC-CN5-5 | 520 |

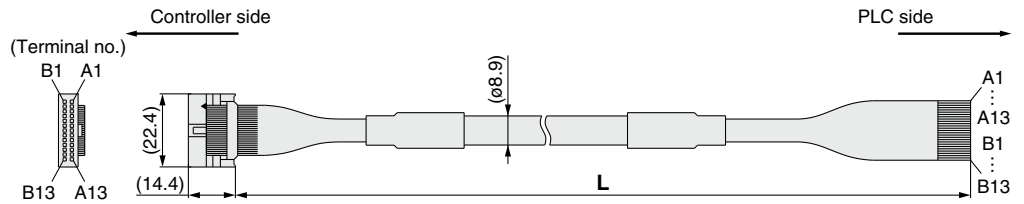


| Connector pin no. | Insulation color | Dot mark | Dot color |
|-------------------|------------------|----------|-----------|
| A1 | Light brown | ■ | Black |
| A2 | Light brown | ■ | Red |
| A3 | Yellow | ■ | Black |
| A4 | Yellow | ■ | Red |
| A5 | Light green | ■ | Black |
| A6 | Light green | ■ | Red |
| A7 | Gray | ■ | Black |
| A8 | Gray | ■ | Red |
| A9 | White | ■ | Black |
| A10 | White | ■ | Red |
| A11 | Light brown | ■ ■ | Black |
| A12 | Light brown | ■ ■ | Red |
| A13 | Yellow | ■ ■ | Black |

| Connector pin no. | Insulation color | Dot mark | Dot color |
|-------------------|------------------|----------|-----------|
| B1 | Yellow | ■ ■ | Red |
| B2 | Light green | ■ ■ | Black |
| B3 | Light green | ■ ■ | Red |
| B4 | Gray | ■ ■ | Black |
| B5 | Gray | ■ ■ | Red |
| B6 | White | ■ ■ | Black |
| B7 | White | ■ ■ | Red |
| B8 | Light brown | ■ ■ ■ | Black |
| B9 | Light brown | ■ ■ ■ | Red |
| B10 | Yellow | ■ ■ ■ | Black |
| B11 | Yellow | ■ ■ ■ | Red |
| B12 | Light green | ■ ■ ■ | Black |
| B13 | Light green | ■ ■ ■ | Red |
| — | | Shield | |

Option: Noise Filter Set for Servo Motor (24 VDC)

LEC-NFA

Contents of the set: 2 noise filters (Manufactured by WURTH ELEKTRONIK: 74271222)

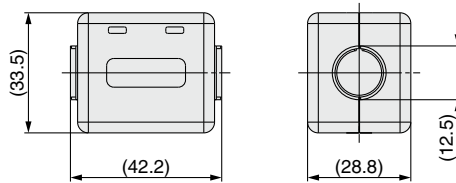

* Refer to the LECA6 series Operation Manual for installation.

| |
|--------------------|
| LAT3 |
| Motorless |
| LECY □ |
| LECS □ LECS □-T |
| JXC □ |
| LEC □ |
| 25A- |
| 11-LEJS |
| 11-LEFS |
| LEY-X5 |
| LEH |
| LER |
| LEPY LEPS |
| LES LESH |
| LEY LEYG |
| LEM |
| LEL |
| LEJS LEJB |
| LEFS LEFB |

Gateway Unit

LEC-G Series



How to Order

⚠ Caution

[CE-compliant products]
EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]
When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Gateway unit LEC-G MJ2

Applicable Fieldbus protocols

| | |
|------------|------------------|
| MJ2 | CC-Link Ver. 2.0 |
| DN1 | DeviceNet™ |
| PR1 | PROFIBUS DP |
| EN1 | EtherNet/IP™ |

Mounting

| | |
|------------|----------------|
| Nil | Screw mounting |
| D*1 | DIN rail |

*1 The DIN rail is not included. It must be ordered separately.



Cable


LEC-CG 1-L

Cable type

| | |
|----------|------------------------|
| 1 | Communication cable |
| 2 | Cable between branches |

Cable length

| | |
|----------|-------|
| K | 0.3 m |
| L | 0.5 m |
| 1 | 1 m |

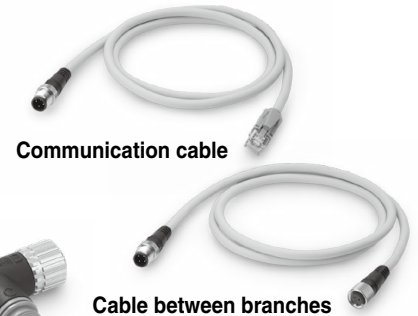

Branch connector LEC-CGD

Branch connector

Terminating resistor LEC-CGR

Specifications

| Model | | LEC-GMJ2□ | LEC-GDN1□ | LEC-GPR1□ | LEC-GEN1□ |
|----------------------------------|---|--|-------------------------------------|---|-------------------------------------|
| Communication specifications | Applicable system | Fieldbus Ver. 2.0 | DeviceNet™ Release 2.0 | PROFIBUS DP V1 | EtherNet/IP™ Release 1.0 |
| | Communication speed [bps] | 156 k/625 k/2.5 M /5 M/10 M | 125 k/250 k/500 k | 9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 M | 10 M/100 M |
| | Configuration file*2 | — | EDS file | GSD file | EDS file |
| | I/O occupation area | 4 stations occupied (8 times setting) Input 896 points 108 words Output 896 points 108 words | Input 200 bytes Output 200 bytes | Input 57 words Output 57 words | Input 256 bytes Output 256 bytes |
| | Power supply for communication | Power supply voltage [V]*6 Internal current consumption [mA] | — — | 11 to 25 VDC 100 | — — |
| | Communication connector specifications | Connector (Accessory) | Connector (Accessory) | D-sub | RJ45 |
| | Terminating resistor | Not included | Not included | Not included | Not included |
| | Power supply voltage [V]*6 | 24 VDC ±10% | | | |
| Current consumption [mA] | Not connected to teaching box | 200 | | | |
| | Connected to teaching box | 300 | | | |
| EMG output terminal | 30 VDC 1 A | | | | |
| Controller specifications | Applicable controllers | LECA6 Series | | | |
| | Communication speed [bps]*3 | 115.2 k/230.4 k | | | |
| | Max. number of connectable controllers*4 | 12 | 8*5 | 5 | 12 |
| Accessories | Power supply connector, communication connector | | Power supply connector | | |
| Operating temperature range [°C] | 0 to 40 (No freezing) | | | | |
| Operating humidity range [%RH] | 90 or less (No condensation) | | | | |
| Storage temperature range [°C] | -10 to 60 (No freezing) | | | | |
| Storage humidity range [%RH] | 90 or less (No condensation) | | | | |
| Weight [g] | 200 (Screw mounting), 220 (DIN rail mounting) | | | | |

*1 Please note that versions are subject to change.

*2 Each file can be downloaded from the SMC website.

*3 When using a teaching box (LEC-T1-□), set the communication speed to 115.2 kbps.

*4 A communication response time for 1 controller is approximately 30 ms.


Refer to the "Communication Response Time Guideline" for response times when several controllers are connected.

*5 For step data input, up to 12 controllers connectable.

*6 When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Communication Response Time Guideline

Response time between gateway unit and controllers depends on the number of controllers connected to the gateway unit. For response time, refer to the graph below.

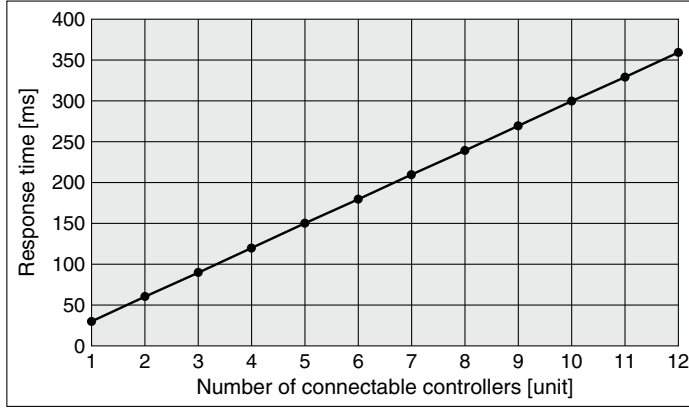


* This graph shows delay times between gateway unit and controllers. Fieldbus network delay time is not included.


Dimensions

Screw mounting (LEC-G□□□□)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

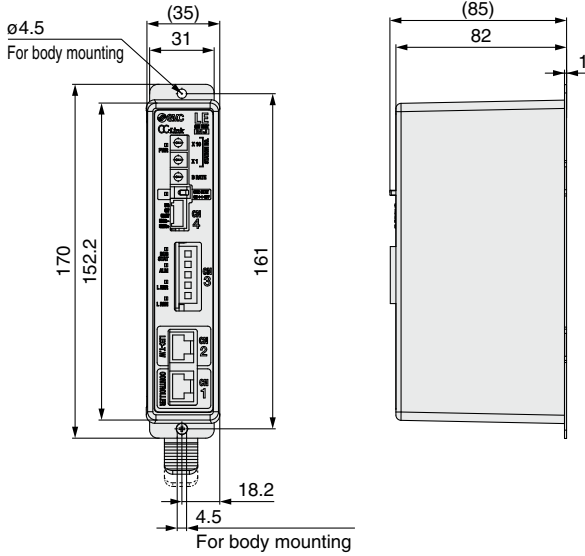


Applicable Fieldbus protocol: DeviceNet™

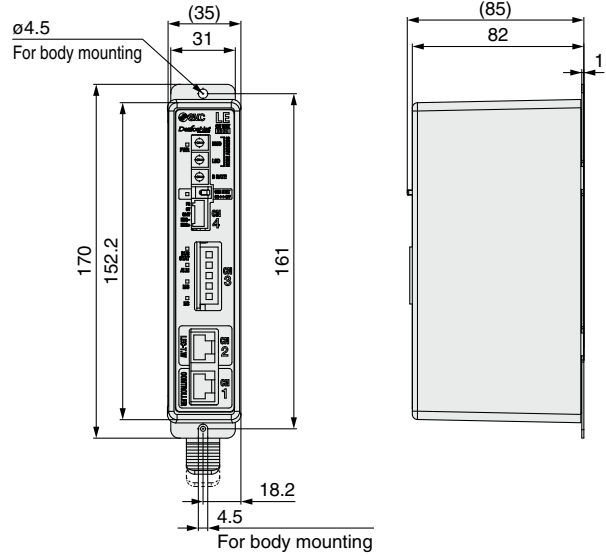

Applicable Fieldbus protocol: PROFIBUS DP

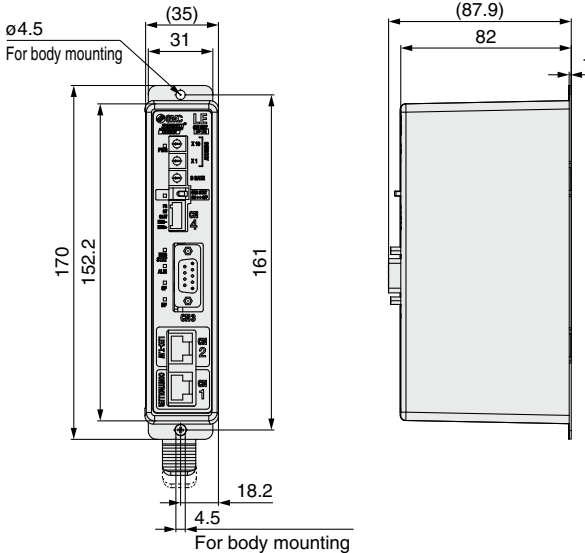

Applicable Fieldbus protocol: EtherNet/IP™

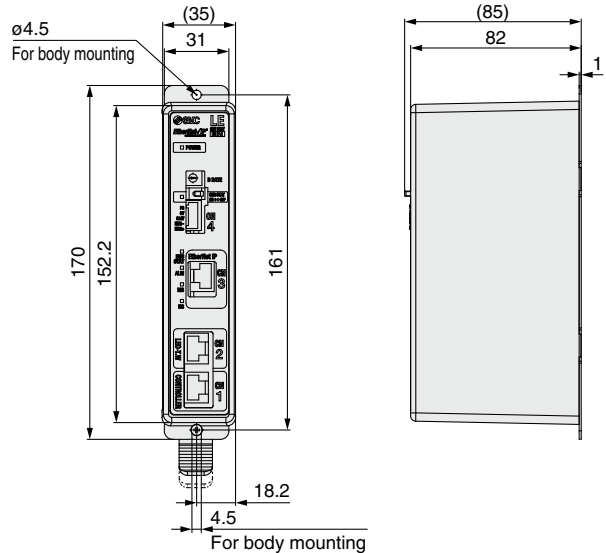

■ Trademark DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.


- LEFS
- LEJBS
- LEL
- LEM
- LEY
- LES
- LEPY
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECY
- Motorless
- LAT3

LEC-G Series


Dimensions

DIN rail mounting (LEC-G□□□D)


Applicable Fieldbus protocol: CC-Link Ver. 2.0

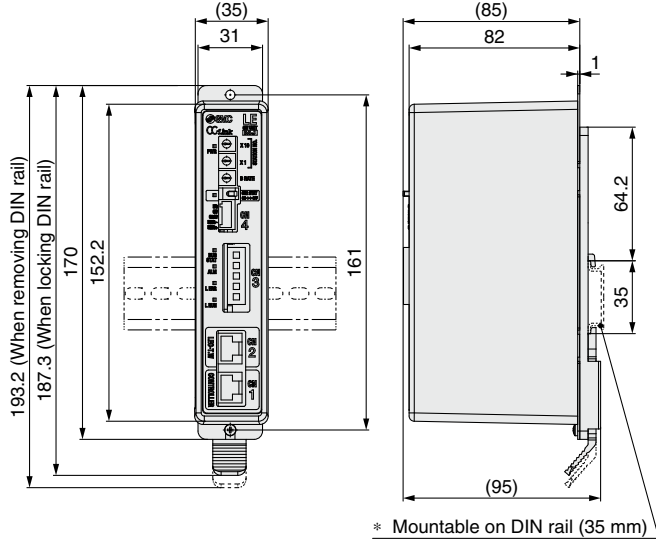


Applicable Fieldbus protocol: DeviceNet™

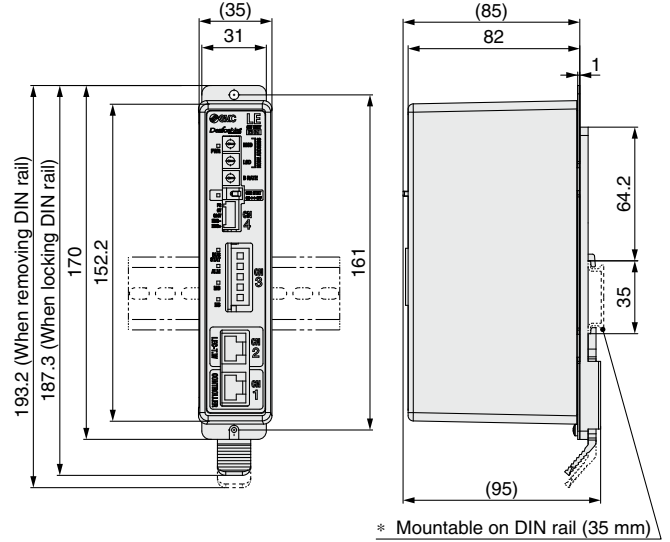

Applicable Fieldbus protocol: PROFIBUS DP

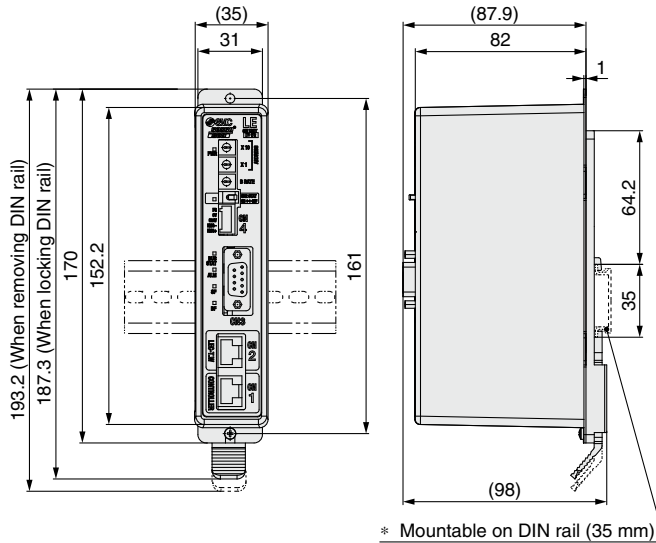


Applicable Fieldbus protocol: EtherNet/IP™

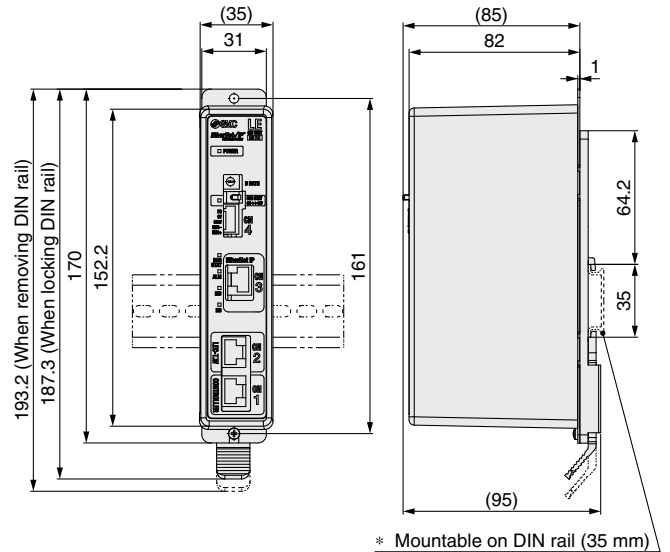

DIN rail

AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings above for the mounting dimensions.

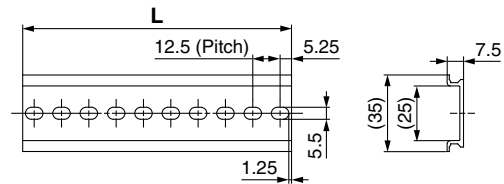

L Dimensions [mm]

| | | | | | | | | | | | | | | | | | | | | |
|-----|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |

■ Trademark DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.


Wiring Example

Power Supply Connector: CN1 * The power supply plug is an accessory.
 <Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

CN1 Power Supply Connector Terminal for LEC-G (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

| Terminal name | Function | Details |
|---------------|-------------------------|--|
| EMG + | EMG signal output + | Output terminal of the emergency stop switch of the teaching box |
| EMG - | EMG signal output - | |
| 24V | Power supply + terminal | Power supply terminal of the Gateway unit (Power to the teaching box is supplied from this terminal) |
| 0V | Power supply - terminal | |
| FG | FG terminal | Grounding terminal |

Power supply plug for LEC-G: LEC-D-1-1 * Accessory

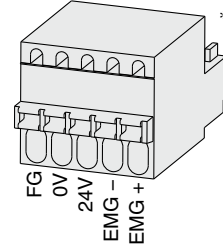

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

Compatible actuators

LEF LEL LEM
LEY LES LEP
LER LEH

Programless Controller

LECP1 Series



How to Order

LECP1N1 - **LEFS16A-400**

Controller

Compatible motor

| | |
|----------|---------------------------|
| P | Step motor (Servo/24 VDC) |
|----------|---------------------------|

Number of step data (Points)

| | |
|----------|------------------|
| 1 | 14 (Programless) |
|----------|------------------|

Parallel I/O type

| | |
|----------|-----|
| N | NPN |
| P | PNP |

Option

| | |
|------------|-------------------|
| Nil | Screw mounting |
| D*1 | DIN rail mounting |

*1 The DIN rail is not included. It must be ordered separately.

I/O cable length [m]

| | |
|------------|---------------|
| Nil | Without cable |
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

Actuator part number

(Without cable specifications and actuator options)
Example: Enter "LEFS16A-400" for the LEFS16A-400B-R11N1.

* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LE series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

* Refer to the operation manual for using the products. Please download it via our website: <https://www.smcworld.com>

Specifications

Basic Specifications

| Item | LECP1 |
|---|--|
| Compatible motor | Step motor (Servo/24 VDC) |
| Power supply*1 | Power supply voltage: 24 VDC ±10%*2 [Including the motor drive power, control power supply, stop, lock release] |
| Parallel input | 6 inputs (Photo-coupler isolation) |
| Parallel output | 6 outputs (Photo-coupler isolation) |
| Stop points | 14 points (Position number 1 to 14(E)) |
| Compatible encoder | Incremental A/B phase (800 pulse/rotation) |
| Memory | EEPROM |
| LED indicator | LED (Green/Red) one of each |
| 7-segment LED display*3 | 1 digit, 7-segment display (Red) Figures are expressed in hexadecimal ("10" to "15" in decimal number are expressed as "A" to "F") |
| Lock control | Forced-lock release terminal*4 |
| Cable length [m] | I/O cable: 5 or less, Actuator cable: 20 or less |
| Cooling system | Natural air cooling |
| Operating temperature range [°C] | 0 to 40 (No freezing) |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Storage temperature range [°C] | -10 to 60 (No freezing) |
| Storage humidity range [%RH] | 90 or less (No condensation) |
| Insulation resistance [MΩ] | Between the housing and SG terminal: 50 (500 VDC) |
| Weight [g] | 130 (Screw mounting), 150 (DIN rail mounting) |

*1 Do not use the power supply of "inrush current prevention type" for the controller input power supply. When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

*2 The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual, etc., for details.


*3 "10" to "15" in decimal number are displayed as follows in the 7-segment LED.



Decimal display 10 11 12 13 14 15
Hexadecimal display A b c d E F

*4 Applicable to non-magnetizing locks

Controller Details

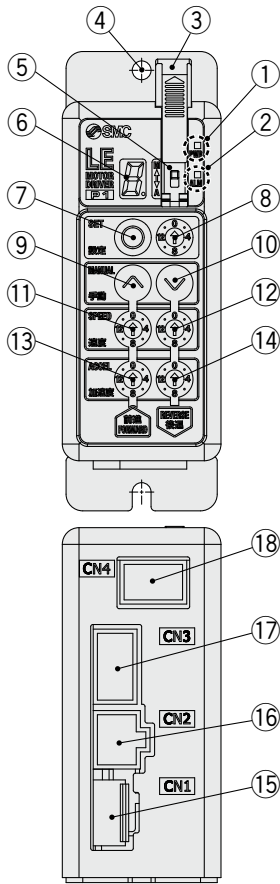


| No. | Display | Description | Details |
|-----|---------------|-----------------------------|---|
| ① | PWR | Power supply LED | Power supply ON/Servo ON : Green turns on Power supply ON/Servo OFF : Green flashes |
| ② | ALM | Alarm LED | With alarm : Red turns on Parameter setting : Red flashes |
| ③ | — | Cover | Change and protection of the mode switch (Close the cover after changing switch) |
| ④ | — | FG | Frame ground (Tighten the screw with the washer when mounting the controller. Connect the ground wire.) |
| ⑤ | — | Mode switch | Switch the mode between manual and auto. |
| ⑥ | — | 7-segment LED | Stop position, the value set by ⑧ and alarm information are displayed. |
| ⑦ | SET | Set button | Decide the settings or drive operation in Manual mode. |
| ⑧ | — | Position selecting switch | Assign the position to drive (1 to 14), and the origin position (15). |
| ⑨ | MANUAL | Manual forward button | Perform forward jog and inching. |
| ⑩ | | Manual reverse button | Perform reverse jog and inching. |
| ⑪ | SPEED | Forward speed switch | 16 forward speeds are available. |
| ⑫ | | Reverse speed switch | 16 reverse speeds are available. |
| ⑬ | ACCEL | Forward acceleration switch | 16 forward acceleration steps are available. |
| ⑭ | | Reverse acceleration switch | 16 reverse acceleration steps are available. |
| ⑮ | CN1 | Power supply connector | Connect the power supply cable. |
| ⑯ | CN2 | Motor connector | Connect the motor connector. |
| ⑰ | CN3 | Encoder connector | Connect the encoder connector. |
| ⑱ | CN4 | I/O connector | Connect I/O cable. |

How to Mount

Controller mounting shown below.


1. Mounting screw (LECP1□□-□)

(Installation with two M4 screws)

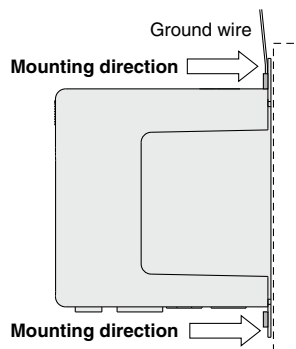

2. Grounding

Tighten the screw with the washer when mounting the ground wire as shown below.

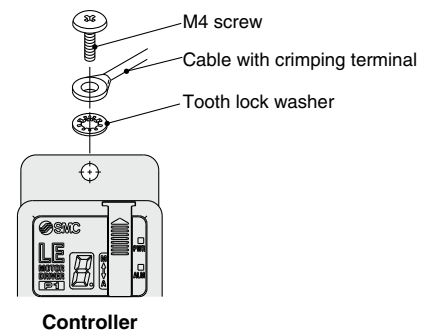


* When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

Size

End width **L**: 2.0 to 2.4 [mm]
End thickness **W**: 0.5 to 0.6 [mm]

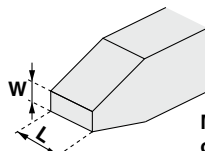

Magnified view of the end of the screwdriver


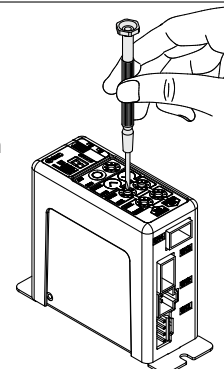


LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC□
JXC□
LECS□
LECS□-T
LECY□
Motorless
LAT3


LECP1 Series

Dimensions

Screw mounting (LECP1□□-□)

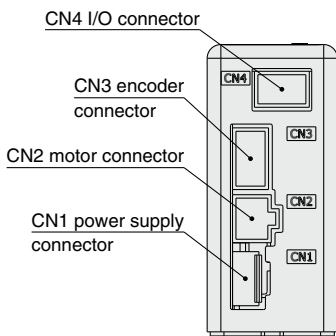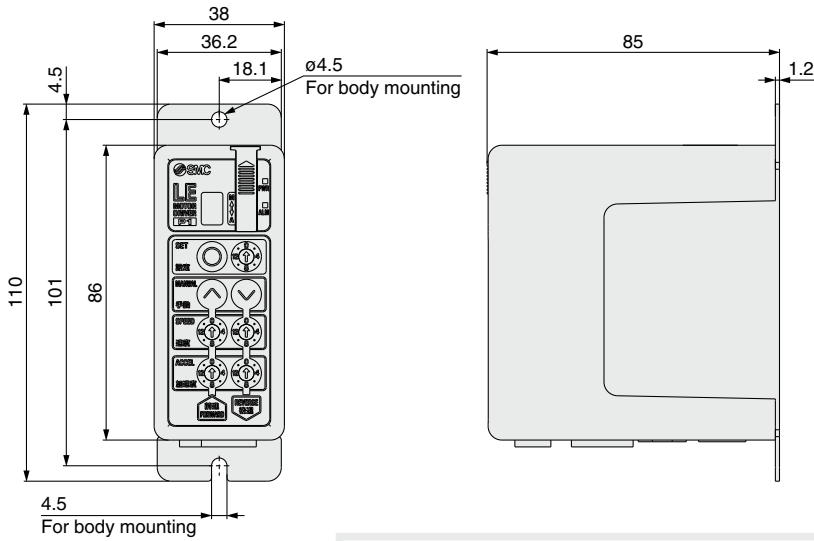


DIN rail mounting (LECP1□□D-□)

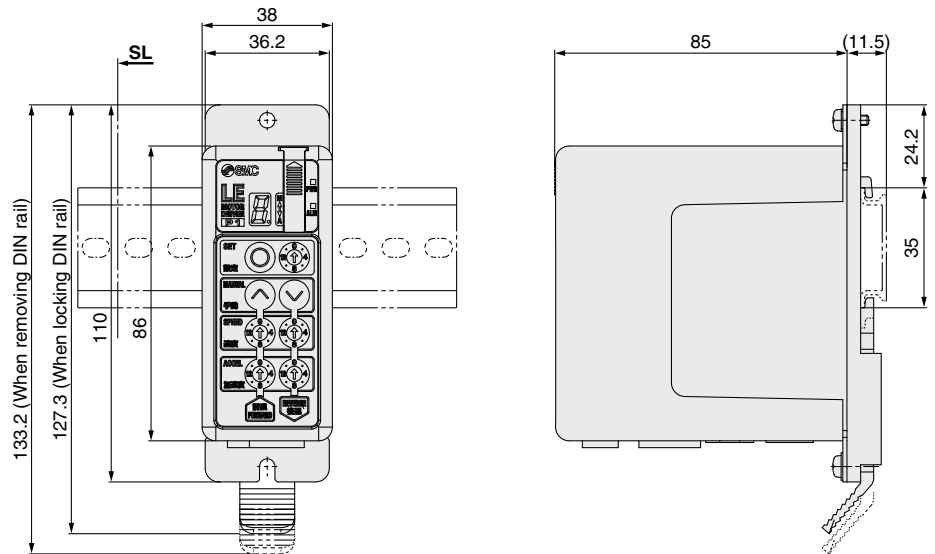

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings above for the mounting dimensions.

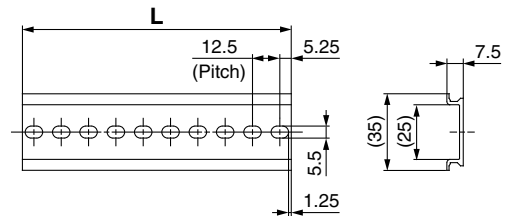

L Dimensions [mm]

| | | | | | | | | | | | | | | |
|-----|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 |
| No. | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| L | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 |
| No. | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | | |
| L | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 | | |

DIN rail mounting adapter LEC-1-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.


Wiring Example 1

Power Supply Connector: CN1 * When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1).
 * The power supply cable (LEC-CK1-1) is an accessory.

CN1 Power Supply Connector Terminal for LECP1

| Terminal name | Cable color | Function | Details |
|---------------|-------------|--------------------------|---|
| 0V | Blue | Common supply (-) | The M 24V terminal, C 24V terminal, and BK RLS terminal are common (-). |
| M 24V | White | Motor power supply (+) | Motor power supply (+) supplied to the controller |
| C 24V | Brown | Control power supply (+) | Control power supply (+) supplied to the controller |
| BK RLS | Black | Lock release (+) | Input (+) for releasing the lock |


Power supply cable for LECP1 (LEC-CK1-1)




Wiring Example 2

Parallel I/O Connector: CN4 * When you connect a PLC to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□).
 * The wiring changes depending on the type of parallel I/O (NPN or PNP).

■NPN

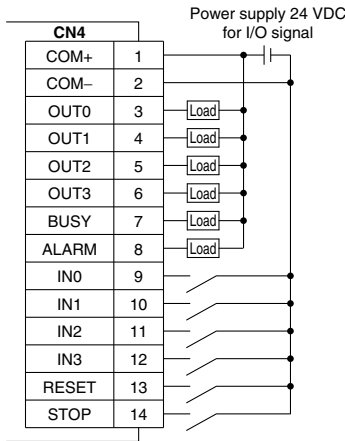

■PNP

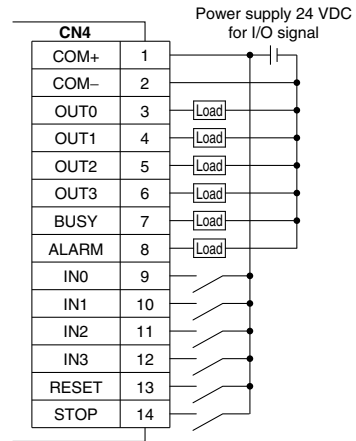

Input Signal

| Name | Details | | | | | | | | |
|------------|--|-----|-----|-----|-----|-----|----|-----|----|
| COM+ | Connects the power supply 24 V for input/output signal | | | | | | | | |
| COM- | Connects the power supply 0 V for input/output signal | | | | | | | | |
| IN0 to IN3 | <ul style="list-style-type: none"> Instruction to drive (input as a combination of IN0 to IN3) Instruction to return to origin (IN0 to IN3 all ON simultaneously) Example - (instruction to drive for position no. 5) <table border="1" style="margin-left: 20px;"> <tr> <td>IN3</td> <td>IN2</td> <td>IN1</td> <td>IN0</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> </table> | IN3 | IN2 | IN1 | IN0 | OFF | ON | OFF | ON |
| IN3 | IN2 | IN1 | IN0 | | | | | | |
| OFF | ON | OFF | ON | | | | | | |
| RESET | Alarm reset and operation interruption During operation: deceleration stop from position at which signal is input (servo ON maintained) While alarm is generated: alarm reset | | | | | | | | |
| STOP | Instruction to stop (after maximum deceleration stop, servo OFF) | | | | | | | | |

Input Signal [IN0 - IN3] Position Number Chart ○: OFF ●: ON

| Position number | IN3 | IN2 | IN1 | IN0 |
|------------------|-----|-----|-----|-----|
| 1 | ○ | ○ | ○ | ● |
| 2 | ○ | ○ | ● | ○ |
| 3 | ○ | ○ | ● | ● |
| 4 | ○ | ● | ○ | ○ |
| 5 | ○ | ● | ○ | ● |
| 6 | ○ | ● | ○ | ○ |
| 7 | ○ | ● | ● | ● |
| 8 | ● | ○ | ○ | ○ |
| 9 | ● | ○ | ○ | ● |
| 10 (A) | ● | ○ | ● | ○ |
| 11 (B) | ● | ○ | ● | ● |
| 12 (C) | ● | ● | ○ | ○ |
| 13 (D) | ● | ● | ○ | ● |
| 14 (E) | ● | ● | ● | ○ |
| Return to origin | ● | ● | ● | ● |

Output Signal

| Name | Details | | | | | | | | |
|--------------|---|------|------|------|------|-----|-----|----|----|
| OUT0 to OUT3 | Turns ON when the positioning or pushing is completed. (Output is instructed in the combination of OUT0 to 3.) Example - (operation complete for position no. 3) <table border="1" style="margin-left: 20px;"> <tr> <td>OUT3</td> <td>OUT2</td> <td>OUT1</td> <td>OUT0</td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> </table> | OUT3 | OUT2 | OUT1 | OUT0 | OFF | OFF | ON | ON |
| OUT3 | OUT2 | OUT1 | OUT0 | | | | | | |
| OFF | OFF | ON | ON | | | | | | |
| BUSY | Outputs when the actuator is moving | | | | | | | | |
| *1 ALARM*1 | OFF when alarm is generated or servo OFF | | | | | | | | |

*1 Negative-logic (N.C.) circuit signal

Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON


| Position number | OUT3 | OUT2 | OUT1 | OUT0 |
|------------------|------|------|------|------|
| 1 | ○ | ○ | ○ | ● |
| 2 | ○ | ○ | ● | ○ |
| 3 | ○ | ○ | ● | ● |
| 4 | ○ | ● | ○ | ○ |
| 5 | ○ | ● | ○ | ● |
| 6 | ○ | ● | ○ | ○ |
| 7 | ○ | ● | ● | ● |
| 8 | ● | ○ | ○ | ○ |
| 9 | ● | ○ | ○ | ● |
| 10 (A) | ● | ○ | ● | ○ |
| 11 (B) | ● | ○ | ● | ● |
| 12 (C) | ● | ● | ○ | ○ |
| 13 (D) | ● | ● | ○ | ● |
| 14 (E) | ● | ● | ● | ○ |
| Return to origin | ● | ● | ● | ● |

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEJ
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3

LECP1 Series


Signal Timing

(1) Return to Origin

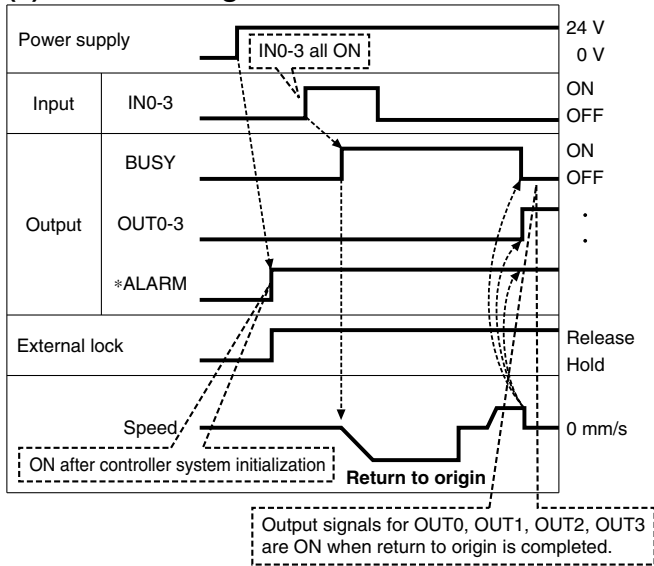


* *ALARM" is expressed as a negative-logic circuit.


(2) Positioning Operation

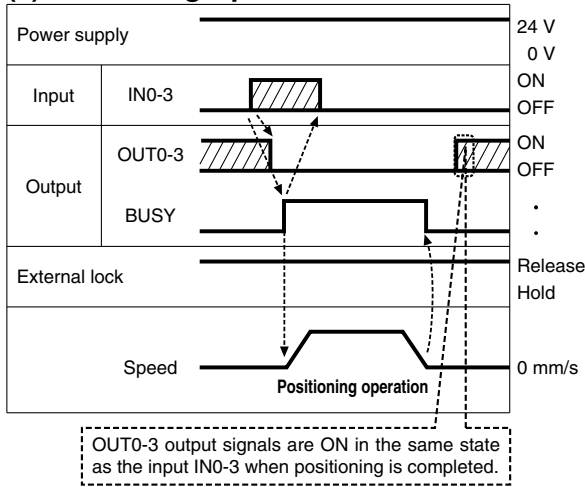


(4) Stop by the STOP Signal

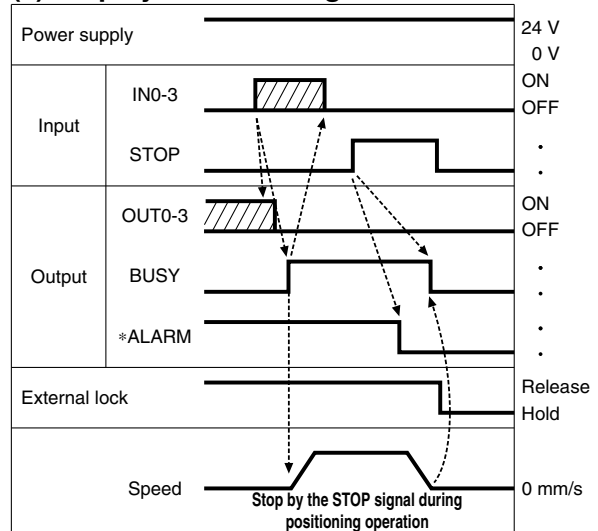

(3) Cut-off Stop (Reset Stop)

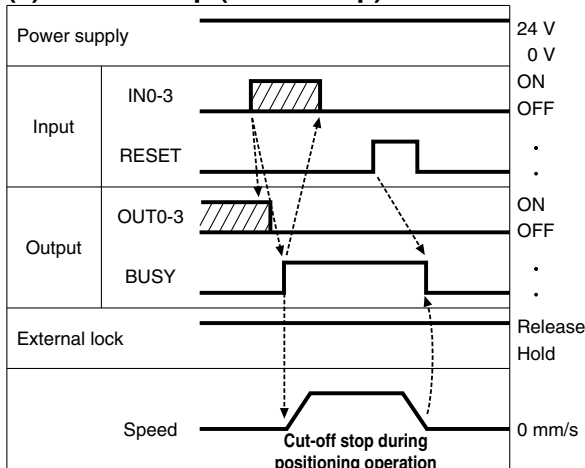

(5) Alarm Reset

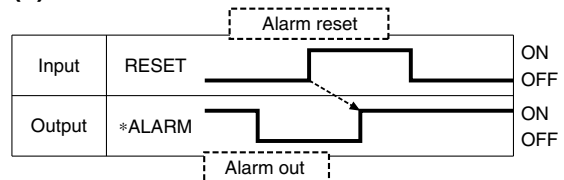


* *ALARM" is expressed as a negative-logic circuit.

Options

[Power supply cable]

LEC-CK1-1

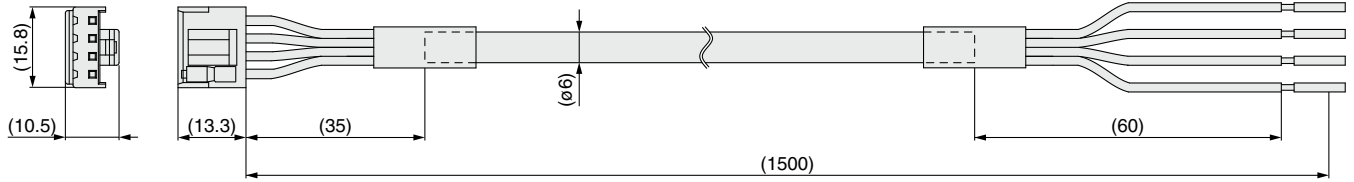

| Terminal name | Covered color | Function |
|---------------|---------------|--------------------------|
| 0V | Blue | Common supply (-) |
| M 24V | White | Motor power supply (+) |
| C 24V | Brown | Control power supply (+) |
| BK RLS | Black | Lock release (+) |

* Conductor size: AWG20


Weight: 90 g

[I/O cable]

LEC-CK4-□

Cable length (L) [m]

| | |
|---|-----|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

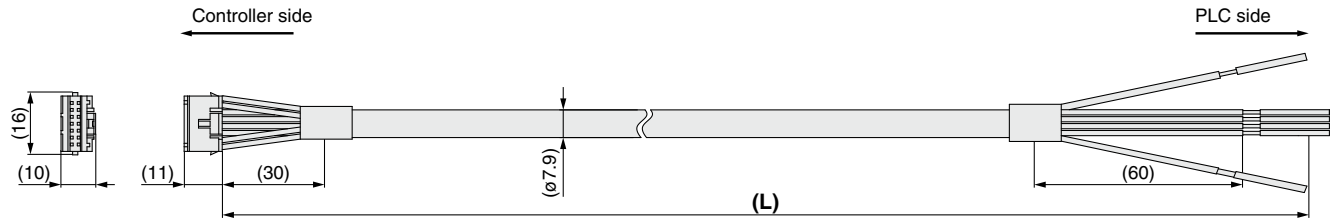

| Terminal no. | Insulation color | Dot mark | Dot color | Function |
|--------------|------------------|----------|-----------|----------|
| 1 | Light brown | ■ | Black | COM+ |
| 2 | Light brown | ■ | Red | COM- |
| 3 | Yellow | ■ | Black | OUT0 |
| 4 | Yellow | ■ | Red | OUT1 |
| 5 | Light green | ■ | Black | OUT2 |
| 6 | Light green | ■ | Red | OUT3 |
| 7 | Gray | ■ | Black | BUSY |
| 8 | Gray | ■ | Red | ALARM |
| 9 | White | ■ | Black | IN0 |
| 10 | White | ■ | Red | IN1 |
| 11 | Light brown | ■ ■ | Black | IN2 |
| 12 | Light brown | ■ ■ | Red | IN3 |
| 13 | Yellow | ■ ■ | Black | RESET |
| 14 | Yellow | ■ ■ | Red | STOP |

* Conductor size: AWG26

Weight

| Product no. | Weight [g] |
|-------------|------------|
| LEC-CK4-1 | 100 |
| LEC-CK4-3 | 200 |
| LEC-CK4-5 | 330 |

* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

Programless Controller (With Stroke Study)




Compatible actuator

LEM

LECP2 Series



How to Order

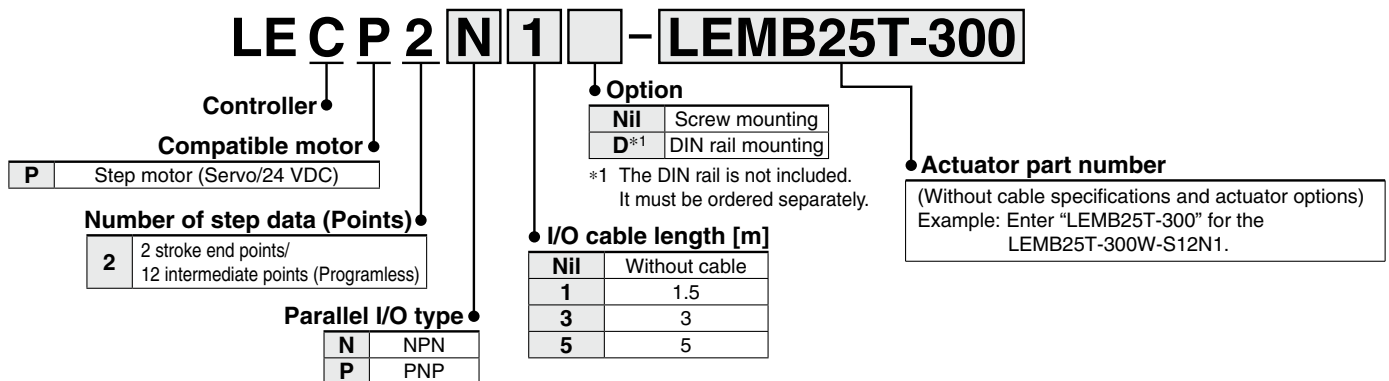

⚠ Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

[UL-compliant products]

When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

* Refer to the operation manual for using the products. Please download it via our website: <https://www.smcworld.com>

Specifications

Basic Specifications

| Item | LECP2 |
|----------------------------------|---|
| Compatible motor | Step motor (Servo/24 VDC) |
| Power supply*1 | Power supply voltage: 24 VDC $\pm 10\%$ *2 [Including motor drive power, control power, stop, lock release] |
| Parallel input | 6 inputs (Photo-coupler isolation) |
| Parallel output | 6 outputs (Photo-coupler isolation) |
| Stop points | Stroke ends 2 points (Position number 1 and 2), Intermediate position 12 points (Position number 3 to 14(E)) |
| Compatible encoder | Incremental A/B phase (800 pulse/rotation) |
| Memory | EEPROM |
| LED indicator | LED (Green/Red) one of each |
| 7-segment LED display*3 | 1 digit, 7-segment display (Red) Figures are expressed in hexadecimal. ("10" to "15" in decimal number are expressed as "A" to "F") |
| Lock control | Forced-lock release terminal*4 |
| Cable length [m] | I/O cable: 5 or less, Actuator cable: 20 or less |
| Cooling system | Natural air cooling |
| Operating temperature range [°C] | 0 to 40 (No freezing) |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Storage temperature range [°C] | -10 to 60 (No freezing) |
| Storage humidity range [%RH] | 90 or less (No condensation) |
| Insulation resistance [MΩ] | Between the housing and SG terminal: 50 (500 VDC) |
| Weight [g] | 130 (Screw mounting), 150 (DIN rail mounting) |

*1 Do not use the power supply of "inrush current prevention type" for the controller input power supply. When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

*2 The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual, etc., for details.


*3 "10" to "15" in decimal number are displayed as follows in the 7-segment LED.



Decimal display 10 11 12 13 14 15
Hexadecimal display A b c d E F

*4 Applicable to non-magnetizing locks

Controller Details

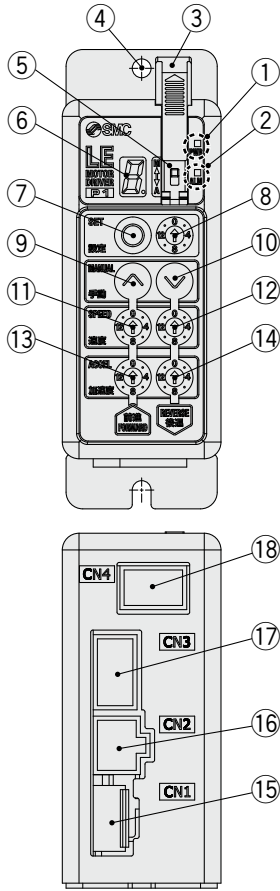


| No. | Display | Description | Details |
|-----|---------------|-----------------------------|---|
| ① | PWR | Power supply LED | Power supply ON/Servo ON : Green turns on. Power supply ON/Servo OFF: Green flashes. |
| ② | ALM | Alarm LED | With alarm : Red turns on. Parameter setting : Red flashes. |
| ③ | — | Cover | Change and protection of the mode switch (Close the cover after changing switch.) |
| ④ | — | FG | Frame ground (Tighten the screw with the washer when mounting the controller. Connect the ground wire.) |
| ⑤ | — | Mode switch | Switch the mode between manual and auto. |
| ⑥ | — | 7-segment LED | Stop position, the value set by ⑧ and alarm information are displayed. |
| ⑦ | SET | Set button | Decide the settings or drive operation in manual mode. |
| ⑧ | — | Position selecting switch | Assign the position to drive (1 to 14), and the origin position (15). |
| ⑨ | MANUAL | Manual forward button | Perform forward jog and inching. |
| ⑩ | | Manual reverse button | Perform reverse jog and inching. |
| ⑪ | SPEED | Forward speed switch | 16 forward speeds are available. |
| ⑫ | | Reverse speed switch | 16 reverse speeds are available. |
| ⑬ | ACCEL | Forward acceleration switch | 16 forward acceleration steps are available. |
| ⑭ | | Reverse acceleration switch | 16 reverse acceleration steps are available. |
| ⑮ | CN1 | Power supply connector | Connect the power supply cable. |
| ⑯ | CN2 | Motor connector | Connect the motor connector. |
| ⑰ | CN3 | Encoder connector | Connect the encoder connector. |
| ⑱ | CN4 | I/O connector | Connect the I/O cable. |

How to Mount

Controller mounting shown below


1. Screw mounting (LECP2□□-□)

(Installation with two M4 screws)

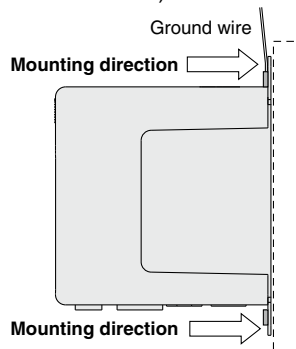

2. Grounding

Tighten the screw with the washer when mounting the ground wire as shown below.

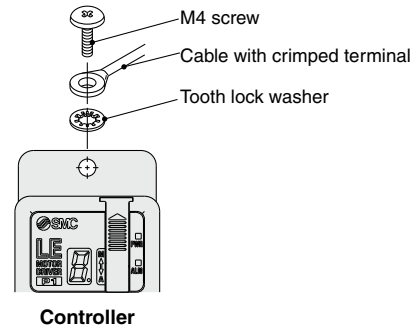


* The space between the controllers should be 10 mm or more.

⚠ Caution


- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch ⑧ and the set value of the speed/acceleration switch ⑪ to ⑭.

Size

End width **L**: 2.0 to 2.4 [mm]
End thickness **W**: 0.5 to 0.6 [mm]

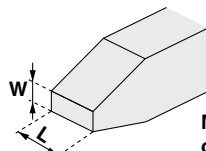

Magnified view of the end of the screwdriver


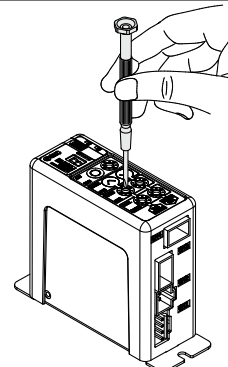


LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3


LECP2 Series

Dimensions

Screw mounting (LEC□2□□-□)

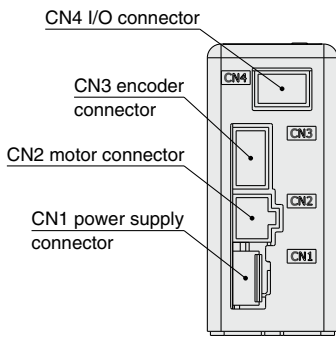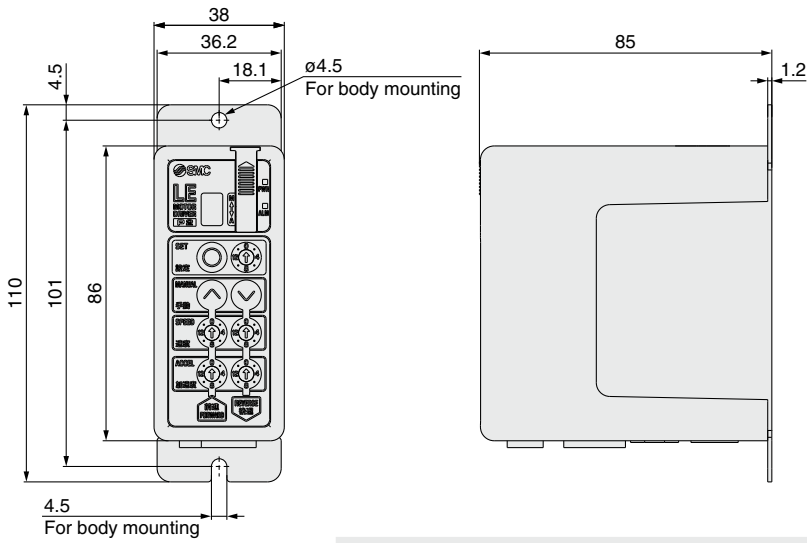


DIN rail mounting (LEC□2□□D-□)

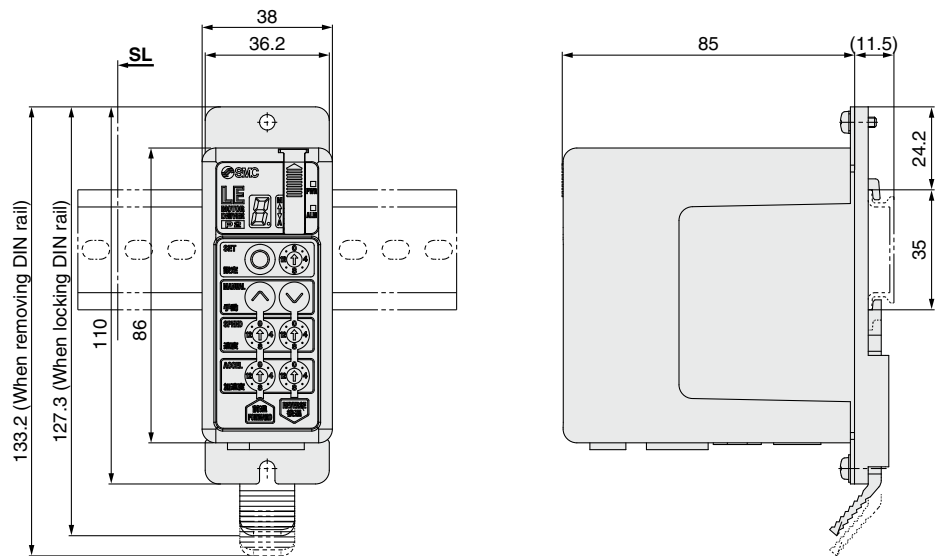

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings above for the mounting dimensions.

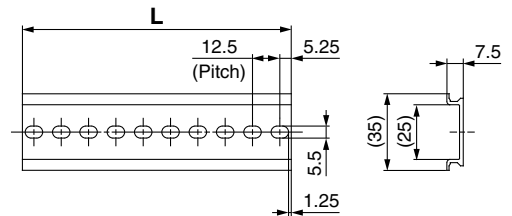

L Dimension [mm]

| | | | | | | | | | | | | | | |
|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 |
| No. | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| L | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 |
| No. | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | |
| L | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 | |

DIN rail mounting adapter LEC-1-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.


Wiring Example 1

Power Supply Connector: CN1 * When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1).
* The power supply cable (LEC-CK1-1) is an accessory.

CN1 Power Supply Connector Terminal for LECP2

| Terminal name | Cable color | Function | Details |
|---------------|-------------|--------------------------|---|
| 0V | Blue | Common supply (-) | The M 24V terminal, C 24V terminal, and BK RLS terminal are common (-). |
| M 24V | White | Motor power supply (+) | Motor power supply (+) supplied to the controller |
| C 24V | Brown | Control power supply (+) | Control power supply (+) supplied to the controller |
| BK RLS | Black | Lock release (+) | Input (+) for releasing the lock |


Power supply cable for LECP2 (LEC-CK1-1)




Wiring Example 2

Parallel I/O Connector: CN4 * When you connect a PLC to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□).
* The wiring changes depending on the type of the parallel I/O (NPN or PNP).

■ NPN

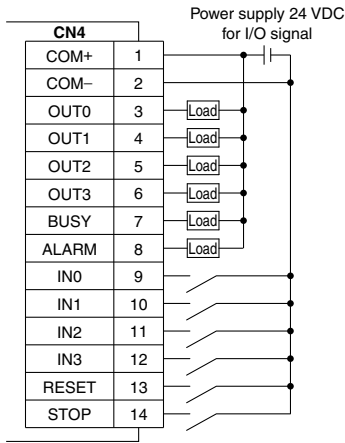

■ PNP

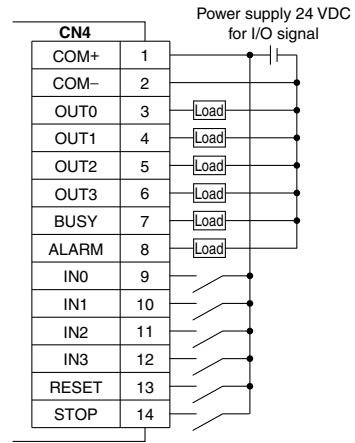

Input Signal

| Name | Details | | | | | | | | |
|------------|---|-----|-----|-----|-----|-----|----|-----|----|
| COM+ | Connects the power supply 24 V for input/output signal | | | | | | | | |
| COM- | Connects the power supply 0 V for input/output signal | | | | | | | | |
| IN0 to IN3 | <ul style="list-style-type: none"> Instruction to drive (input as a combination of IN0 to IN3) Example - (instruction to drive for position no. 5) <table border="1"> <tr> <td>IN3</td> <td>IN2</td> <td>IN1</td> <td>IN0</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> </table> Instruction to return to origin (After the power is turned ON, first turn on IN0 or IN1. Return to origin using IN0: Return to origin by moving to the extended end. Return to origin using IN1: Return to origin by moving to the motor end.) | IN3 | IN2 | IN1 | IN0 | OFF | ON | OFF | ON |
| IN3 | IN2 | IN1 | IN0 | | | | | | |
| OFF | ON | OFF | ON | | | | | | |
| RESET | Alarm reset and operation interruption During operation: deceleration stop from position at which signal is input (servo ON maintained) While alarm is generated: alarm reset | | | | | | | | |
| STOP | Instruction to stop (after maximum deceleration stop, servo OFF) | | | | | | | | |

Input Signal [IN0 - IN3] Position Number Chart ○: OFF ●: ON

| Position number | IN3 | IN2 | IN1 | IN0 |
|-----------------|-----|-----|-----|-----|
| 1 (End side) | ○ | ○ | ○ | ● |
| 2 (Motor side) | ○ | ○ | ● | ○ |
| 3 | ○ | ○ | ● | ○ |
| 4 | ○ | ● | ○ | ○ |
| 5 | ○ | ● | ○ | ● |
| 6 | ○ | ● | ● | ○ |
| 7 | ○ | ● | ● | ● |
| 8 | ● | ○ | ○ | ○ |
| 9 | ● | ○ | ○ | ● |
| 10 (A) | ● | ○ | ● | ○ |
| 11 (B) | ● | ○ | ● | ○ |
| 12 (C) | ● | ● | ○ | ○ |
| 13 (D) | ● | ● | ○ | ● |
| 14 (E) | ● | ● | ● | ○ |

Output Signal

| Name | Details | | | | | | | | |
|----------------------|--|------|------|------|------|-----|-----|----|----|
| OUT0 to OUT3 | <ul style="list-style-type: none"> Positioning completion (input as a combination of OUT0 to OUT3) Example - (positioning completion for position no. 3) <table border="1"> <tr> <td>OUT3</td> <td>OUT2</td> <td>OUT1</td> <td>OUT0</td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> </table> Return to origin completion (Completion of return to origin using IN0: Only OUT0 is ON.) (Completion of return to origin using IN1: Only OUT1 is ON.) | OUT3 | OUT2 | OUT1 | OUT0 | OFF | OFF | ON | ON |
| OUT3 | OUT2 | OUT1 | OUT0 | | | | | | |
| OFF | OFF | ON | ON | | | | | | |
| BUSY | Outputs when the actuator is moving | | | | | | | | |
| *ALARM* ¹ | OFF when alarm is generated or servo OFF | | | | | | | | |

*1 Negative-logic (N.C.) circuit signal

Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON


| Position number | OUT3 | OUT2 | OUT1 | OUT0 |
|-----------------|------|------|------|------|
| 1 (End side) | ○ | ○ | ○ | ● |
| 2 (Motor side) | ○ | ○ | ○ | ○ |
| 3 | ○ | ○ | ● | ● |
| 4 | ○ | ● | ○ | ○ |
| 5 | ○ | ● | ○ | ○ |
| 6 | ○ | ● | ○ | ○ |
| 7 | ○ | ● | ○ | ○ |
| 8 | ● | ○ | ○ | ○ |
| 9 | ● | ○ | ○ | ○ |
| 10 (A) | ● | ○ | ○ | ○ |
| 11 (B) | ● | ○ | ○ | ○ |
| 12 (C) | ● | ○ | ○ | ○ |
| 13 (D) | ● | ○ | ○ | ○ |
| 14 (E) | ● | ○ | ○ | ○ |

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3


LECP2 Series

Signal Timing


(1) Positioning Operation [Driving to the stroke end]

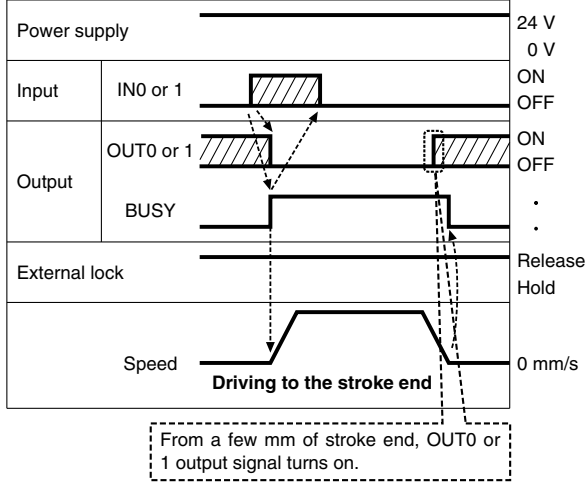


(2) Positioning Operation [Driving to the intermediate position]

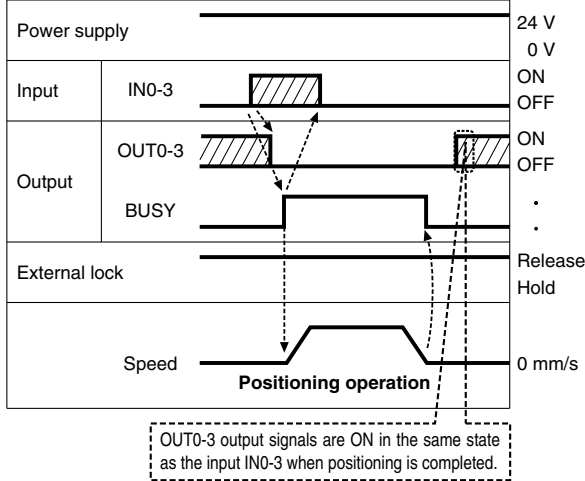


(3) Cut-off Stop (Reset Stop)

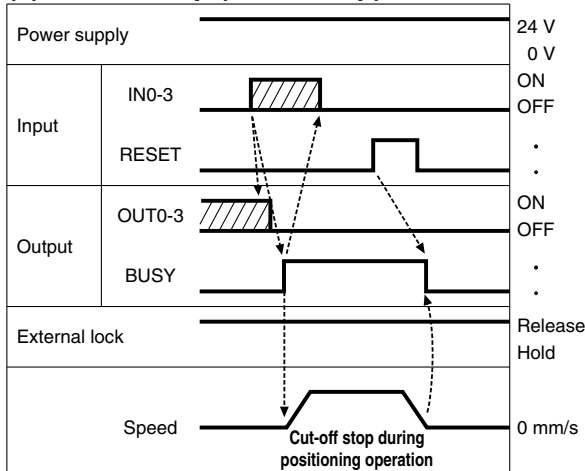

(4) Stop by the STOP Signal

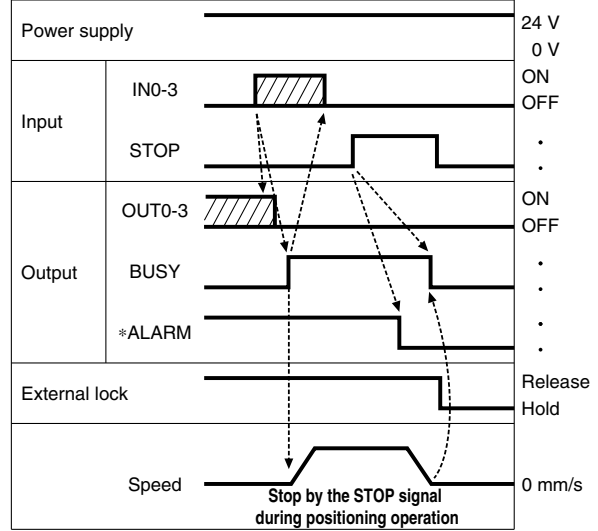

(5) Alarm Reset

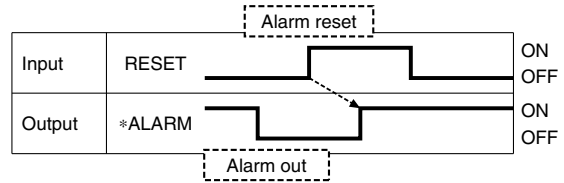


*ALARM is expressed as a negative-logic circuit.

Options

[Power supply cable]

LEC-CK1-1

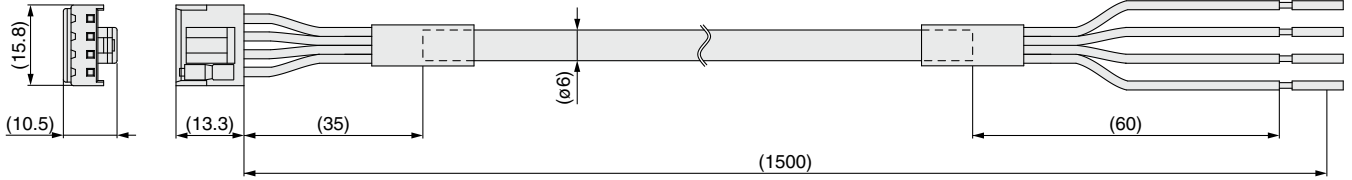

| Terminal name | Covered color | Function |
|---------------|---------------|--------------------------|
| 0V | Blue | Common supply (-) |
| M 24V | White | Motor power supply (+) |
| C 24V | Brown | Control power supply (+) |
| BK RLS | Black | Lock release (+) |

* Conductor size: AWG20


Weight: 90 g

[I/O cable]

LEC-CK4-

Cable length (L) [m]

| | |
|---|-----|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

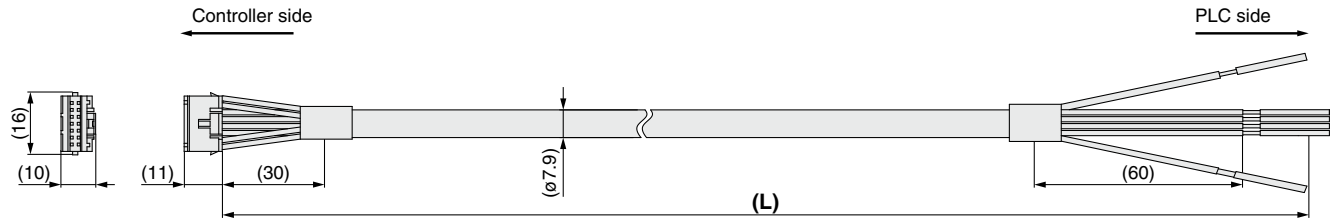

| Terminal no. | Insulation color | Dot mark | Dot color | Function |
|--------------|------------------|----------|-----------|----------|
| 1 | Light brown | ■ | Black | COM+ |
| 2 | Light brown | ■ | Red | COM- |
| 3 | Yellow | ■ | Black | OUT0 |
| 4 | Yellow | ■ | Red | OUT1 |
| 5 | Light green | ■ | Black | OUT2 |
| 6 | Light green | ■ | Red | OUT3 |
| 7 | Gray | ■ | Black | BUSY |
| 8 | Gray | ■ | Red | ALARM |
| 9 | White | ■ | Black | IN0 |
| 10 | White | ■ | Red | IN1 |
| 11 | Light brown | ■ ■ | Black | IN2 |
| 12 | Light brown | ■ ■ | Red | IN3 |
| 13 | Yellow | ■ ■ | Black | RESET |
| 14 | Yellow | ■ ■ | Red | STOP |

* Conductor size: AWG26

Weight

| Product no. | Weight [g] |
|-------------|------------|
| LEC-CK4-1 | 100 |
| LEC-CK4-3 | 200 |
| LEC-CK4-5 | 330 |

* Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

LEFS
LEFB

LEJS
LEJB

LEL

LEM

LEY
LEYG

LES
LESH

LEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC

JXC

LECS
LECS-T

LECY

Motorless

LAT3

Compatible actuators



Step Motor Driver

LECPA Series



How to Order

⚠ Caution

[CE-compliant products]

① EMC compliance was tested by combining the electric actuator LE series and the LECPA series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

② For the LECPA series (step motor driver), EMC compliance was tested by installing a noise filter set (LEC-NFA).

Refer to page 736 for the noise filter set. Refer to the LECPA Operation Manual for installation.

[UL-compliant products]

When compliance with UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

LECP AN 1 □ - LEFS16B-100

Driver type

| | |
|----|------------------------|
| AN | Pulse input type (NPN) |
| AP | Pulse input type (PNP) |

I/O cable length [m]

| | |
|-----|------|
| Nil | None |
| 1 | 1.5 |
| 3 | 3*1 |
| 5 | 5*1 |

*1 Pulse input usable only with differential. Only 1.5 m cables usable with open collector.

Driver mounting

| | |
|-----|----------------|
| Nil | Screw mounting |
| D*1 | DIN rail |

*1 The DIN rail is not included. It must be ordered separately.

Actuator part number

Without cable specifications and actuator options
Example: Enter "LEFS16B-100"
for the LEFS16B-100B-R1AN1D.

| | |
|----|--------------------|
| BC | Blank controller*1 |
|----|--------------------|

*1 Requires dedicated software (LEC-BCW)


- * When controller equipped type is selected when ordering the LE series, you do not need to order this driver.
- * When pulse signals are open collector, order the current limiting resistor (LEC-PA-R-□) separately.

The driver is sold as single unit after the compatible actuator is set.

Confirm that the combination of the driver and actuator is correct.

<Check the following before use.>

- Check the actuator label for the model number. This number should match that of the driver.
- Check that the Parallel I/O configuration matches (NPN or PNP).

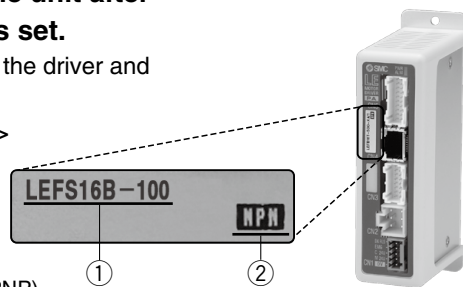

* Refer to the operation manual for using the products. Please download it via our website: <https://www.smcworld.com>

Precautions for blank controllers (LECPA□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (LEC-BCW) for data writing.

- Please download the dedicated software (LEC-BCW) via our website.
- Order the communication cable for controller setting (LEC-W2A-C) separately to use this software.

SMC website:
<https://www.smcworld.com>

Specifications

| Item | LECPA |
|----------------------------------|---|
| Compatible motor | Step motor (Servo/24 VDC) |
| Power supply*1 | Power voltage: 24 VDC ±10%*2 [Including motor drive power, control power, stop, lock release] |
| Parallel input | 5 inputs (Except photo-coupler isolation, pulse input terminal, COM terminal) |
| Parallel output | 9 outputs (Photo-coupler isolation) |
| Pulse signal input | Maximum frequency: 60 kpps (Open collector), 200 kpps (Differential) Input method: 1 pulse mode (Pulse input in direction), 2 pulse mode (Pulse input in differing directions) |
| Compatible encoder | Incremental A/B phase (Encoder resolution: 800 pulse/rotation) |
| Serial communication | RS485 (Modbus protocol compliant) |
| Memory | EEPROM |
| LED indicator | LED (Green/Red) one of each |
| Lock control | Forced-lock release terminal*3 |
| Cable length [m] | I/O cable: 1.5 or less (Open collector), 5 or less (Differential), Actuator cable: 20 or less |
| Cooling system | Natural air cooling |
| Operating temperature range [°C] | 0 to 40 (No freezing) |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Storage temperature range [°C] | -10 to 60 (No freezing) |
| Storage humidity range [%RH] | 90 or less (No condensation) |
| Insulation resistance [MΩ] | Between the housing and SG terminal: 50 (500 VDC) |
| Weight [g] | 120 (Screw mounting), 140 (DIN rail mounting) |


*1 Do not use the power supply of "inrush current prevention type" for the driver power supply. When compliance with UL is required, the electric actuator and driver should be used with a UL1310 Class 2 power supply.

*2 The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.


*3 Applicable to non-magnetizing locks

How to Mount

a) Screw mounting (LECPA□□-□)
(Installation with two M4 screws)

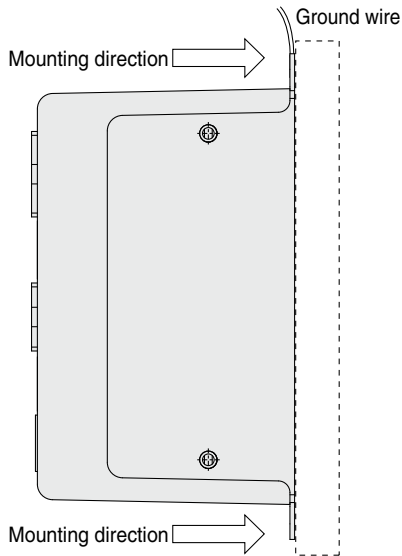

b) DIN rail mounting (LECPA□□D-□)
(Installation with the DIN rail)

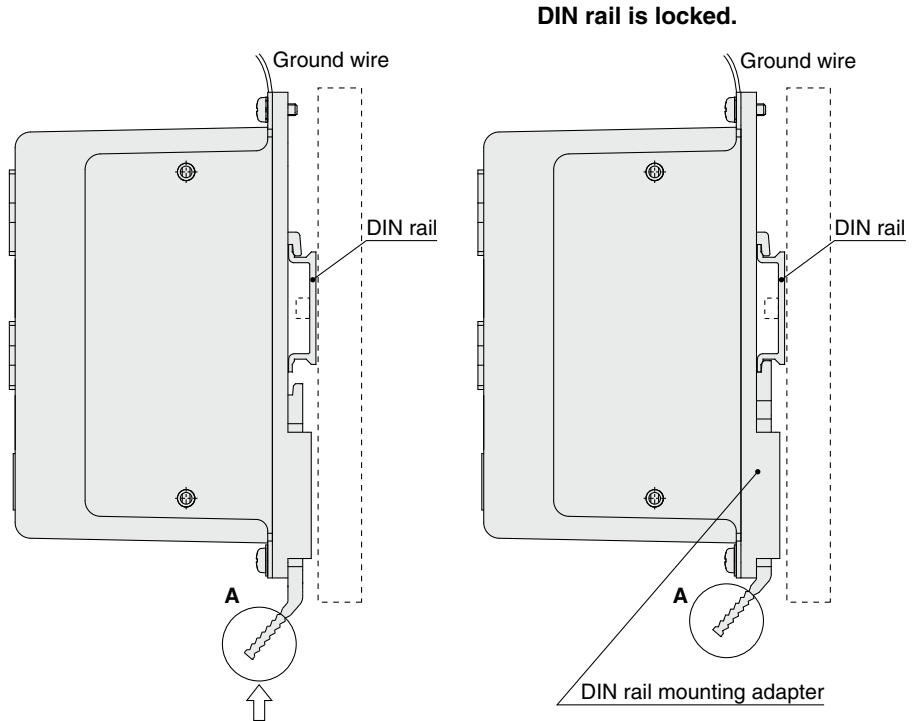


Hook the driver on the DIN rail and press the lever of section A in the arrow direction to lock it.

* The space between the drivers should be 10 mm or more.

DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table below.
Refer to the dimension drawings on page 733 for the mounting dimensions.

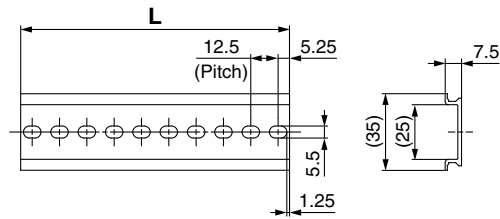

L Dimensions [mm]

| | | | | | | | | | | | | | | | | | | | | |
|----------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |

DIN rail mounting adapter LEC-2-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type driver afterward.

LEFS
LEFBLEJS
LEJB

LEL

LEM

LEY
LEYGLES
LESHLEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC□

JXC□

LECS□
LECS□-T

LECY□


Motorless

LAT3


LECPA Series

Dimensions

a) Screw mounting (LECPA□□-□)

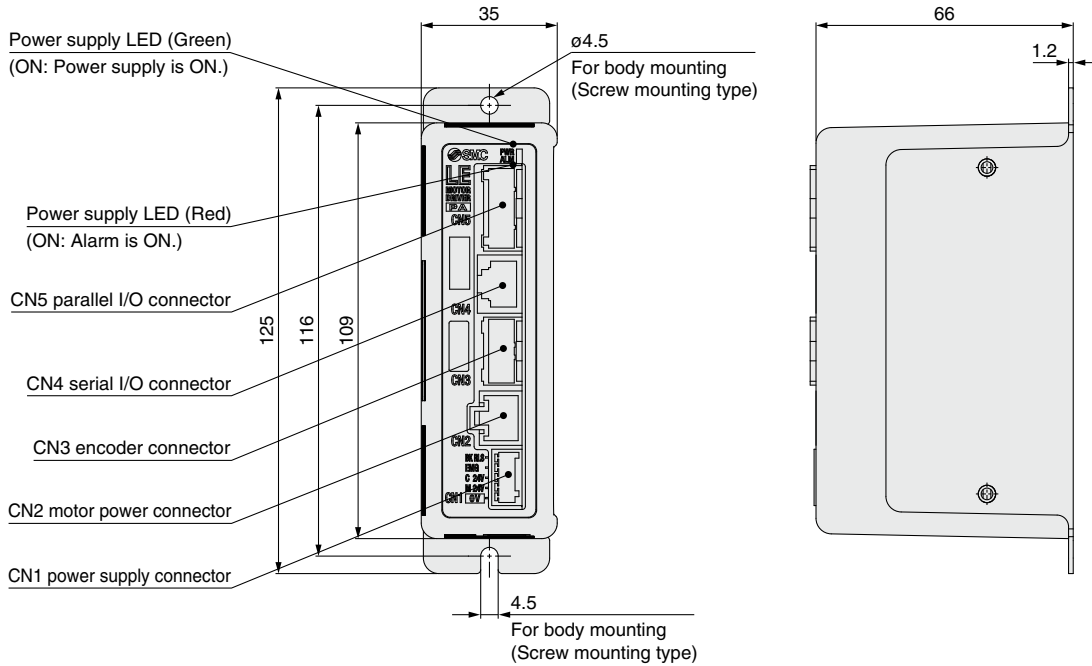

b) DIN rail mounting (LECPA□□D-□)

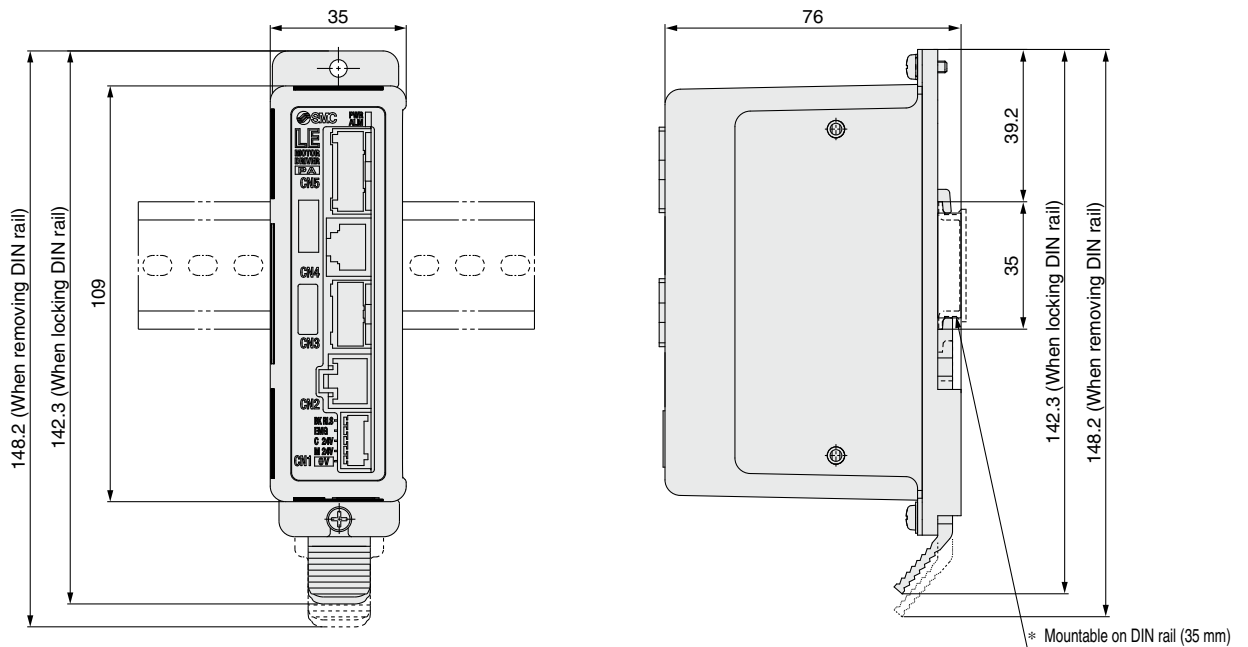

Wiring Example 1


Power Supply Connector: CN1

* The power supply plug is an accessory.
<Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

CN1 Power Supply Connector Terminal for LECPA (PHOENIX CONTACT FK-MC0.5/5-ST-2.5)

| Terminal name | Function | Details |
|---------------|--------------------------|---|
| 0V | Common supply (-) | The M 24V terminal, C 24V terminal, EMG terminal, and BK RLS terminal are common (-). |
| M 24V | Motor power supply (+) | Motor power supply (+) supplied to the driver |
| C 24V | Control power supply (+) | Control power supply (+) supplied to the driver |
| EMG | Stop (+) | Input (+) for releasing the stop |
| BK RLS | Lock release (+) | Input (+) for releasing the lock |


Power supply plug for LECPA: LEC-D-1-1

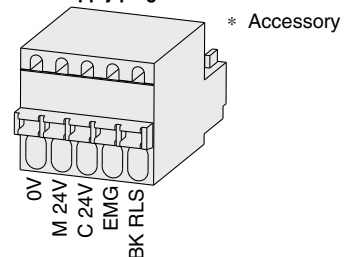

Wiring Example 2

Parallel I/O Connector: CN5 * When you connect a PLC to the CN5 parallel I/O connector, use the I/O cable (LEC-CL5-□).
 * The wiring changes depending on the type of parallel I/O (NPN or PNP).

LECPAN□□-□ (NPN)

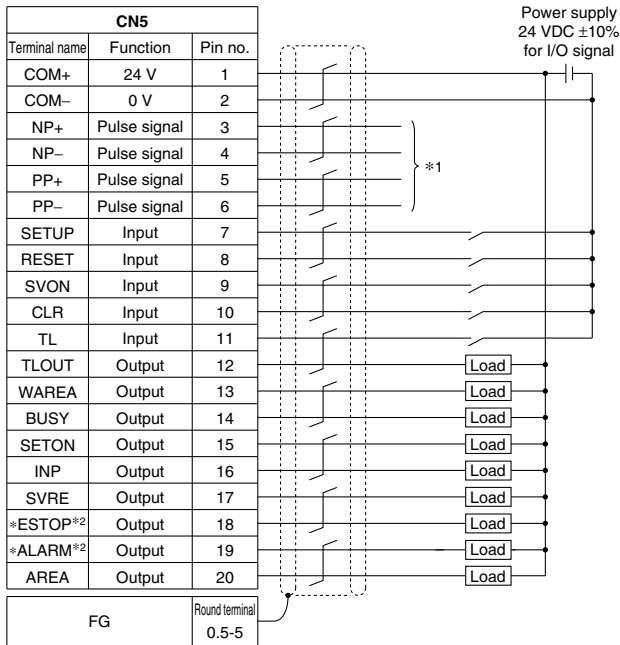


*1 For pulse signal wiring method, refer to the "Pulse Signal Wiring Details."
 *2 Output when the power supply of the driver is ON. (N.C.)

Input Signal

| Name | Details |
|-------|--|
| COM+ | Connects the power supply 24 V for input/output signal |
| COM- | Connects the power supply 0 V for input/output signal |
| SETUP | Instruction to return to origin |
| RESET | Alarm reset |
| SVON | Servo ON instruction |
| CLR | Deviation reset |
| TL | Instruction to pushing operation |

LECPAP□□-□ (PNP)

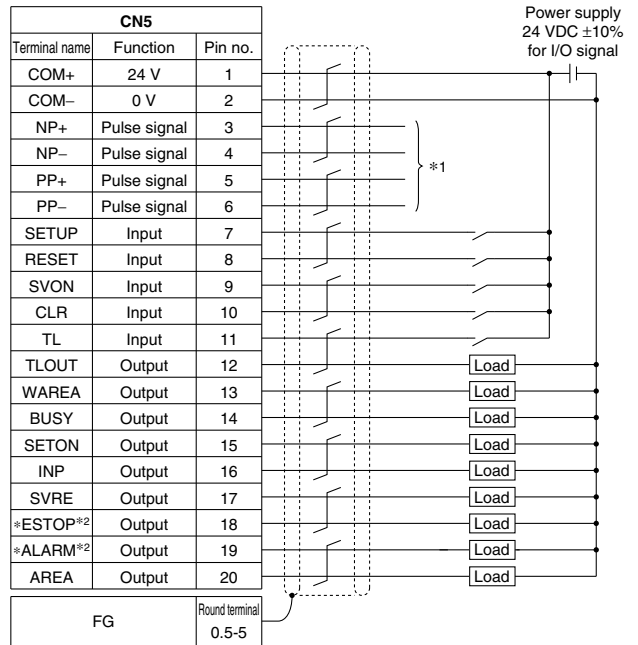


Output Signal

| Name | Details |
|----------------------|--|
| BUSY | Outputs when the actuator is moving |
| SETON | Outputs when returning to origin |
| INP | Outputs when target position is reached |
| SVRE | Outputs when servo is ON |
| *ESTOP* ³ | OFF when EMG stop is instructed |
| *ALARM* ³ | OFF when alarm is generated |
| AREA | Outputs within the area output setting range |
| WAREA | Outputs within W-AREA output setting range |
| TLOUT | Outputs during pushing operation |


*3 Negative-logic (N.C.) circuit signal

Pulse Signal Wiring Details

• Pulse signal output of positioning unit is differential output

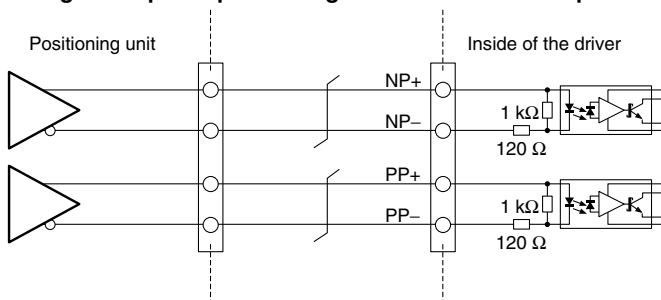

• Pulse signal output of positioning unit is open collector output

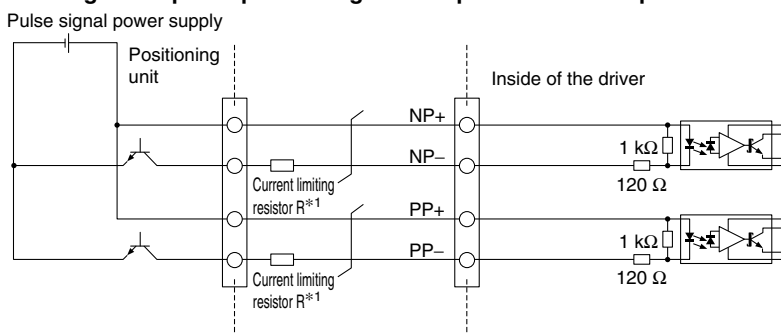


*1 Connect the current limiting resistor R in series to correspond to the pulse signal voltage.

| Pulse signal power supply voltage | Current limiting resistor R specifications | Current limiting resistor part no. |
|-----------------------------------|--|------------------------------------|
| 24 VDC ±10% | 3.3 kΩ ±5% (0.5 W or more) | LEC-PA-R-332 |
| 5 VDC ±5% | 390 Ω ±5% (0.1 W or more) | LEC-PA-R-391 |

LEFS
LEJB
LEL
LEM
LEY
LESH
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3


Signal Timing

Return to Origin

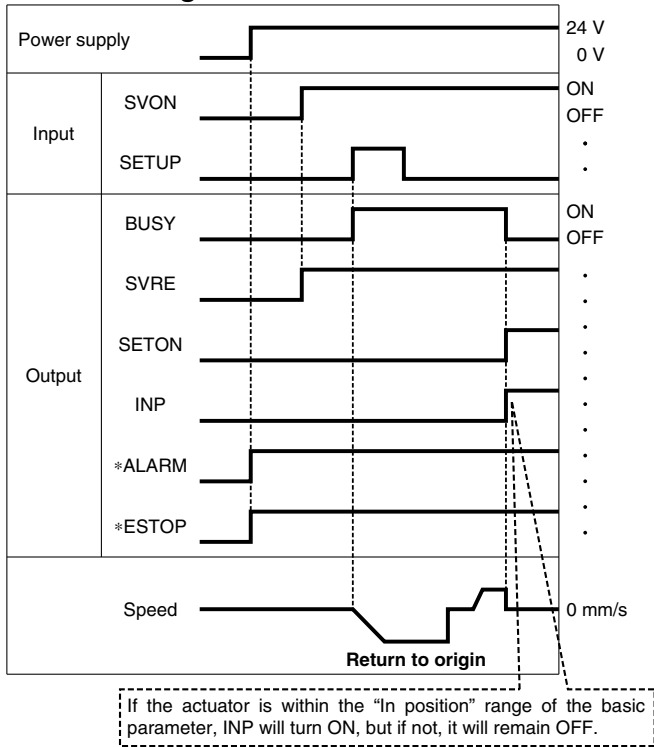


* *ALARM" and *ESTOP" are expressed as negative-logic circuits.

Positioning Operation

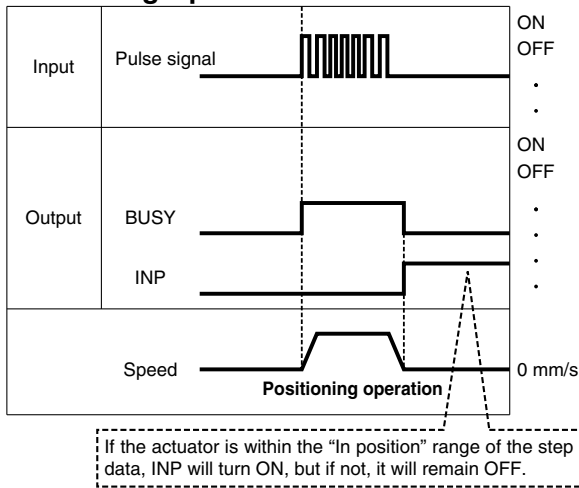


Pushing Operation

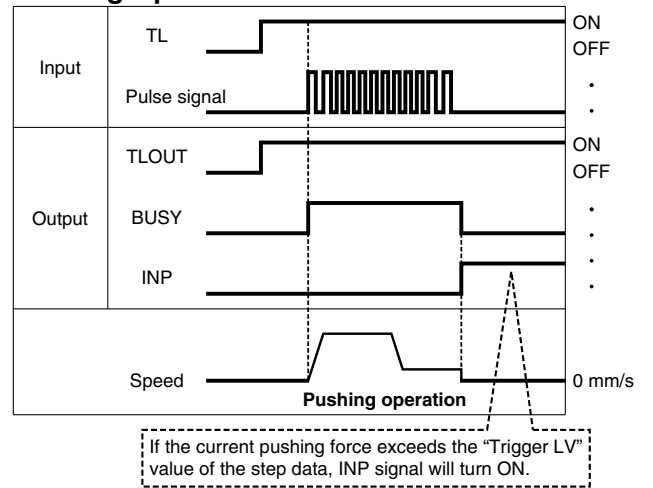

* If pushing operation is stopped when there is no pulse deviation, the moving part of the actuator may pulsate.

Alarm Reset

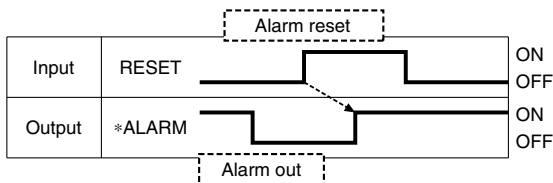

* *ALARM" is expressed as a negative-logic circuit.

Options

[I/O cable]

LEC-C L5 - 1


I/O cable type

| | |
|-----------|-----------|
| L5 | For LECPA |
|-----------|-----------|

I/O cable length (L)

| | |
|----------|-------|
| 1 | 1.5 m |
| 3 | 3 m*1 |
| 5 | 5 m*1 |

*1 Pulse input usable only with differential. Only 1.5 m cables usable with open collector

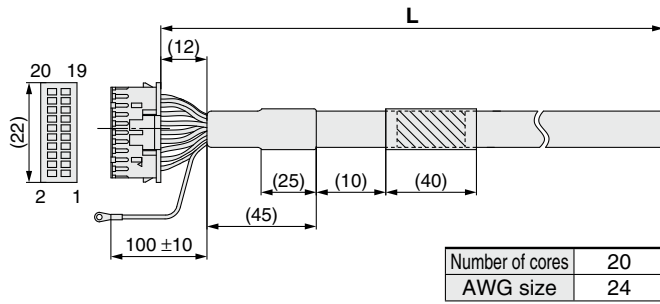

| Pin no. | Insulation color | Dot mark | Dot color |
|---------|------------------|----------|-----------|
| 1 | Light brown | ■ | Black |
| 2 | Light brown | ■ | Red |
| 3 | Yellow | ■ | Black |
| 4 | Yellow | ■ | Red |
| 5 | Light green | ■ | Black |
| 6 | Light green | ■ | Red |
| 7 | Gray | ■ | Black |
| 8 | Gray | ■ | Red |
| 9 | White | ■ | Black |
| 10 | White | ■ | Red |
| 11 | Light brown | ■ | Black |

| Pin no. | Insulation color | Dot mark | Dot color |
|---------|------------------|----------|-----------|
| 12 | Light brown | ■ | Red |
| 13 | Yellow | ■ | Black |
| 14 | Yellow | ■ | Red |
| 15 | Light green | ■ | Black |
| 16 | Light green | ■ | Red |
| 17 | Gray | ■ | Black |
| 18 | Gray | ■ | Red |
| 19 | White | ■ | Black |
| 20 | White | ■ | Red |

| | |
|-------------------------|-------|
| Round terminal 0.5-5 | Green |
|-------------------------|-------|

Weight


| Product no. | Weight [g] |
|------------------|------------|
| LEC-CL5-1 | 190 |
| LEC-CL5-3 | 370 |
| LEC-CL5-5 | 610 |

[Noise filter set]

Step Motor Driver (Pulse Input Type)

LEC-NFA

Contents of the set: 2 noise filters
(Manufactured by WURTH ELEKTRONIK: 74271222)

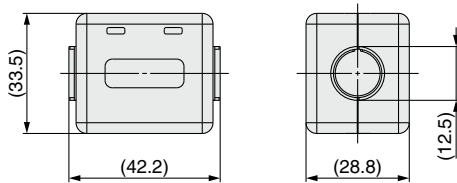

* Refer to the LECPA series Operation Manual for installation.

[Current limiting resistor]

This optional resistor (LEC-PA-R-□) is used when the pulse signal output of the positioning unit is open collector output.

LEC-PA-R-□

Current limiting resistor

| Symbol | Resistance | Pulse signal power supply voltage |
|------------|------------|-----------------------------------|
| 332 | 3.3 kΩ ±5% | 24 VDC ±10% |
| 391 | 390 Ω ±5% | 5 VDC ±5% |

- * Select a current limiting resistor that corresponds to the pulse signal power supply voltage.
- * For the LEC-PA-R-□, two pieces are shipped as a set.
- * For pulse signal wiring details, refer to page 734.

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

Compatible actuators

- | | | |
|-----|-----|-----|
| LEF | LEL | LEM |
| LEY | LES | LEP |
| LER | LEH | |

Step Motor Controller

JXCE1/91/P1/D1/L1/M1 Series



How to Order

JXC **D** 1 **7** **T** -

Communication protocol

| | |
|----------|--------------|
| E | EtherCAT® |
| 9 | EtherNet/IP™ |
| P | PROFINET |
| D | DeviceNet™ |
| L | IO-Link |
| M | CC-Link |

For single axis

Mounting

| | |
|-------------|----------------|
| 7 | Screw mounting |
| 8 *1 | DIN rail |

*1 The DIN rail is not included. It must be ordered separately. (Refer to page 745.)

Option

| | |
|------------|---------------------------------------|
| Nil | Without option |
| S | With straight type communication plug |
| T | With T-branch type communication plug |

* Select "Nil" for anything other than JXCD1 and JXCM1.

Actuator part number

Without cable specifications and actuator options
 Example: Enter "LEFS16B-100"
 for the LEFS16B-100B-S1□□.

BC Blank controller*1

*1 Requires dedicated software (JXC-BCW)




EtherCAT → EtherNet/IP → PROFINET → DeviceNet → IO-Link → CC-Link

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

- ① Check the actuator label for the model number. This number should match that of the controller.

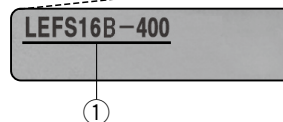

* Refer to the operation manual for using the products. Please download it via our website: <https://www.smcworld.com>

Precautions for blank controllers (JXC□1□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (JXC-BCW) for data writing.

- Please download the dedicated software (JXC-BCW) via our website.
- Order the communication cable for controller setting (JXC-W2A-C) and USB cable (LEC-W2-U) separately to use this software.

SMC website: <https://www.smcworld.com>

Specifications

| Model | | JXCE1 | JXC91 | JXCP1 | JXCD1 | JXCL1 | JXCM1 | |
|----------------------------------|----------------------|---|---|--|---|---|---|---|
| Network | | EtherCAT® | EtherNet/IP™ | PROFINET | DeviceNet™ | IO-Link | CC-Link | |
| Compatible motor | | Step motor (Servo/24 VDC) | | | | | | |
| Power supply | | Power voltage: 24 VDC ±10% | | | | | | |
| Current consumption (Controller) | | 200 mA or less | 130 mA or less | 200 mA or less | 100 mA or less | 100 mA or less | 100 mA or less | |
| Compatible encoder | | Battery-less absolute (4096 pulse/rotation), Incremental A/B phase (800 pulse/rotation) | | | | | | |
| Communication specifications | Applicable system | Protocol | EtherCAT®*2 | EtherNet/IP™*2 | PROFINET*2 | DeviceNet™ | IO-Link | CC-Link |
| | | Version*1 | Conformance Test Record V.1.2.6 | Volume 1 (Edition 3.14) Volume 2 (Edition 1.15) | Specification Version 2.32 | Volume 1 (Edition 3.14) Volume 3 (Edition 1.13) | Version 1.1 Port Class A | Ver. 1.10 |
| | Communication speed | | 100 Mbps*2 | 10/100 Mbps*2 (Automatic negotiation) | 100 Mbps*2 | 125/250/500 kbps | 230.4 kbps (COM3) | 156 kbps, 625 kbps, 2.5 Mbps, 5 Mbps, 10 Mbps |
| | Configuration file*3 | | ESI file | EDS file | GSDML file | EDS file | IODD file | CSP+ file |
| | I/O occupation area | | Input 20 bytes Output 36 bytes | Input 36 bytes Output 36 bytes | Input 36 bytes Output 36 bytes | Input 4, 10, 20 bytes Output 4, 12, 20, 36 bytes | Input 14 bytes Output 22 bytes | 1 station, 2 stations, 4 stations |
| Terminating resistor | | Not included | | | | | | |
| Memory | | EEPROM | | | | | | |
| LED indicator | | PWR, RUN, ALM, ERR | PWR, ALM, MS, NS | PWR, ALM, SF, BF | PWR, ALM, MS, NS | PWR, ALM, COM | PWR, ALM, L ERR, L RUN | |
| Cable length [m] | | Actuator cable: 20 or less | | | | | | |
| Cooling system | | Natural air cooling | | | | | | |
| Operating temperature range [°C] | | 0 to 55 (No freezing)*4 | | | | | | |
| Operating humidity range [%RH] | | 90 or less (No condensation) | | | | | | |
| Insulation resistance [MΩ] | | Between all external terminals and the case: 50 (500 VDC) | | | | | | |
| Weight [g] | | 220 (Screw mounting) 240 (DIN rail mounting) | 210 (Screw mounting) 230 (DIN rail mounting) | 220 (Screw mounting) 240 (DIN rail mounting) | 210 (Screw mounting) 230 (DIN rail mounting) | 190 (Screw mounting) 210 (DIN rail mounting) | 170 (Screw mounting) 190 (DIN rail mounting) | |

- *1 Please note that versions are subject to change.
- *2 Use a shielded communication cable with CAT5 or higher for the PROFINET, EtherNet/IP™, and EtherCAT®.
- *3 The files can be downloaded from the SMC website.
- *4 The operating temperature range for both controller version 1 products and controller version 2 products is 0 to 40°C. Refer to page 746 for details on identifying controller version symbols.

■Trademark

EtherNet/IP™ is a trademark of ODVA.
 DeviceNet™ is a trademark of ODVA.
 EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Example of Operation Command

In addition to the step data input of 64 points maximum in each communication protocol, the changing of each parameter can be performed in real time via numerical data defined operation.
 * Numerical values other than "Moving force," "Area 1," and "Area 2" can be used to perform operation under numerical instructions from JXCL1.

<Application example> Movement between 2 points

| No. | Movement mode | Speed | Position | Acceleration | Deceleration | Pushing force | Trigger LV | Pushing speed | Moving force | Area 1 | Area 2 | In position |
|-----|---------------|-------|----------|--------------|--------------|---------------|------------|---------------|--------------|--------|--------|-------------|
| 0 | 1: Absolute | 100 | 10 | 3000 | 3000 | 0 | 0 | 0 | 100 | 0 | 0 | 0.50 |
| 1 | 1: Absolute | 100 | 100 | 3000 | 3000 | 0 | 0 | 0 | 100 | 0 | 0 | 0.50 |


<Step no. defined operation>

- Sequence 1: Servo ON instruction
- Sequence 2: Instruction to return to origin
- Sequence 3: Specify step data No. 0 to input the DRIVE signal.
- Sequence 4: Specify step data No. 1 after the DRIVE signal has been temporarily turned OFF to input the DRIVE signal.

<Numerical data defined operation>

- Sequence 1: Servo ON instruction
- Sequence 2: Instruction to return to origin
- Sequence 3: Specify step data No. 0 and turn ON the input instruction flag (position). Input 10 in the target position. Subsequently the start flag turns ON.
- Sequence 4: Turn ON step data No. 0 and the input instruction flag (position) to change the target position to 100 while the start flag is ON.







The same operation can be performed with any operation command.

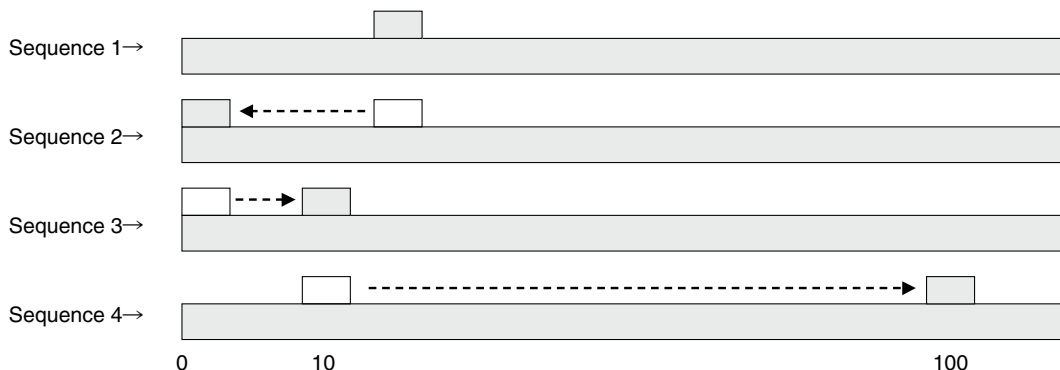

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
LEC
JXC
JXC
LECS
LECS
LECY
Motorless
LAT3



JXCE1/91/P1/D1/L1/M1 Series

Dimensions

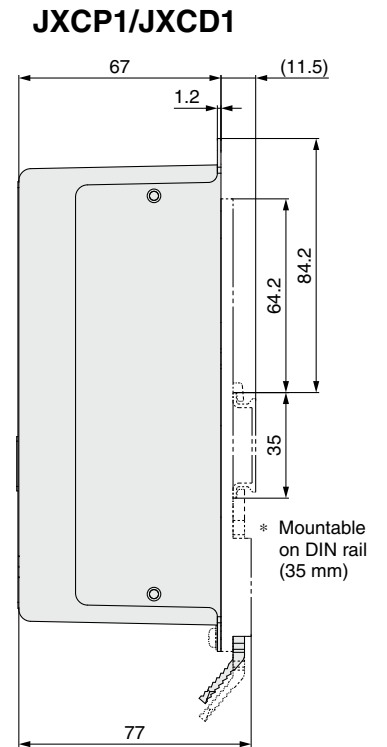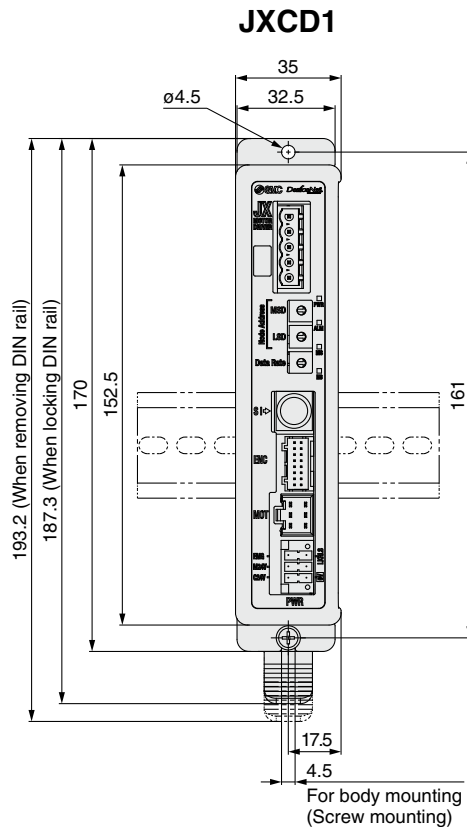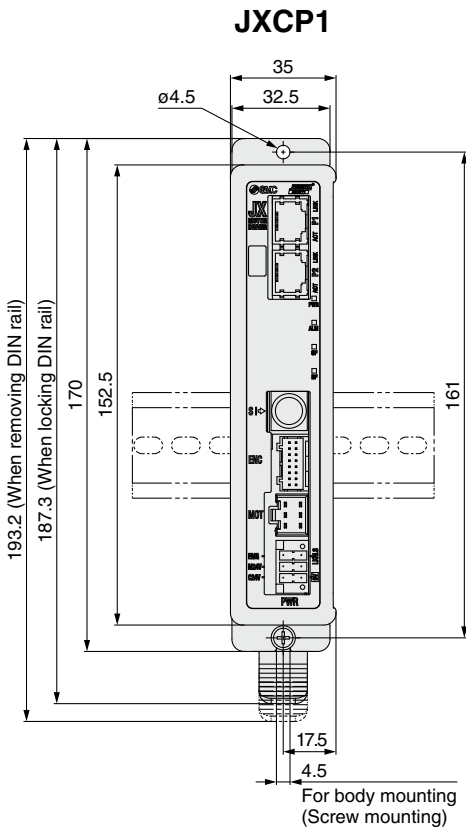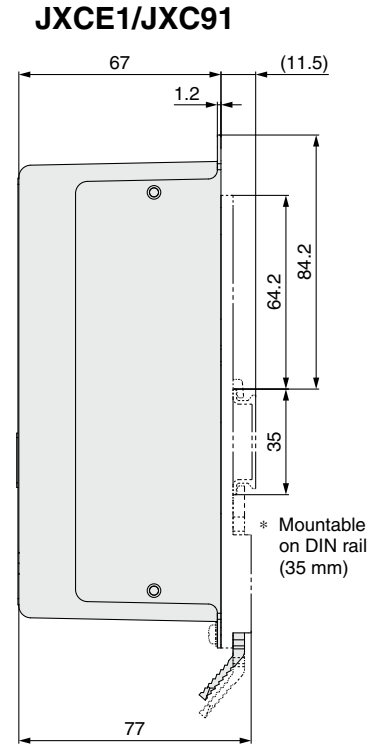
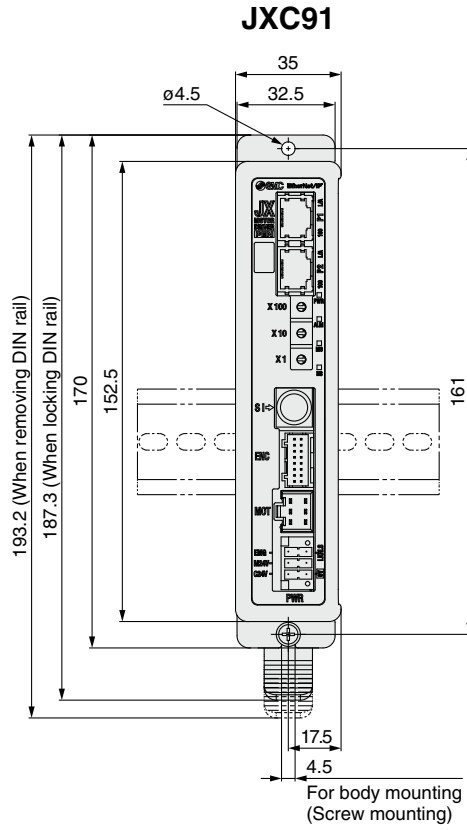
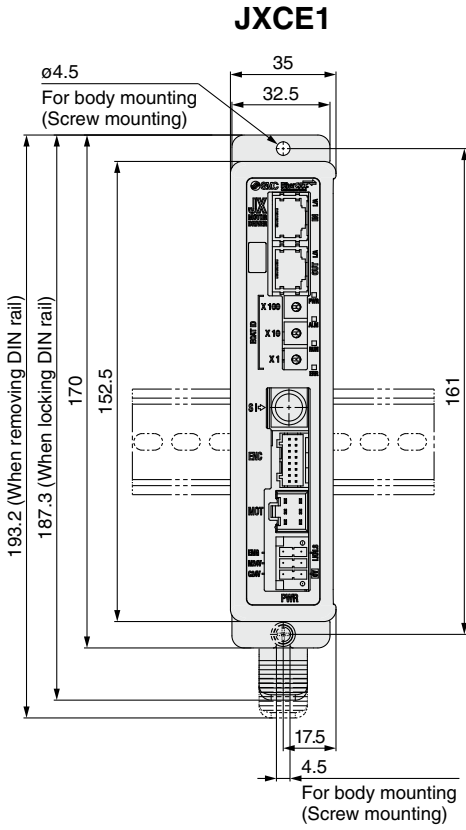


Dimensions

JXCL1

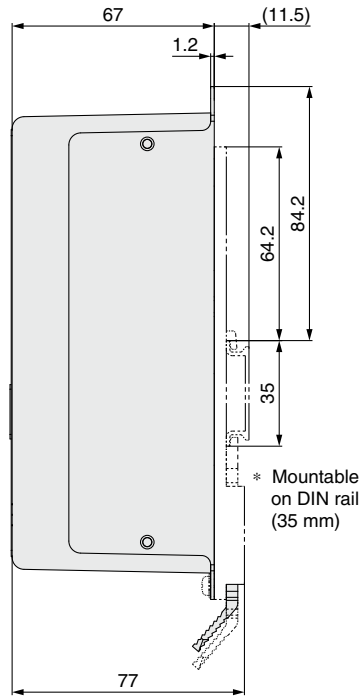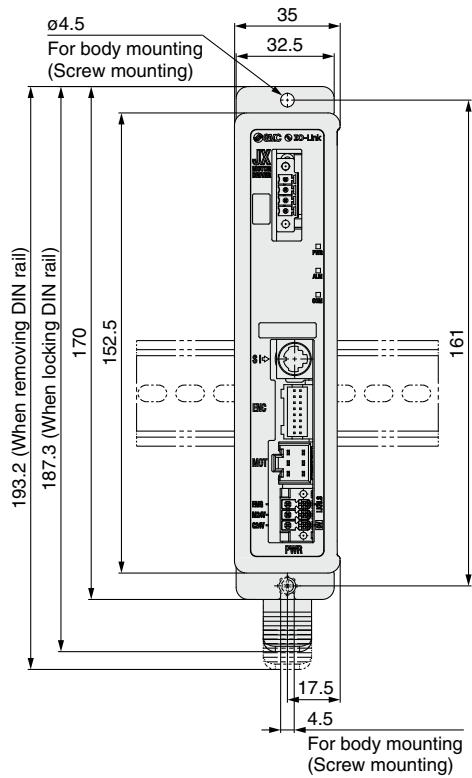

JXCM1

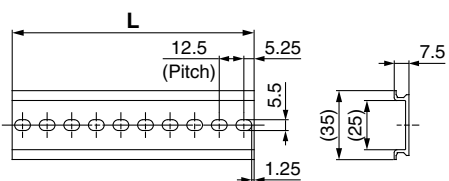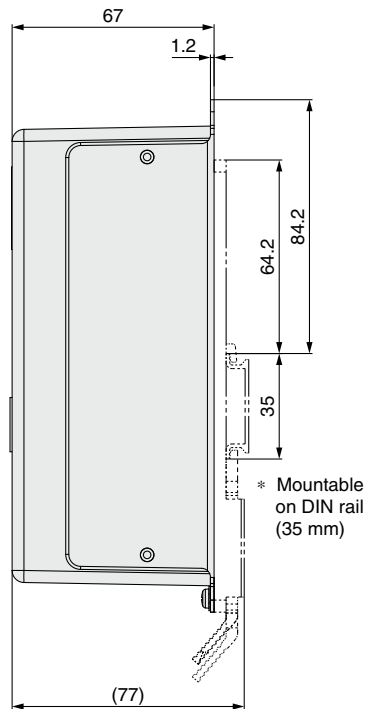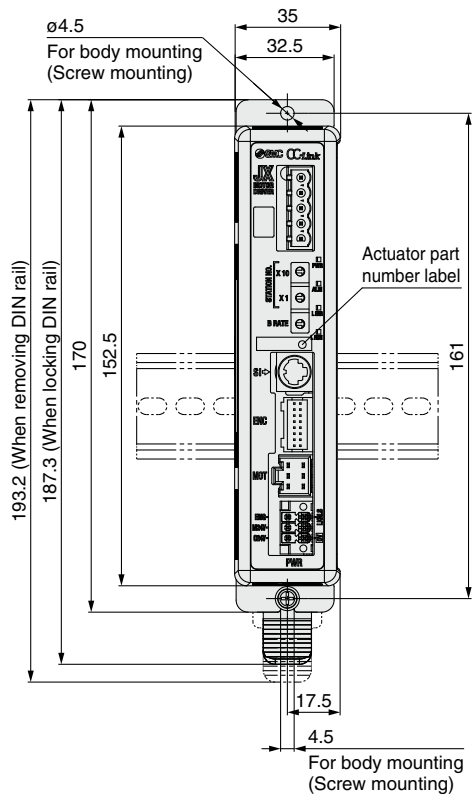

L Dimensions [mm]

| | | | | | | | | | | | | | | | | | | | | |
|-----|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |


- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

JXCE1/91/P1/D1/L1/M1 Series

Options


■ Communication cable for controller setting

① Communication cable JXC-W2A-C

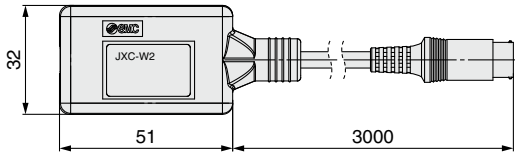

* It can be connected to the controller directly.

② USB cable LEC-W2-U



<Controller setting software/USB driver>

- Controller setting software
- USB driver (For JXC-W2A-C)

Download from SMC's website: <https://www.smcworld.com>

Hardware Requirements

| | |
|-------------------------|------------------------------------|
| OS | Windows®7, Windows®8.1, Windows®10 |
| Communication interface | USB 1.1 or USB 2.0 ports |
| Display | 1024 x 768 or more |

* Windows®7, Windows®8.1 and Windows®10 are registered trademarks of Microsoft Corporation in the United States.

■ DIN rail mounting adapter LEC-3-D0

* With 2 mounting screws

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

■ DIN rail AXT100-DR-□

* For □, enter a number from the No. line in the table on page 744. Refer to the dimension drawings on pages 743 and 744 for the mounting dimensions.

■ Teaching box

LEC-T1-3□G□

Teaching box


Cable length [m]

| | |
|---|---|
| 3 | 3 |
|---|---|

Initial language

| | |
|---|----------|
| J | Japanese |
| E | English |

* The displayed language can be changed to English or Japanese.

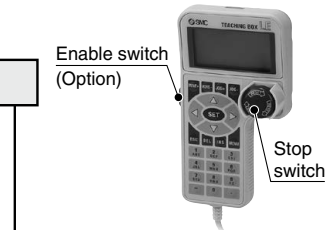

Enable switch

| | |
|-----|-----------------------------|
| Nil | None |
| S | Equipped with enable switch |

* Interlock switch for jog and test function

Stop switch


| | |
|---|---------------------------|
| G | Equipped with stop switch |
|---|---------------------------|

Specifications

| Item | Description |
|----------------------------------|-------------------------------------|
| Switch | Stop switch, Enable switch (Option) |
| Cable length [m] | 3 |
| Enclosure | IP64 (Except connector) |
| Operating temperature range [°C] | 5 to 50 |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Weight [g] | 350 (Except cable) |

■ Power supply plug JXC-CPW

* The power supply plug is an accessory.

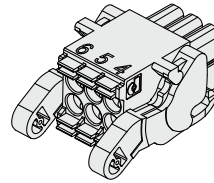

| | | | |
|---|-------|---|--------|
| ① | C 24V | ④ | 0V |
| ② | M 24V | ⑤ | N.C. |
| ③ | EMG | ⑥ | LK RLS |

Power supply plug



| Terminal name | Function | Details |
|---------------|--------------------------|---|
| 0V | Common supply (-) | The M 24V terminal, C 24V terminal, EMG terminal, and LK RLS terminal are common (-). |
| M 24V | Motor power supply (+) | Motor power supply (+) of the controller |
| C 24V | Control power supply (+) | Control power supply (+) of the controller |
| EMG | Stop (+) | Connection terminal of the external stop circuit |
| LK RLS | Lock release (+) | Connection terminal of the lock release switch |

■ Communication plug connector

For DeviceNet™

Straight type
JXC-CD-S

T-branch type
JXC-CD-T

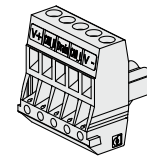


Communication plug connector for DeviceNet™

| Terminal name | Details |
|---------------|---------------------------------|
| V+ | Power supply (+) for DeviceNet™ |
| CAN_H | Communication wire (High) |
| Drain | Grounding wire/Shielded wire |
| CAN_L | Communication wire (Low) |
| V- | Power supply (-) for DeviceNet™ |

For IO-Link

Straight type
JXC-CL-S


* The communication plug connector for IO-Link is an accessory.

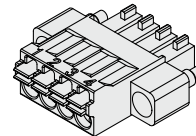

Communication plug connector for IO-Link

| Terminal no. | Terminal name | Details |
|--------------|---------------|----------------|
| 1 | L+ | +24 V |
| 2 | NC | N/A |
| 3 | L- | 0 V |
| 4 | C/Q | IO-Link signal |

■ Conversion cable P5062-5 (Cable length: 300 mm)



* To connect the teaching box (LEC-T1-3□G□) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.




JXCE1/91/P1/D1/L1/M1 Series

Precautions Relating to Differences in Controller Versions

As the controller version of the JXC series differs, the internal parameters are not compatible.

- If using the JXC□1□-BC, please use the latest version of the JXC-BCW (parameter writing tool).
- There are currently 3 versions available: version 1 products (V1.□ or S1.□), version 2 products (V2.□ or S2.□), and version 3 products (V3.□ or S3.□). Keep in mind that in order to write a backup file (.bcp) to another controller with the JXC-BCW, it needs to be the same version as the controller that created the file. (For example, a backup file created by a version 1 product can only be written to another version 1 product, and so on.)

Identifying Version Symbols

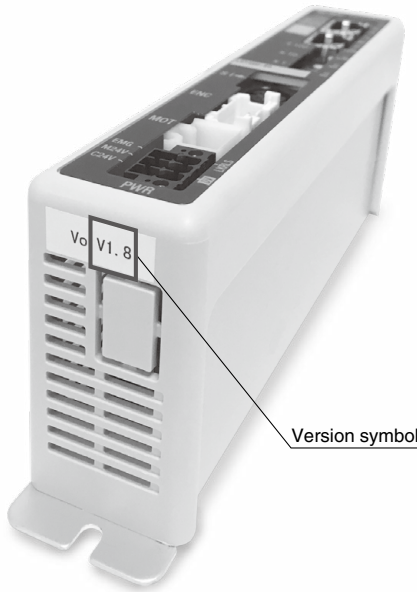

JXC□1 Series Version V3.□ or S3.□ Products

XR V3.0

Applicable models
JXC91□ Series

XR S3.0 T1.0

Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series

JXC□1 Series Version V2.□ or S2.□ Products

WP V2.1

Applicable models
JXC91□ Series

WP S2.2 T1.1

Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series

JXC□1 Series Version V1.□ or S1.□ Products

XR V1.0

Applicable models
JXC91□ Series

XR S1.0 T1.0

Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEY
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

Compatible actuators

LEF LEY LES
LEP LER LEH

3-Axis Step Motor Controller (EtherNet/IP™ Type)

JXC92 Series



How to Order

■ EtherNet/IP™ Type (JXC92)

Controller



JXC 9 2 7

EtherNet/IP™ type

3-axis type

Mounting

| Symbol | Mounting |
|--------|----------------|
| 7 | Screw mounting |
| 8 | DIN rail |

- * Order the actuator separately, including the actuator cable.
(Example: LEFS16B-100B-S1)
- * For the "Speed-Work Load" graph of the actuator, refer to the LECPA section on the model selection page of the actuator to be connected.

Specifications

For the setting of functions and operation methods, refer to the operation manual on the SMC website. (Documents/Download --> Instruction Manuals)

EtherNet/IP™ Type (JXC92)



| Item | Specifications | |
|-----------------------------|---|---|
| Number of axes | Max. 3 axes | |
| Compatible motor | Step motor (Servo/24 VDC) | |
| Compatible encoder | Incremental A/B phase (Encoder resolution: 800 pulse/rotation) | |
| Power supply*1 | Control power supply Power voltage: 24 VDC ±10% Max. current consumption: 500 mA Motor power supply Power voltage: 24 VDC ±10% Max. current consumption: Based on the connected actuator*2 | |
| Communication | Protocol | EtherNet/IP™*3 |
| | Communication speed | 10 Mbps/100 Mbps (automatic negotiation) |
| | Communication method | Full duplex/Half duplex (automatic negotiation) |
| | Configuration file | EDS file |
| | Occupied area | Input 16 bytes/Output 16 bytes |
| | IP address setting range | Manual setting by switches: From 192.168.1.1 to 254, Via DHCP server: Arbitrary address |
| | Vendor ID | 7 h (SMC Corporation) |
| | Product type | 2 Bh (Generic Device) |
| Product code | DEh | |
| Serial communication | USB2.0 (Full Speed 12 Mbps) | |
| Memory | Flash-ROM | |
| LED indicator | PWR, RUN, USB, ALM, NS, MS, L/A, 100 | |
| Lock control | Forced-lock release terminal*4 | |
| Cable length | Actuator cable: 20 m or less | |
| Cooling system | Natural air cooling | |
| Operating temperature range | 0°C to 40°C (No freezing) | |
| Operating humidity range | 90% RH or less (No condensation) | |
| Storage temperature range | -10°C to 60°C (No freezing) | |
| Storage humidity range | 90% RH or less (No condensation) | |
| Insulation resistance | Between all external terminals and the case: 50 MΩ (500 VDC) | |
| Weight | 600 g (Screw mounting), 650 g (DIN rail mounting) | |

- *1 Do not use a power supply with inrush current protection for the motor drive power supply.
- *2 Power consumption depends on the actuator connected. Refer to the actuator specifications for further details.
- *3 EtherNet/IP™ is a trademark of ODVA.
- *4 Applicable to non-magnetizing locks


Dimensions

EtherNet/IP™ Type JXC92

Screw mounting

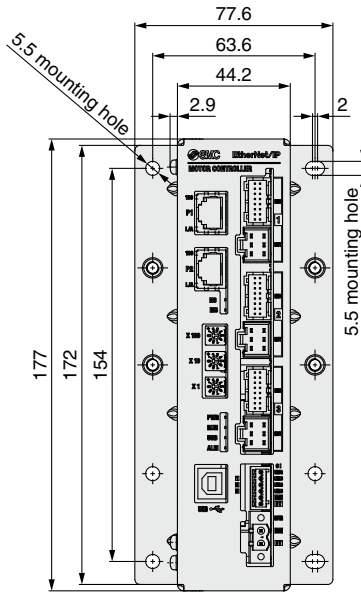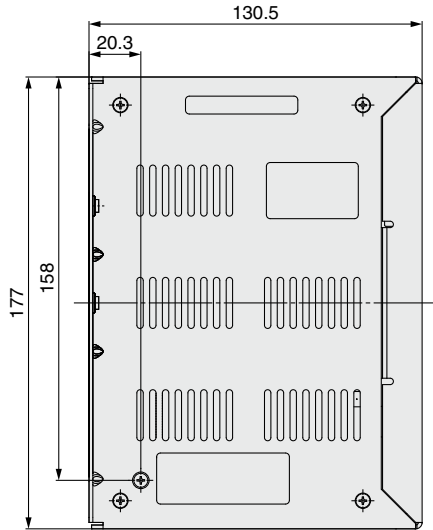


DIN rail mounting

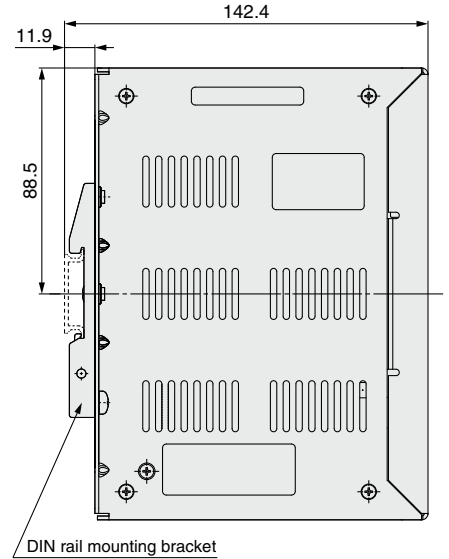

Controller Details

EtherNet/IP™ Type JXC92

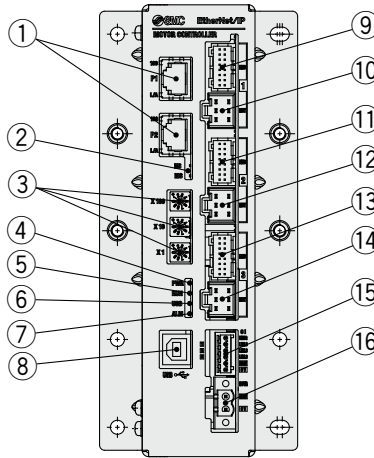

| No. | Name | Description | Details |
|-----|----------------------------|--------------------------------------|--|
| ① | P1, P2 | EtherNet/IP™ communication connector | Connect Ethernet cable. |
| ② | NS, MS | Communication status LED | Displays the status of the EtherNet/IP™ communication |
| ③ | X100 X10 X1 | IP address setting switches | Switch to set the 4th byte of the IP address by X1, X10 and X100. |
| ④ | PWR | Power supply LED (Green) | Power supply ON: Green turns on Power supply OFF: Green turns off |
| ⑤ | RUN | Operation LED (Green) | Running in EtherNet/IP™: Green turns on Running via USB communication: Green flashes Stopped: Green turns off |
| ⑥ | USB | USB connection LED (Green) | USB connected: Green turns on USB not connected: Green turns off |
| ⑦ | ALM | Alarm LED (Red) | With alarm: Red turns on Without alarm: Red turns off |
| ⑧ | USB | Serial communication connector | Connect to a PC via the USB cable. |
| ⑨ | ENC ① | Encoder connector (16 pins) | Axis 1: Connect the actuator cable. |
| ⑩ | MOT ① | Motor power connector (6 pins) | |
| ⑪ | ENC ② | Encoder connector (16 pins) | |
| ⑫ | MOT ② | Motor power connector (6 pins) | Axis 2: Connect the actuator cable. |
| ⑬ | ENC ③ | Encoder connector (16 pins) | |
| ⑭ | MOT ③ | Motor power connector (6 pins) | Axis 3: Connect the actuator cable. |
| ⑮ | CI | Control power supply connector*1 | Control power supply (+), All axes stop (+), Axis 1 lock release (+), Axis 2 lock release (+), Axis 3 lock release (+), Common (-) |
| ⑯ | M PWR | Motor power supply connector*1 | Motor power supply (+), Motor power supply (-) |

*1 Connectors are included. (Refer to page 753.)

- LEFS
- LEFB
- LEJS
- LEJB
- LEL
- LEM
- LEYG
- LEYG
- LES
- LESH
- LEPY
- LEPS
- LER
- LEH
- LEH
- LEY-X5
- 11-LEFS
- 11-LEJS
- 25A-
- LEC
- JXC
- LECS
- LECS-T
- LECY
- Motorless
- LAT3

Compatible actuators

LEF LEY LES

*1
LEP LER LEH

*1 Excludes the continuous rotation (360°) specification

4-Axis Step Motor Controller (Parallel I/O/EtherNet/IP™ Type)

JXC73/83/93 Series



How to Order

Parallel I/O (JXC73/83)

Controller



JXC **7** **3** **2**

I/O type

| Symbol | I/O type |
|--------|----------|
| 7 | NPN |
| 8 | PNP |

I/O cable, mounting

| Symbol | I/O cable | Mounting |
|--------|-----------|----------------|
| 1 | 1.5 m | Screw mounting |
| 2 | 1.5 m | DIN rail |
| 3 | 3 m | Screw mounting |
| 4 | 3 m | DIN rail |
| 5 | 5 m | Screw mounting |
| 6 | 5 m | DIN rail |
| 7 | None | Screw mounting |
| 8 | None | DIN rail |

4-axis type

* Two I/O cables are included.

EtherNet/IP™ Type (JXC93)

Controller



JXC **9** **3** **7**

EtherNet/IP™ type

Mounting

| Symbol | Mounting |
|--------|----------------|
| 7 | Screw mounting |
| 8 | DIN rail |

4-axis type

* Order the actuator separately, including the actuator cable.
(Example: LEFS16B-100B-S1)

* For the "Speed-Work Load" graph of the actuator, refer to the LECPA section on the model selection page of the actuator to be connected.

Specifications

For the setting of functions and operation methods, refer to the operation manual on the SMC website. (Documents/Download --> Instruction Manuals)

Parallel I/O (JXC73/83)

| Item | Specifications |
|------------------------------------|--|
| Number of axes | Max. 4 axes |
| Compatible motor | Step motor (Servo/24 VDC) |
| Compatible encoder | Incremental A/B phase (Encoder resolution: 800 pulse/rotation) |
| Power supply*1 | Main control power supply Power voltage: 24 VDC ±10% Max. current consumption: 300 mA Motor power supply, Motor control power supply (Common) Power voltage: 24 VDC ±10% Max. current consumption: Based on the connected actuator*2 |
| Parallel input | 16 inputs (Photo-coupler isolation) |
| Parallel output | 32 outputs (Photo-coupler isolation) |
| Serial communication | USB2.0 (Full Speed 12 Mbps) |
| Memory | Flash-ROM/EEPROM |
| LED indicator | PWR, RUN, USB, ALM |
| Lock control | Forced-lock release terminal*3 |
| Cable length | I/O cable: 5 m or less, Actuator cable: 20 m or less |
| Cooling system | Natural air cooling |
| Operating temperature range | 0°C to 40°C (No freezing) |
| Operating humidity range | 90% RH or less (No condensation) |
| Storage temperature range | -10°C to 60°C (No freezing) |
| Storage humidity range | 90% RH or less (No condensation) |
| Insulation resistance | Between all external terminals and the case: 50 MΩ (500 VDC) |
| Weight | 1050 g (Screw mounting), 1100 g (DIN rail mounting) |

- *1 Do not use a power supply with inrush current protection for the motor drive power and motor control power supply.
- *2 Power consumption depends on the actuator connected. Refer to the actuator specifications for further details.
- *3 Applicable to non-magnetizing locks

For the setting of functions and operation methods, refer to the operation manual on the SMC website. (Documents/Download --> Instruction Manuals)

EtherNet/IP™ Type (JXC93)

| Item | Specifications | |
|------------------------------------|--|---|
| Number of axes | Max. 4 axes | |
| Compatible motor | Step motor (Servo/24 VDC) | |
| Compatible encoder | Incremental A/B phase (Encoder resolution: 800 pulse/rotation) | |
| Power supply*1 | Main control power supply Power voltage: 24 VDC ±10% Max. current consumption: 350 mA Motor power supply, Motor control power supply (Common) Power voltage: 24 VDC ±10% Max. current consumption: Based on the connected actuator*2 | |
| Communication | Protocol | EtherNet/IP™*4 |
| | Communication speed | 10 Mbps/100 Mbps (automatic negotiation) |
| | Communication method | Full duplex/Half duplex (automatic negotiation) |
| | Configuration file | EDS file |
| | Occupied area | Input 16 bytes/Output 16 bytes |
| | IP address setting range | Manual setting by switches: From 192.168.1.1 to 254, Via DHCP server: Arbitrary address |
| | Vendor ID | 7 h (SMC Corporation) |
| | Product type | 2 Bh (Generic Device) |
| Product code | DCh | |
| Serial communication | USB2.0 (Full Speed 12 Mbps) | |
| Memory | Flash-ROM/EEPROM | |
| LED indicator | PWR, RUN, USB, ALM, NS, MS, L/A, 100 | |
| Lock control | Forced-lock release terminal*3 | |
| Cable length | Actuator cable: 20 m or less | |
| Cooling system | Natural air cooling | |
| Operating temperature range | 0°C to 40°C (No freezing) | |
| Operating humidity range | 90% RH or less (No condensation) | |
| Storage temperature range | -10°C to 60°C (No freezing) | |
| Storage humidity range | 90% RH or less (No condensation) | |
| Insulation resistance | Between all external terminals and the case: 50 MΩ (500 VDC) | |
| Weight | 1050 g (Screw mounting), 1100 g (DIN rail mounting) | |

- *1 Do not use a power supply with inrush current protection for the motor drive power and motor control power supply.
- *2 Power consumption depends on the actuator connected. Refer to the actuator specifications for further details.
- *3 Applicable to non-magnetizing locks
- *4 EtherNet/IP™ is a trademark of ODVA.



LEFS
LEJB
LEL
LEM
LEYG
LESH
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3

JXC73/83/93 Series


Dimensions

Parallel I/O JXC73/83

Screw mounting

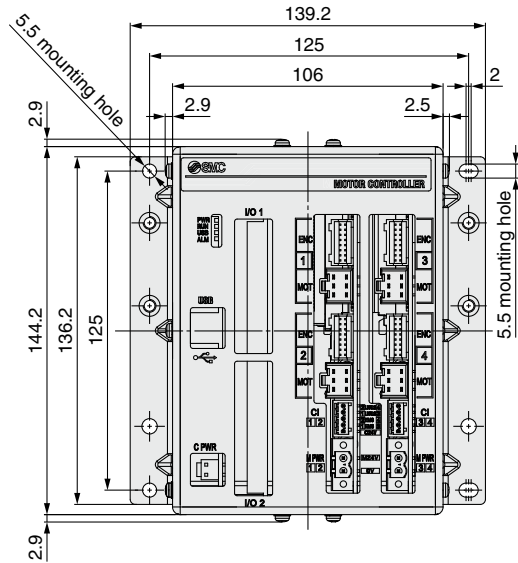
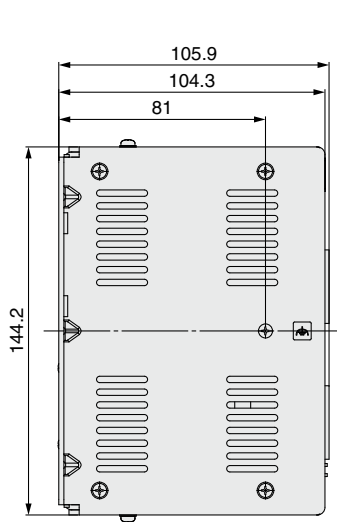


DIN rail mounting

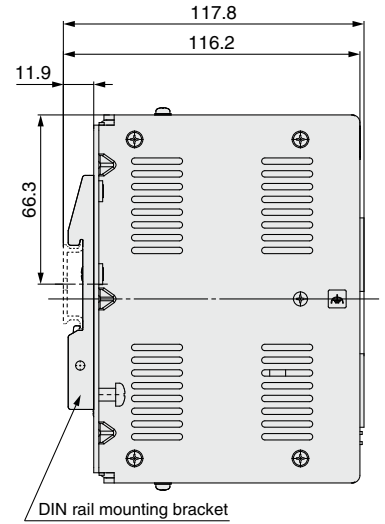


EtherNet/IP™ Type JXC93

Screw mounting

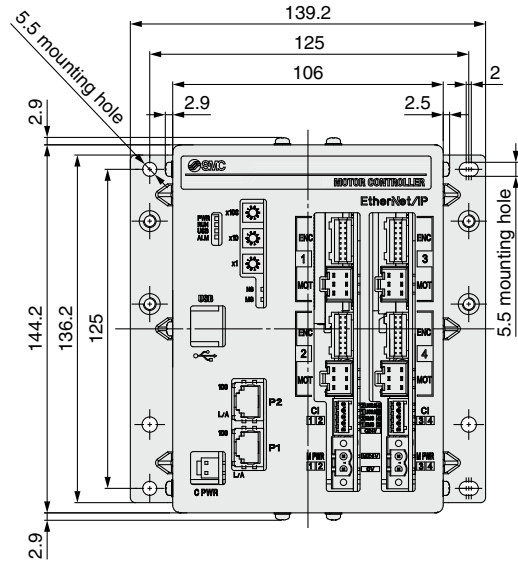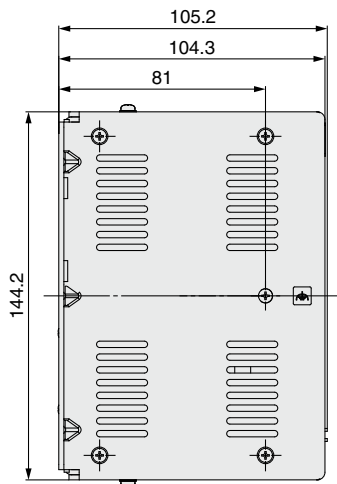


DIN rail mounting

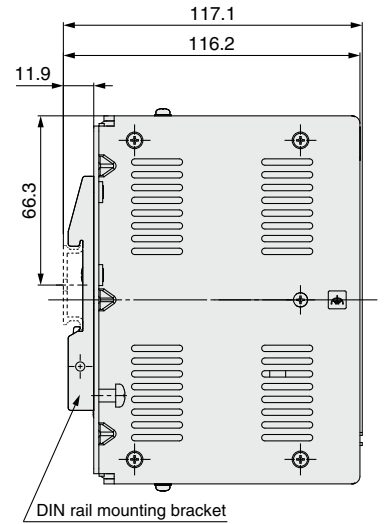

Controller Details


Parallel I/O JXC73/83

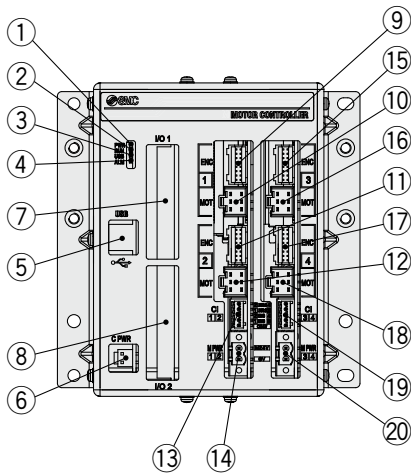

| No. | Name | Description | Details |
|-----|------------------|--|--|
| ① | PWR | Power supply LED (Green) | Power supply ON: Green turns on Power supply OFF: Green turns off |
| ② | RUN | Operation LED (Green) | Running in parallel I/O: Green turns on Running via USB communication: Green flashes Stopped: Green turns off |
| ③ | USB | USB connection LED (Green) | USB connected: Green turns on USB not connected: Green turns off |
| ④ | ALM | Alarm LED (Red) | With alarm: Red turns on Without alarm: Red turns off |
| ⑤ | USB | Serial communication | Connect to a PC via the USB cable. |
| ⑥ | C PWR | Main control power supply connector (2 pins)*1 | Main control power supply (+) (-) |
| ⑦ | I/O 1 | Parallel I/O connector (40 pins) | Connect to a PLC via the I/O cable. |
| ⑧ | I/O 2 | Parallel I/O connector (40 pins) | Connect to a PLC via the I/O cable. |
| ⑨ | ENC 1 | Encoder connector (16 pins) | Axis 1: Connect the actuator cable. |
| ⑩ | MOT 1 | Motor power connector (6 pins) | |
| ⑪ | ENC 2 | Encoder connector (16 pins) | Axis 2: Connect the actuator cable. |
| ⑫ | MOT 2 | Motor power connector (6 pins) | |
| ⑬ | CI 1 2 | Motor control power supply connector*1 | Motor control power supply (+), Axis 1 stop (+), Axis 1 lock release (+), Axis 2 stop (+), Axis 2 lock release (+) |
| ⑭ | M PWR 1 2 | Motor power supply connector*1 | For Axis 1, 2. Motor power supply (+), Common (-) |
| ⑮ | ENC 3 | Encoder connector (16 pins) | Axis 3: Connect the actuator cable. |
| ⑯ | MOT 3 | Motor power connector (6 pins) | |
| ⑰ | ENC 4 | Encoder connector (16 pins) | Axis 4: Connect the actuator cable. |
| ⑱ | MOT 4 | Motor power connector (6 pins) | |
| ⑲ | CI 3 4 | Motor control power supply connector*1 | Motor control power supply (+), Axis 3 stop (+), Axis 3 lock release (+), Axis 4 stop (+), Axis 4 lock release (+) |
| ⑳ | M PWR 3 4 | Motor power supply connector*1 | For Axis 3, 4. Motor power supply (+), Common (-) |

*1 Connectors are included. (Refer to page 753.)

EtherNet/IP™ Type JXC93

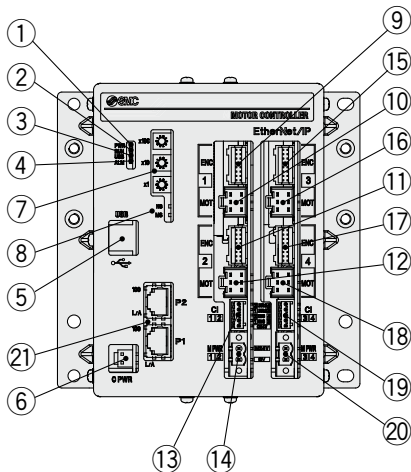

| No. | Name | Description | Details |
|-----|----------------------------|--|--|
| ① | PWR | Power supply LED (Green) | Power supply ON: Green turns on Power supply OFF: Green turns off |
| ② | RUN | Operation LED (Green) | Running in EtherNet/IP™: Green turns on Running via USB communication: Green flashes Stopped: Green turns off |
| ③ | USB | USB connection LED (Green) | USB connected: Green turns on USB not connected: Green turns off |
| ④ | ALM | Alarm LED (Red) | With alarm: Red turns on Without alarm: Red turns off |
| ⑤ | USB | Serial communication | Connect to a PC via the USB cable. |
| ⑥ | C PWR | Main control power supply connector (2 pins)*1 | Main control power supply (+) (-) |
| ⑦ | x100 x10 x1 | IP address setting switches | Switch to set the 4th byte of the IP address by X1, X10 and X100. |
| ⑧ | MS, NS | Communication status LED | Displays the status of the EtherNet/IP™ communication |
| ⑨ | ENC 1 | Encoder connector (16 pins) | Axis 1: Connect the actuator cable. |
| ⑩ | MOT 1 | Motor power connector (6 pins) | |
| ⑪ | ENC 2 | Encoder connector (16 pins) | Axis 2: Connect the actuator cable. |
| ⑫ | MOT 2 | Motor power connector (6 pins) | |
| ⑬ | CI 1 2 | Motor control power supply connector*1 | Motor control power supply (+), Axis 1 stop (+), Axis 1 lock release (+), Axis 2 stop (+), Axis 2 lock release (+) |
| ⑭ | M PWR 1 2 | Motor power supply connector*1 | For Axis 1, 2. Motor power supply (+), Common (-) |
| ⑮ | ENC 3 | Encoder connector (16 pins) | Axis 3: Connect the actuator cable. |
| ⑯ | MOT 3 | Motor power connector (6 pins) | |
| ⑰ | ENC 4 | Encoder connector (16 pins) | Axis 4: Connect the actuator cable. |
| ⑱ | MOT 4 | Motor power connector (6 pins) | |
| ⑲ | CI 3 4 | Motor control power supply connector*1 | Motor control power supply (+), Axis 3 stop (+), Axis 3 lock release (+), Axis 4 stop (+), Axis 4 lock release (+) |
| ⑳ | M PWR 3 4 | Motor power supply connector*1 | For Axis 3, 4. Motor power supply (+), Common (-) |
| ㉑ | P1, P2 | EtherNet/IP™ communication connector | Connect Ethernet cable. |

*1 Connectors are included. (Refer to page 753.)

LEFS
LEFBLEJS
LEJB

LEL

LEM

LEY
LEYGLES
LESHLEPY
LEPS

LER

LEH

LEY-X5

11-LEFS

11-LEJS

25A-

LEC

LECS
LECS-T

LECY

Motorless

LAT3

JXC73/83/92/93 Series


Wiring Example 1

Cable with Main Control Power Supply Connector (For 4 Axes)*1: C PWR 1 pc. For 4 Axes
JXC73/83/93

| Terminal name | Function | Details |
|---------------|-------------------------------|---|
| +24V | Main control power supply (+) | Power supply (+) supplied to the main control |
| 24-0V | Main control power supply (-) | Power supply (-) supplied to the main control |

*1 Part no.: JXC-C1 (Cable length: 1.5 m)

Cable with main control power supply connector

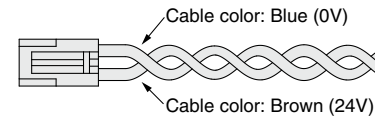


Motor Power Supply Connector (For 3/4 Axes)*2: M PWR 2 pcs.*3 For 3 Axes
JXC92 For 4 Axes
JXC73/83/93

| Terminal name | Function | Details | Note |
|---------------|------------------------|--|---------------------------|
| 0V | Motor power supply (-) | Power supply (-) supplied to the motor power | For 3 axes JXC92 |
| | | The M 24V terminal, C 24V terminal, EMG terminal, and LKRLS terminal are common (-). | For 4 axes JXC73/83/93 |
| M 24V | Motor power supply (+) | Power supply (+) supplied to the motor power | |

*2 Manufactured by PHOENIX CONTACT (Part no.: MSTB2, 5/2-STF-5, 08)

*3 1 pc. for 3 axes (JXC92)

Motor power supply connector

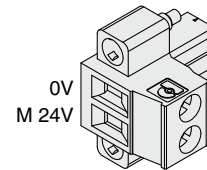


Motor Control Power Supply Connector (For 4 Axes)*4: CI 2 pcs. For 4 Axes
JXC73/83/93

| Terminal name | Function | Details |
|---------------|--------------------------------|---|
| C 24V | Motor control power supply (+) | Power supply (+) supplied to the motor control |
| EMG1/EMG3 | Stop (+) | Axis 1/Axis 3: Input (+) for releasing the stop |
| EMG2/EMG4 | Stop (+) | Axis 2/Axis 4: Input (+) for releasing the stop |
| LKRLS1/LKRLS3 | Lock release (+) | Axis 1/Axis 3: Input (+) for releasing the lock |
| LKRLS2/LKRLS4 | Lock release (+) | Axis 2/Axis 4: Input (+) for releasing the lock |

*4 Manufactured by PHOENIX CONTACT (Part no.: FK-MC0, 5/5-ST-2, 5)

Motor control power supply connector

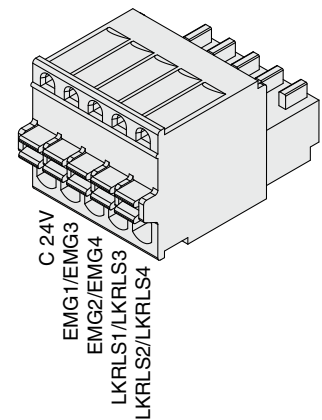


Control Power Supply Connector (For 3 Axes)*5: CI 1 pc. For 3 Axes
JXC92

| Terminal name | Function | Details |
|---------------|--------------------------|--|
| 0V | Control power supply (-) | The C 24V terminal, LKRLS terminal, and EMG terminal are common (-). |
| C 24V | Control power supply (+) | Power supply (+) supplied to the control |
| LKRLS3 | Lock release (+) | Axis 3: Input (+) for releasing the lock |
| LKRLS2 | Lock release (+) | Axis 2: Input (+) for releasing the lock |
| LKRLS1 | Lock release (+) | Axis 1: Input (+) for releasing the lock |
| EMG | Stop (+) | All axes: Input (+) for releasing the stop |

*5 Manufactured by PHOENIX CONTACT (Part no.: FK-MC0, 5/6-ST-2, 5)

Control power supply connector

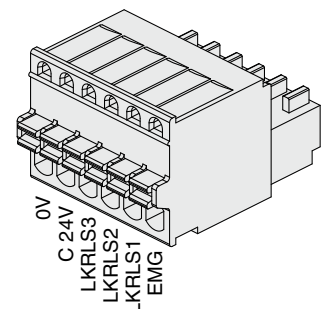


Wiring Example 2

Parallel I/O Connector


- * When you connect a PLC to the I/O 1 or I/O 2 parallel I/O connector, use the I/O cable (JXC-C2-□).
- * The wiring changes depending on the type of parallel I/O (NPN or PNP).

I/O 1 Wiring example

NPN JXC73

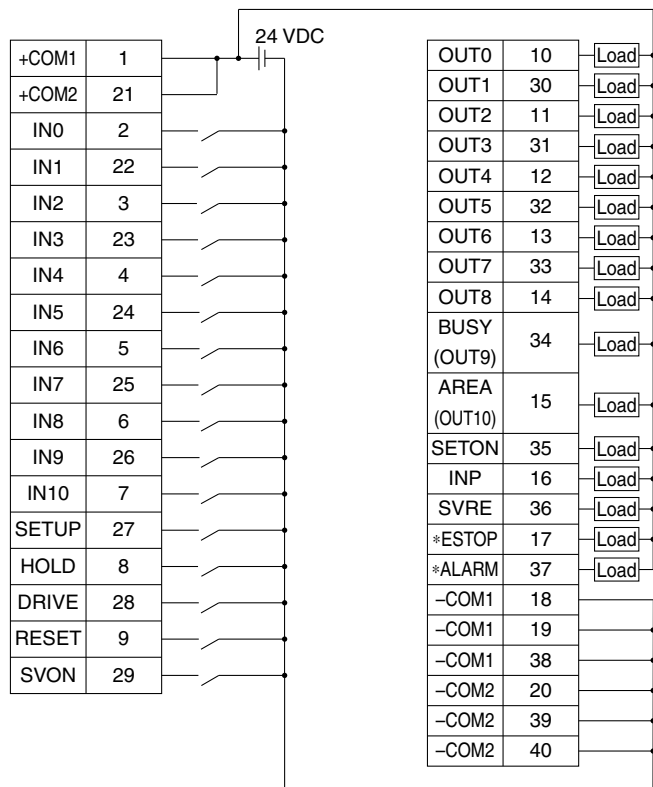

PNP JXC83

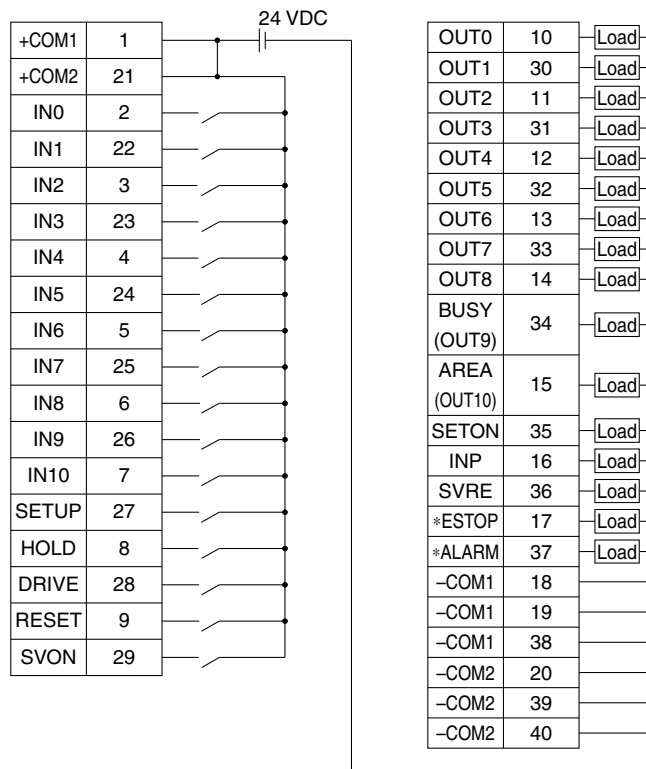

I/O 1 Input Signal

| Name | Details |
|------------------|---|
| +COM1 +COM2 | Connects the power supply 24 V for input/output signal |
| IN0 to IN8 | Step data specified bit no. (Standard: When 512 points are used) |
| IN9 IN10 | Step data specified extension bit no. (Extension: When 2048 points are used) |
| SETUP | Instruction to return to origin |
| HOLD | Temporarily stops operation |
| DRIVE | Instruction to drive |
| RESET | Resets alarm and interrupts operation |
| SVON | Servo ON instruction |

I/O 1 Output Signal

| Name | Details |
|--------------------|---|
| OUT0 to OUT8 | Outputs the step data no. during operation |
| BUSY (OUT9) | Outputs when the operation of the actuator is in progress |
| AREA (OUT10) | Outputs when all actuators are within the area output range |
| SETON | Outputs when the return to origin of all actuators is completed |
| INP | Outputs when the positioning or pushing of all actuators is completed |
| SVRE | Outputs when servo is ON |
| *ESTOP*1 | OFF when EMG stop is instructed |
| *ALARM*1 | OFF when alarm is generated |
| -COM1 -COM2 | Connects the power supply 0 V for input/output signal |

*1 Negative-logic circuit signal



JXC73/83/92/93 Series


Wiring Example 2

Parallel I/O Connector


- * When you connect a PLC to the I/O 1 or I/O 2 parallel I/O connector, use the I/O cable (JXC-C2-□).
- * The wiring changes depending on the type of parallel I/O (NPN or PNP).

I/O 2 Wiring example

NPN JXC73

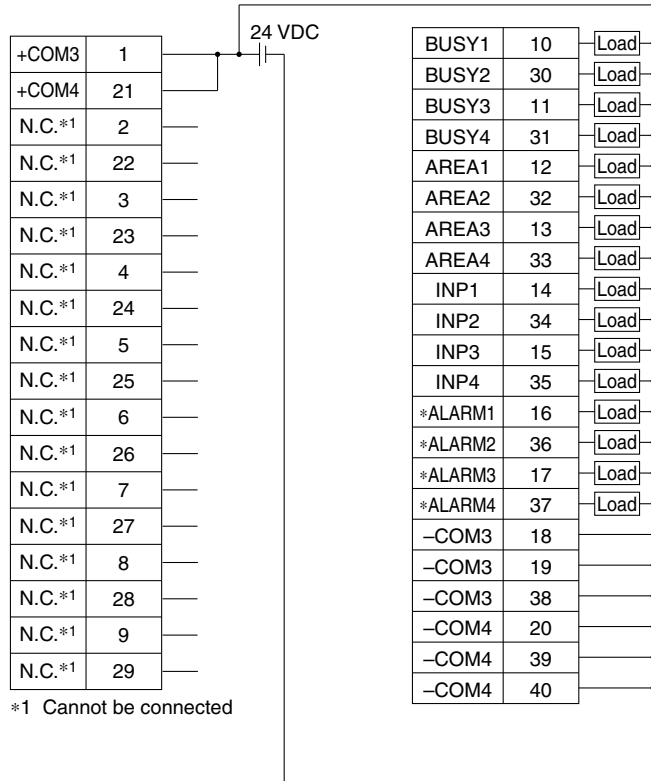

PNP JXC83

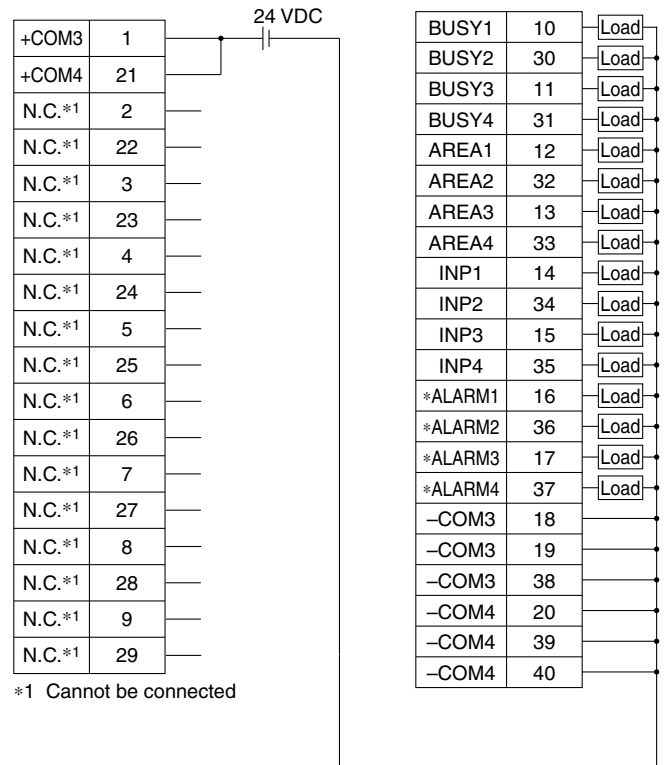

I/O 2 Input Signal

| Name | Details |
|----------------|--|
| +COM3 +COM4 | Connects the power supply 24 V for input/output signal |
| N.C. | Cannot be connected |

I/O 2 Output Signal

| Name | Details |
|----------------|---|
| BUSY1 | Busy signal for axis 1 |
| BUSY2 | Busy signal for axis 2 |
| BUSY3 | Busy signal for axis 3 |
| BUSY4 | Busy signal for axis 4 |
| AREA1 | Area signal for axis 1 |
| AREA2 | Area signal for axis 2 |
| AREA3 | Area signal for axis 3 |
| AREA4 | Area signal for axis 4 |
| INP1 | Positioning or pushing completion signal for axis 1 |
| INP2 | Positioning or pushing completion signal for axis 2 |
| INP3 | Positioning or pushing completion signal for axis 3 |
| INP4 | Positioning or pushing completion signal for axis 4 |
| *ALARM1*2 | Alarm signal for axis 1 |
| *ALARM2*2 | Alarm signal for axis 2 |
| *ALARM3*2 | Alarm signal for axis 3 |
| *ALARM4*2 | Alarm signal for axis 4 |
| -COM3 -COM4 | Connects the power supply 0 V for input/output signal |

*2 Negative-logic circuit signal

Options


Cable with main control power supply connector

For 4 Axes
JXC73/83/93

JXC - C1

Cable length: 1.5 m (Accessory)

| | |
|-----------------|-------|
| Number of cores | 2 |
| AWG size | AWG20 |

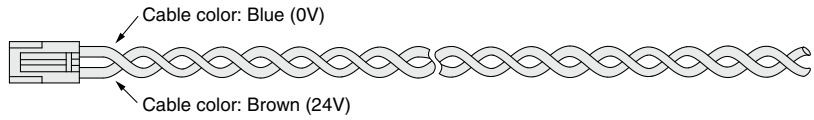

I/O cable (1 pc.)

JXC - C2 -

For 4 Axes
JXC73/83


Cable length (L) [m]

| | |
|---|-----|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |

| | |
|-----------------|-------|
| Number of cores | 40 |
| AWG size | AWG28 |

Weight

| Product no. | Weight [g] |
|-------------|------------|
| JXC-C2-1 | 160 |
| JXC-C2-3 | 300 |
| JXC-C2-5 | 480 |

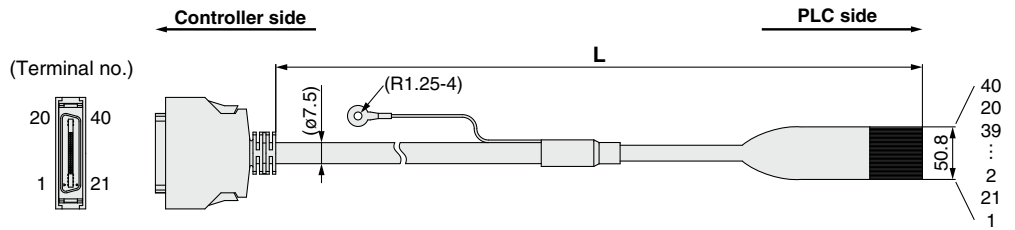

| Pin no. | Wire color | Pin no. | Wire color | Pin no. | Wire color | Pin no. | Wire color |
|---------|------------------|---------|------------------|---------|------------------|---------|------------------|
| 1 | Orange (Black 1) | 6 | Orange (Black 2) | 11 | Orange (Black 3) | 16 | Orange (Black 4) |
| 21 | Orange (Red 1) | 26 | Orange (Red 2) | 31 | Orange (Red 3) | 36 | Orange (Red 4) |
| 2 | Gray (Black 1) | 7 | Gray (Black 2) | 12 | Gray (Black 3) | 17 | Gray (Black 4) |
| 22 | Gray (Red 1) | 27 | Gray (Red 2) | 32 | Gray (Red 3) | 37 | Gray (Red 4) |
| 3 | White (Black 1) | 8 | White (Black 2) | 13 | White (Black 3) | 18 | White (Black 4) |
| 23 | White (Red 1) | 28 | White (Red 2) | 33 | White (Red 3) | 38 | White (Red 4) |
| 4 | Yellow (Black 1) | 9 | Yellow (Black 2) | 14 | Yellow (Black 3) | 19 | Yellow (Black 4) |
| 24 | Yellow (Red 1) | 29 | Yellow (Red 2) | 34 | Yellow (Red 3) | 39 | Yellow (Red 4) |
| 5 | Pink (Black 1) | 10 | Pink (Black 2) | 15 | Pink (Black 3) | 20 | Pink (Black 4) |
| 25 | Pink (Red 1) | 30 | Pink (Red 2) | 35 | Pink (Red 3) | 40 | Pink (Red 4) |


DIN rail

AXT100 - DR -

For 3 Axes
JXC92

For 4 Axes
JXC73/83/93

* For , enter a number from the No. line in the table below. Refer to the dimension drawings on pages 748 and 751 for the mounting dimensions.

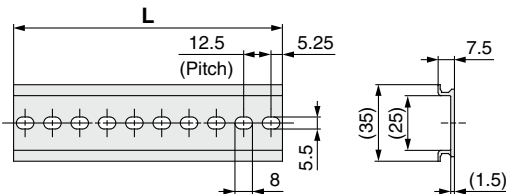

L Dimensions

| No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
|-----|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|
| L | 23 | 35.5 | 48 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 |
| No. | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| L | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 |

DIN rail mounting bracket (with 6 mounting screws)

For 3 Axes
JXC92

For 4 Axes
JXC73/83/93

JXC - Z1

This should be used when the DIN rail mounting bracket is mounted onto a screw mounting type controller afterward.

LEFS
LEJB
LEJ
LEM
LEY
LESH
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3

JXC73/83/92/93 Series

Options


Controller setting kit

For 4 Axes
JXC73/83/93

JXC-W1

- Controller setting kit (Japanese and English are available.)

① Controller setting software

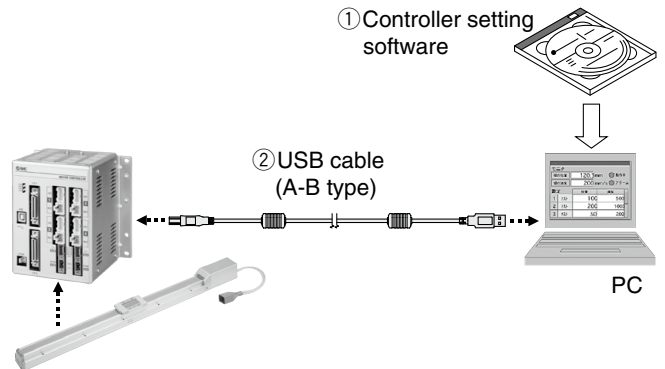

Contents

- ① Controller setting software (CD-ROM)
- ② USB cable (Cable length: 3 m)

| Description | Model |
|-------------------------------|---|
| ① Controller setting software | JXC-W1-1 |
| ② USB cable | JXC-W1-2 (The same cable as the JXC-MA1-2) |

* Can be ordered separately

Hardware Requirements

PC/AT compatible machine with Windows 7 or Windows 8.1 and USB1.1 or USB2.0 port

* Windows® is a registered trademark of Microsoft Corporation in the United States.


Controller setting kit

For 3 Axes
JXC92

JXC-MA1*1

- Controller setting kit (Japanese and English are available.)

① Controller setting software*1

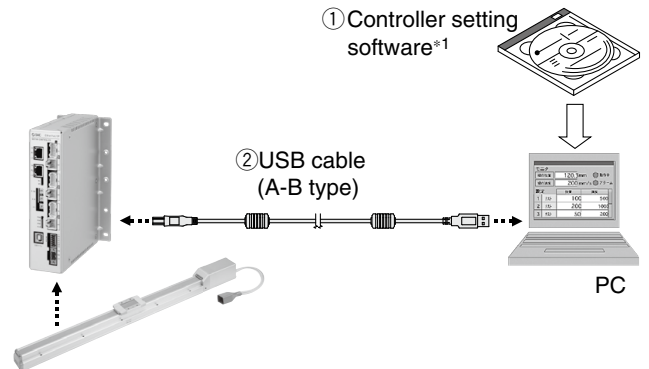

Contents

- ① Controller setting software (CD-ROM)*1
- ② USB cable (Cable length: 3 m)

| Description | Model |
|-------------------------------|---|
| ① Controller setting software | JXC-MA1-1 |
| ② USB cable | JXC-MA1-2 (The same cable as the JXC-W1-2) |

* Can be ordered separately

Hardware Requirements

PC/AT compatible machine with Windows 7 or Windows 8.1 and USB1.1 or USB2.0 port

*1 The controller setting software also includes software dedicated for 4 axes.

* Windows® is a registered trademark of Microsoft Corporation in the United States.

Compatible controllers

JXC LECP1
LECP2 LECPA

Actuator Cable 1

[Robotic cable, standard cable for step motor (Servo/24 VDC)]

LE-CP-1-□

Cable length (L) [m]

| | |
|---|------|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |
| 8 | 8*1 |
| A | 10*1 |
| B | 15*1 |
| C | 20*1 |

*1 Produced upon receipt of order (Robotic cable only)


Cable type

| | |
|-----|--------------------------------|
| Nil | Robotic cable (Flexible cable) |
| S | Standard cable |



Weight

| Product no. | Weight [g] | Note |
|-------------|------------|----------------|
| LE-CP-1-S | 190 | Standard cable |
| LE-CP-3-S | 280 | |
| LE-CP-5-S | 460 | |
| LE-CP-1 | 140 | Robotic cable |
| LE-CP-3 | 260 | |
| LE-CP-5 | 420 | |
| LE-CP-8 | 790 | |
| LE-CP-A | 980 | |
| LE-CP-B | 1460 | |
| LE-CP-C | 1940 | |

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

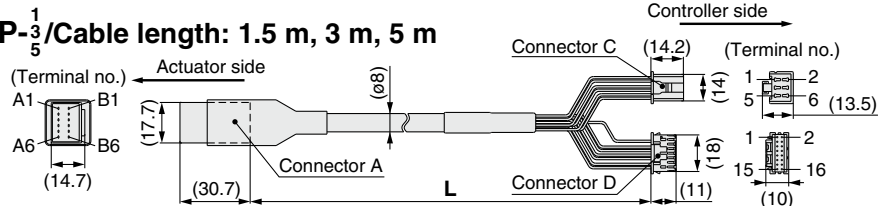

LE-CP-^{8 B}/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m
(*1 Produced upon receipt of order)

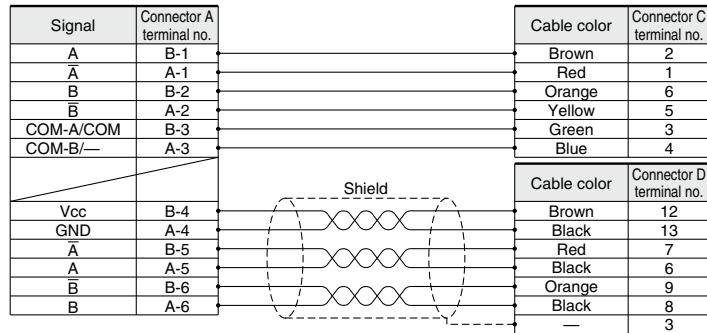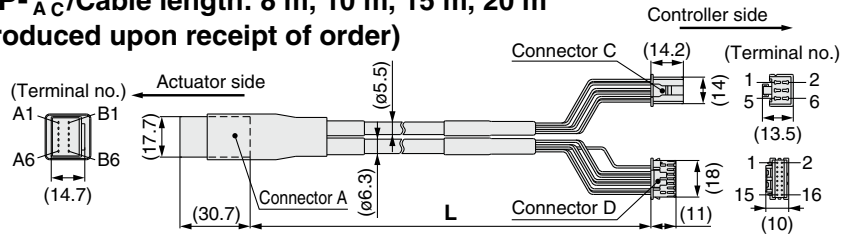

[Robotic cable, standard cable with lock and sensor for step motor (Servo/24 VDC)]

LE-CP-1-B-□

Cable length (L) [m]

| | |
|---|------|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |
| 8 | 8*1 |
| A | 10*1 |
| B | 15*1 |
| C | 20*1 |

*1 Produced upon receipt of order (Robotic cable only)

With lock and sensor


Cable type

| | |
|-----|--------------------------------|
| Nil | Robotic cable (Flexible cable) |
| S | Standard cable |



Weight

| Product no. | Weight [g] | Note |
|-------------|------------|----------------|
| LE-CP-1-B-S | 240 | Standard cable |
| LE-CP-3-B-S | 380 | |
| LE-CP-5-B-S | 630 | |
| LE-CP-1-B | 190 | Robotic cable |
| LE-CP-3-B | 360 | |
| LE-CP-5-B | 590 | |
| LE-CP-8-B | 1060 | |
| LE-CP-A-B | 1320 | |
| LE-CP-B-B | 1920 | |
| LE-CP-C-B | 2620 | |

LE-CP-¹/₅/Cable length: 1.5 m, 3 m, 5 m

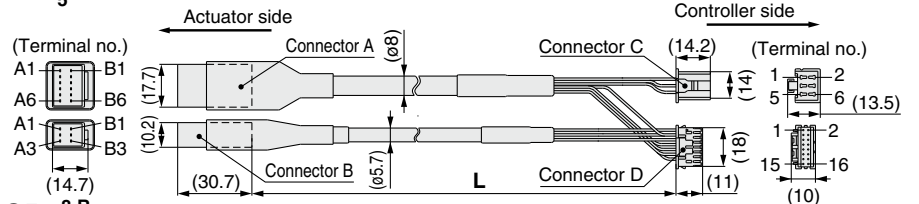

LE-CP-^{8 B}/_{AC}/Cable length: 8 m, 10 m, 15 m, 20 m
(*1 Produced upon receipt of order)

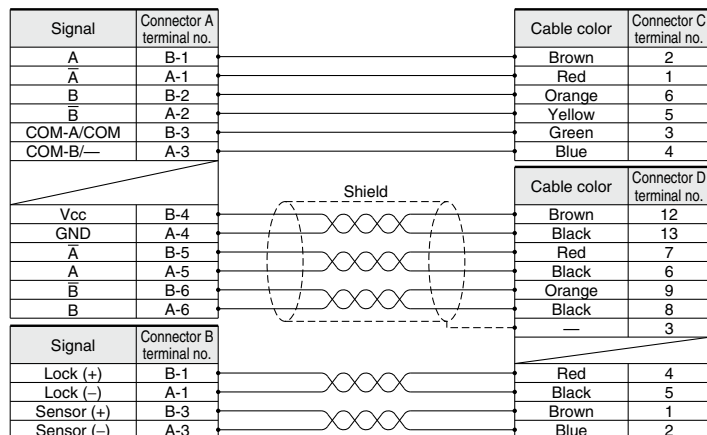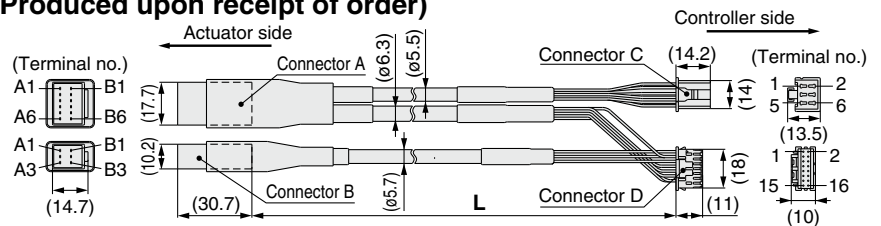

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-T
LECY
Motorless
LAT3

Compatible controller

LECA6

Actuator Cable 2

[Robotic cable for servo motor (24 VDC)]

LE-CA-1

Cable length (L) [m]



| | |
|---|------|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |
| 8 | 8*1 |
| A | 10*1 |
| B | 15*1 |
| C | 20*1 |

*1 Produced upon receipt of order

Weight

| Product no. | Weight [g] |
|-------------|------------|
| LE-CA-1 | 220 |
| LE-CA-3 | 420 |
| LE-CA-5 | 700 |
| LE-CA-8 | 1100 |
| LE-CA-A | 1370 |
| LE-CA-B | 2050 |
| LE-CA-C | 2720 |

LE-CA-□

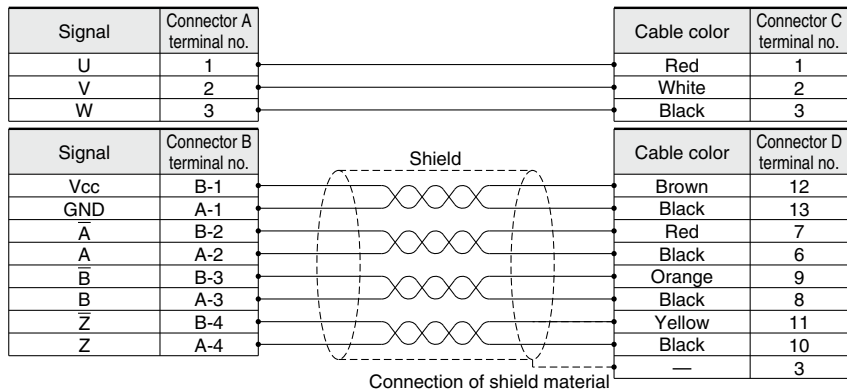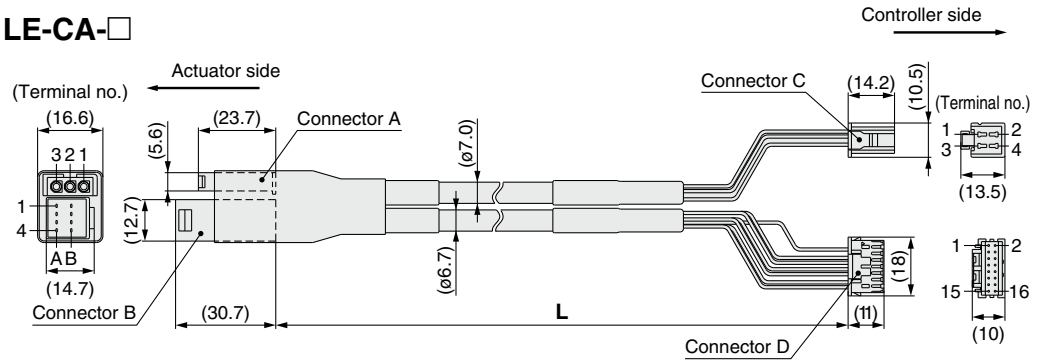

[Robotic cable with lock and sensor for servo motor (24 VDC)]

LE-CA-1-B



Cable length (L) [m]

| | |
|---|------|
| 1 | 1.5 |
| 3 | 3 |
| 5 | 5 |
| 8 | 8*1 |
| A | 10*1 |
| B | 15*1 |
| C | 20*1 |

*1 Produced upon receipt of order

With lock and sensor

LE-CA-□-B

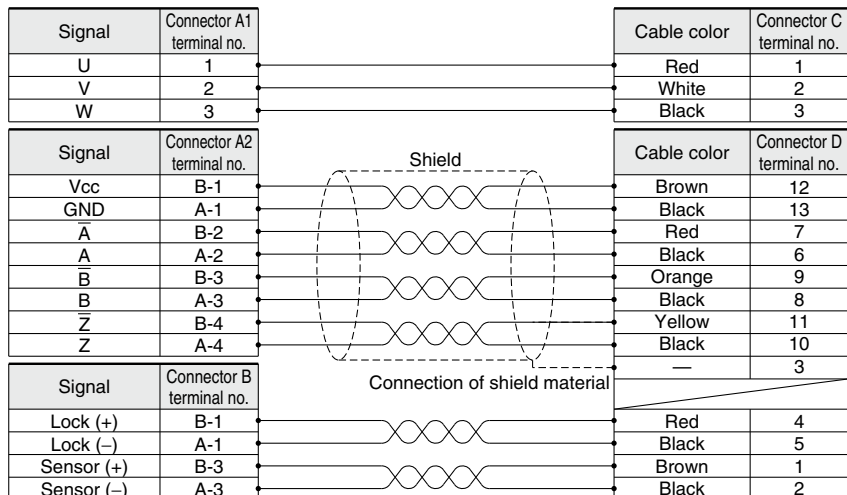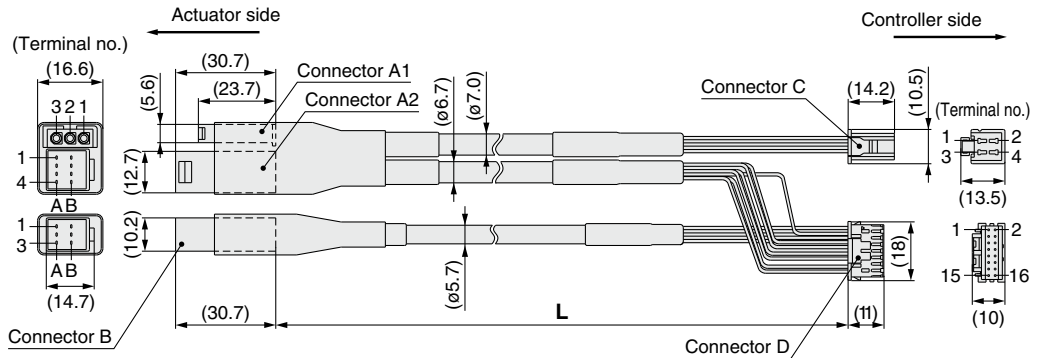

Compatible controllers


JXC□1 LECA6

LECPA

LEC-W2A-□

Communication Cable for Controller Setting

How to Order

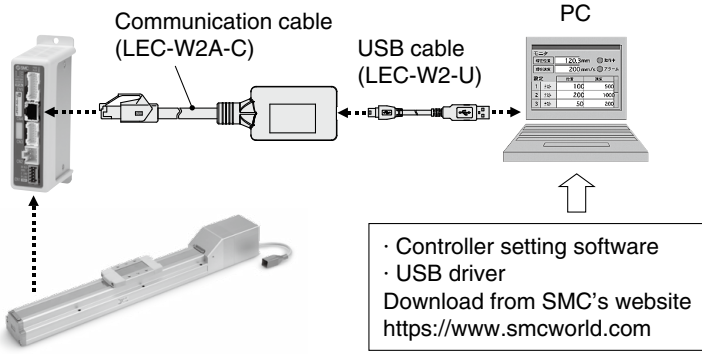

LEC-W2A-C

Communication cable

LEC-W2-U

USB cable

Compatible Controller/Driver

| | |
|-----------------------|--------------------------|
| Step data input type | LECA6 Series |
| Pulse input type | LECPA Series |
| Step Motor Controller | JXCE1/91/P1/D1/L1 Series |

* When connecting to a JXCE1/91/P1/D1/L1 series product, use a conversion cable (P5062-5) as a relay. Refer to page 745 for details on the communication cable for controller setting (JXC-W2A-C) which doesn't require a conversion cable.


Hardware Requirements

| | |
|-------------------------|------------------------------------|
| OS | Windows®7, Windows®8.1, Windows®10 |
| Communication interface | USB 1.1 or USB 2.0 ports |
| Display | 1024 x 768 or more |

* Windows®7, Windows®8.1 and Windows®10 are registered trademarks of Microsoft Corporation in the United States.

Screen Example


Easy mode screen example

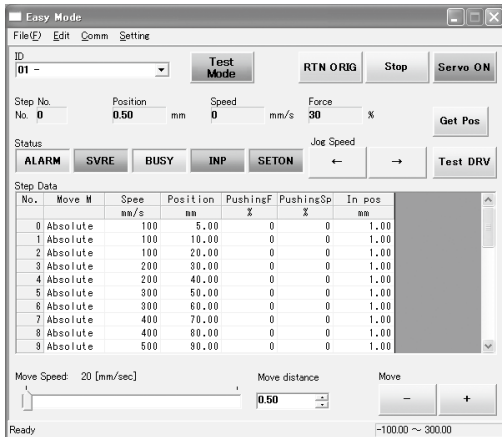

Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and test drive can be performed on the same page.
- Can be used to jog and move at a constant rate

Normal mode screen example

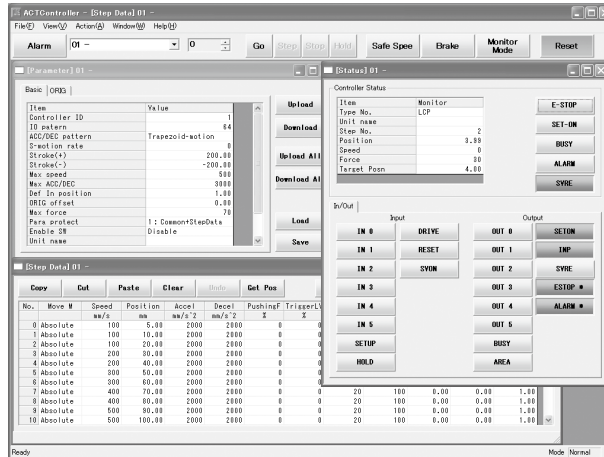

Detailed setting

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test drive and testing of forced output can be performed.

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LEH
LEY-X5
11-LEFS
11-LEJS
25A-
LEC
JXC
LECS
LECS-LT
LECY
Motorless
LAT3

Compatible controllers

JXC□1 LECA6

LECPA

LEC-T1 Teaching Box



RoHS



How to Order

LEC-T1-3 J G □

Teaching box

Cable length [m]
3 3

Initial language
J Japanese
E English

Enable switch

| | |
|-----|-----------------------------|
| Nil | None |
| S | Equipped with enable switch |

* Interlock switch for jog and test function

Stop switch
G Equipped with stop switch

* The displayed language can be changed to English or Japanese.

Specifications

| Item | Description |
|----------------------------------|-------------------------------------|
| Switch | Stop switch, Enable switch (Option) |
| Cable length [m] | 3 |
| Enclosure | IP64 (Except connector) |
| Operating temperature range [°C] | 5 to 50 |
| Operating humidity range [%RH] | 90 or less (No condensation) |
| Weight [g] | 350 (Except cable) |

[UL-compliant products]

When compliance with UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Standard functions

- Chinese character display
- Stop switch is provided.


Option

- Enable switch is provided.

Easy Mode

| Function | Details |
|------------|--|
| Step data | • Setting of step data |
| Jog | • Jog operation • Return to origin |
| Test | • 1 step operation • Return to origin |
| Monitor | • Display of axis and step data no. • Display of two items selected from Position, Speed, Force. |
| ALM | • Active alarm display • Alarm reset |
| TB setting | • Reconnection of axis (Ver. 1.**) • Displayed language setting (Ver. 2.**) • Setting of easy/normal mode • Setting step data and selection of items from easy mode monitor |


Menu Operations Flowchart

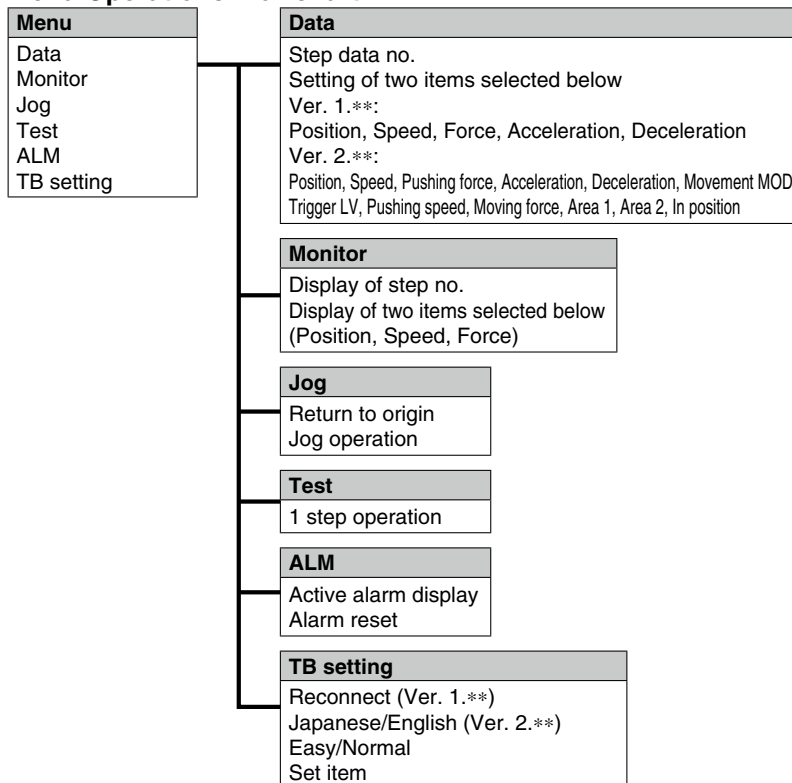


Normal Mode

| Function | Details |
|------------|--|
| Step data | • Step data setting |
| Parameter | • Parameters setting |
| Test | <ul style="list-style-type: none"> • Jog operation/Constant rate movement • Return to origin • Test drive (Specify a maximum of 5 step data and operate.) • Forced output (Forced signal output, Forced terminal output) |
| Monitor | <ul style="list-style-type: none"> • Drive monitor • Output signal monitor • Input signal monitor • Output terminal monitor • Input terminal monitor |
| ALM | <ul style="list-style-type: none"> • Active alarm display (Alarm reset) • Alarm log record display |
| File | <ul style="list-style-type: none"> • Data saving Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file). • Load to controller Loads the data which is saved in the teaching box to the controller which is being used for communication. • Delete the saved data. • File protection (Ver. 2.**) |
| TB setting | <ul style="list-style-type: none"> • Display setting (Easy/Normal mode) • Language setting (Japanese/English) • Backlight setting • LCD contrast setting • Beep sound setting • Max. connection axis • Distance unit (mm/inch) |
| Reconnect | • Reconnection of axis |

Menu Operations Flowchart

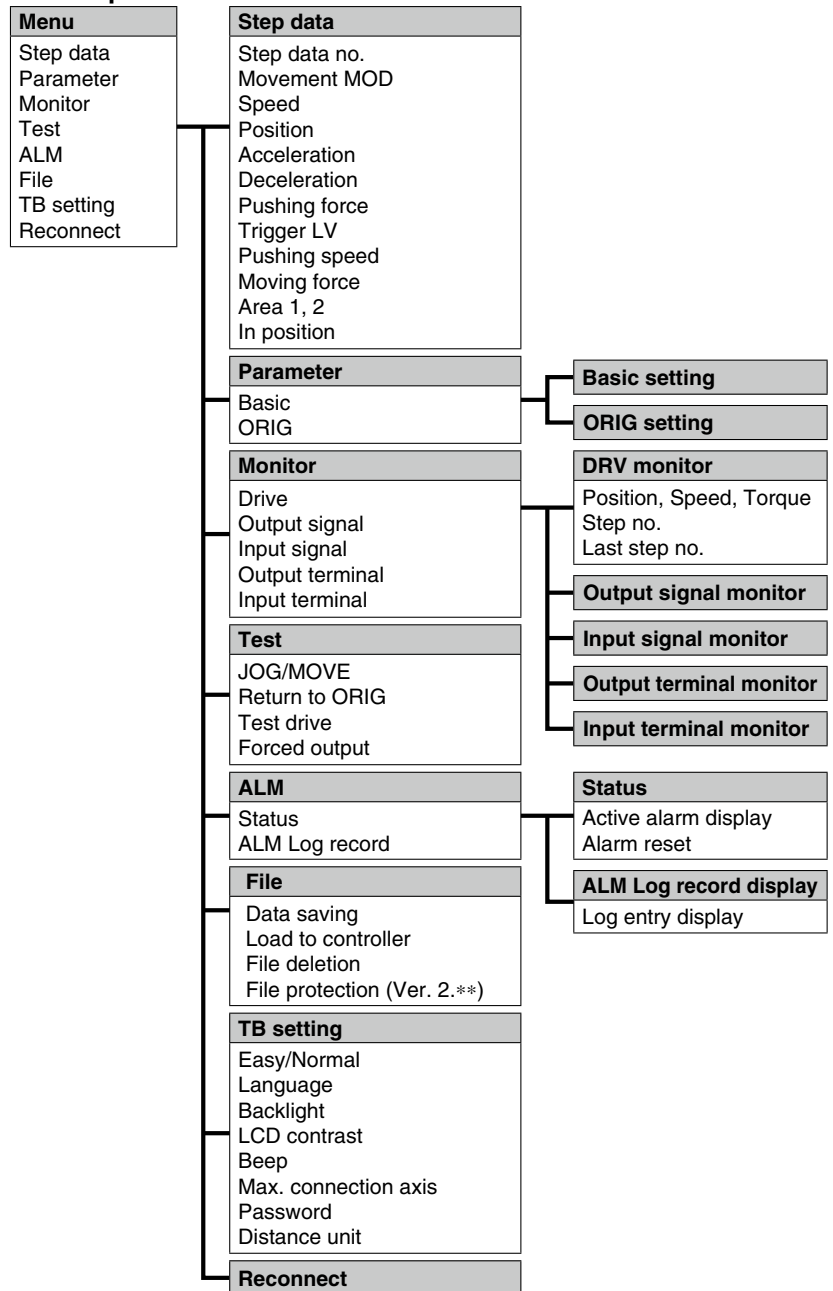

Dimensions

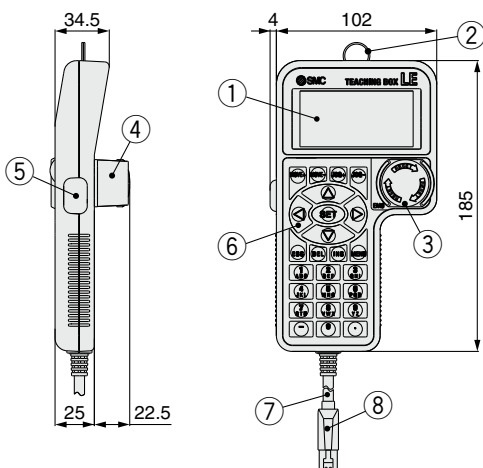

| No. | Description | Function |
|-----|-------------------------------|--|
| 1 | LCD | A screen of liquid crystal display (with backlight) |
| 2 | Ring | A ring for hanging the teaching box |
| 3 | Stop switch | When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right. |
| 4 | Stop switch guard | A guard for the stop switch |
| 5 | Enable switch (Option) | Prevents unintentional operation (unexpected operation) of the jog test function. Other functions such as data change are not covered. |
| 6 | Key switch | Switch for each input |
| 7 | Cable | Length: 3 meters |
| 8 | Connector | A connector connected to CN4 of the controller |

LEFS
LEFB
LEJS
LEJB
LEL
LEM
LEM
LEY
LEYG
LES
LESH
LEPY
LEPS
LER
LER
LEH
LEH
LEY-X5
LEY-X5
11-LEFS
11-LEFS
11-LEJS
11-LEJS
25A-
LEC
LEC
JXC
JXC
LECS
LECS-T
LECY
LECY
Motorless
LAT3
LAT3